



User Guide

AWS Elemental MediaConnect



AWS Elemental MediaConnect: User Guide

Copyright © 2026 Amazon Web Services, Inc. and/or its affiliates. All rights reserved.

Amazon's trademarks and trade dress may not be used in connection with any product or service that is not Amazon's, in any manner that is likely to cause confusion among customers, or in any manner that disparages or discredits Amazon. All other trademarks not owned by Amazon are the property of their respective owners, who may or may not be affiliated with, connected to, or sponsored by Amazon.

Table of Contents

What is MediaConnect?	1
Concepts and terminology	2
Accessing MediaConnect	4
Pricing	5
Regions and endpoints	6
Feature availability by AWS Region	7
Open-source attributions	8
Use cases	9
Distribution	9
Distributing content across Regions	11
Distributing content to MediaLive	12
Distributing content from a MediaLive multiplex	17
Entitlements	17
Contribution for transport stream flows	18
Contribution for CDI flows	20
CDI replication and monitoring	21
Receiving SRT content from MediaLive	22
Planning	23
Tasks	24
Troubleshooting	27
Setting up	29
Create non-admin roles	29
Step 1: Create a non-admin policy	29
Step 2: Create non-admin roles	32
Step 3: Assume the role	34
(Optional) Set up encryption	34
Getting started	35
Getting started with flows	35
Prerequisites	36
Step 1: Access AWS Elemental MediaConnect	36
Step 2: Create a flow	36
Step 3: Add an output	37
Step 4: Grant an entitlement	38
Step 5: Share details with your affiliates	38

Step 6: Clean up	39
Next steps	39
Getting started with the router	39
Prerequisites	40
Step 1: Access AWS Elemental MediaConnect	40
Step 2: Create a router network interface	41
Step 3: Create router inputs	41
Step 4: Create router outputs	44
Step 5: Assign routes	46
Step 6: Switch sources dynamically	47
Step 7: Clean up	48
Next steps	49
Related resources	49
Using the router	50
Key points	50
Concepts and terminology	50
How the router works	52
Router setup	52
Internal routing	53
Router capabilities and management	54
Considerations	55
Next steps	58
Managing network interfaces	59
Creating network interfaces	60
Viewing network interfaces	63
Updating network interfaces	65
Deleting network interfaces	67
Managing router I/Os	69
Creating router I/Os	70
Viewing router I/Os	88
Updating router I/Os	92
Starting router I/Os	94
Stopping router I/Os	96
Restarting router I/Os	98
Deleting router I/Os	100
Understanding I/O states	102

Integrating flows	105
Integrating MediaLive	109
Source failover	115
Managing routes	117
Control panel view	119
Matrix view	123
Using flows	126
Key points	126
Concepts and terminology	126
How flows work	128
Flows setup	128
Flows capabilities and management	128
Considerations	129
Next steps	130
Managing flows	130
Creating a flow	132
Viewing a list of flows	176
Viewing the details of a flow	177
Starting a flow	179
Stopping a flow	180
Updating a flow	181
Managing tags on a flow	183
Deleting a flow	185
Flow sizes and capabilities	187
Managing sources	190
NDI sources	190
Adding a second source to a flow	194
Updating a source	208
Source failover	210
Managing tags on a source	212
Removing a source from a flow	214
Source ports	215
Determining a source's peer IP address	217
Managing outputs	219
NDI outputs	220
Adding outputs	226

Viewing outputs	245
Updating outputs	247
Managing tags on an output	248
Disabling or removing outputs	250
Output destinations	252
Determining an output's IP address	255
Managing entitlements	257
Sharing content with other AWS accounts	258
Subscribing to content provided by another AWS account	270
VPC interfaces	272
Adding a VPC interface	273
Removing a VPC interface	274
Security group considerations	275
Protocols	276
Transport stream flows	277
CDI flows	278
Protocol support for sources and outputs	278
Color support for CDI protocols	279
Media streams	280
Adding a media stream to a flow	281
Updating a media stream	283
Removing a media stream	283
Best practices	284
Performance	284
Availability	286
Reliability	287
Security	287
Using gateways	288
Key points	289
Gateway components	289
MediaConnect Gateway terminology	290
Next steps	291
Additional resources	291
Supported OS and architectures	291
General information	291
Supported system architectures	292


Supported operating systems	293
Networks	293
Key points	293
Next steps	294
Gateways	294
Setting up a gateway	294
Removing a gateway	297
Instances	301
Registering an instance	301
Deregistering an instance	302
Bridges	305
Key points	306
Next steps	307
Creating a bridge	307
Reservations	318
How billing works	318
Viewing reservations	318
Offerings	319
Viewing offerings	319
Purchasing an offering	319
Security	321
Data protection	322
Static key encryption	323
SPEKE encryption	328
SRT password encryption	333
Internetwork traffic privacy	338
Identity and access management	339
Audience	339
Authenticating with identities	339
Managing access using policies	340
Learn more	342
How MediaConnect works with IAM	342
Identity-based policy examples	346
Resource-based policy examples	350
Policy examples for secrets in AWS Secrets Manager	354
AWS managed policies	357

Using service-linked roles	365
Setting up MediaConnect as a trusted service	369
Cross-service confused deputy prevention	372
Troubleshooting	373
Logging and monitoring	374
Amazon CloudWatch alarms	374
AWS CloudTrail logs	375
AWS Trusted Advisor	375
Compliance validation	375
Resilience	376
Infrastructure security	376
Interface VPC endpoints (AWS PrivateLink)	376
Monitoring and tagging	379
Monitoring with the MediaConnect console	379
Monitoring with content quality analysis	380
Monitoring with thumbnails	395
Monitoring using source metadata	401
Monitoring flow and source health	413
Monitoring with CloudWatch metrics	416
Definition of a metric	417
Viewing metrics	418
Metrics to monitor flow health	420
Metrics to monitor flow source health	436
Metrics to monitor flow output health	460
Metrics to monitor router input health	469
Metrics to monitor router output health	509
Metrics to monitor gateway health	517
Using metrics to troubleshoot	547
Monitoring with EventBridge events	551
Flow events	552
Router input events	562
Router output events	570
Logging API calls with AWS CloudTrail	575
AWS Elemental MediaConnect information in CloudTrail	575
Understanding AWS Elemental MediaConnect log file entries	576
Tagging resources	577

Supported resources	578
Tag naming and usage conventions	579
Managing tags	579
Workflow monitor	580
Components of workflow monitor	581
Supported services	582
Configuring workflow monitor	582
Using workflow monitor	602
Maintenance	605
How maintenance works	606
Viewing router I/O maintenance status	607
Setting router I/O maintenance windows	608
Viewing flow maintenance status	611
Setting flow maintenance windows	612
Manually restarting resources for maintenance	614
Quotas	616
Feature-specific output limitations	618
Limits for API requests	618
Reference: Supported media standards	620
VSF: technical recommendations	620
SMPTE-2022	623
Document history	624

What is AWS Elemental MediaConnect?

AWS Elemental MediaConnect is a high-quality, reliable live video transport and routing service that you can use to ingest, distribute, and route live video within and beyond the AWS Cloud. MediaConnect combines the reliability, security, and visibility of traditional broadcast infrastructure with the flexibility, scalability, and cost-effectiveness of cloud-based transmission.

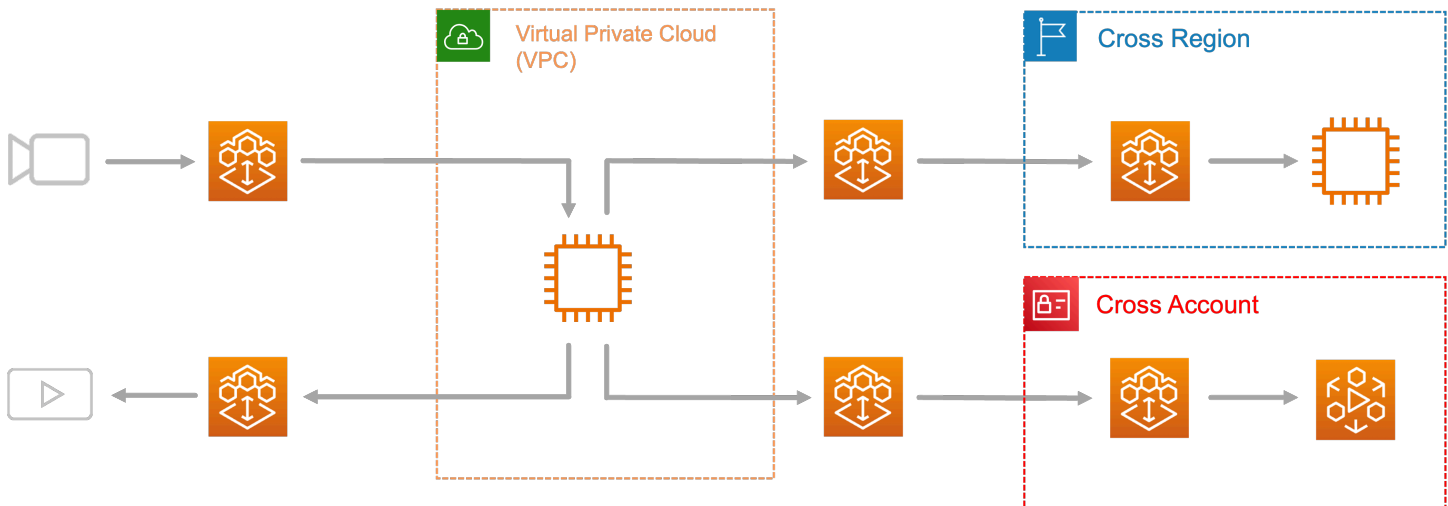

In AWS Elemental MediaConnect, you can work with live video in two ways: you can create a *flow* to establish a transport between a source and one or more outputs, or you can create *router inputs and outputs* to dynamically route video between sources and destinations in real time. You can also share content with other AWS accounts by creating *entitlements*. This allows the receiving account to create a flow using your content as the source.

With AWS Elemental MediaConnect, you can do the following:

- Ingest live video into the AWS Cloud from on-premises encoders or remote sources.
- Distribute live video to multiple destinations inside or outside the AWS Cloud.
- Dynamically route live video streams between cloud production tools, encoders, and third-party services by using the MediaConnect router.
- Transport uncompressed video at ultra-low latency by using AWS Cloud Digital Interface (AWS CDI).
- Receive and distribute video from NDI®-enabled devices and software by using Network Device Interface (NDI).
- Subscribe to a live video stream that is supplied by another AWS account.
- Send content from one AWS Region to another.

- Normalize diverse contribution protocols and formats for downstream cloud production services.

Topics

- [MediaConnect concepts and terminology](#)
- [Accessing MediaConnect](#)
- [Pricing for MediaConnect](#)
- [Regions and endpoints for MediaConnect](#)
- [AWS Elemental MediaConnect open-source attributions](#)

MediaConnect concepts and terminology

To help you get started with AWS Elemental MediaConnect, and to understand how it works, refer to the following key concepts and terminology.

Allowlist CIDR

A range of Classless Inter-Domain Routing (CIDR) IP addresses permitted to contribute content to your MediaConnect flow or router input. In the MediaConnect API, this value is specified using the `WhitelistCidr` parameter.

Contribution encoder

An encoder that receives a live video feed and encodes the stream into a single, high-quality mezzanine stream for transportation or further processing into an adaptive bitrate (ABR) stream.

Destination

A physical or virtual connection point in your downstream environment that receives content from MediaConnect. A destination might be an affiliate, a cloud encoder, an on-premises decoder, another MediaConnect flow, a MediaConnect router input, or a MediaLive input. In flows, you define destinations by adding outputs. In the router, you create router outputs that connect to your destination endpoints.

Entitlement

A permission that allows an AWS account (the subscriber) to access the content in a specific MediaConnect flow. The content originator grants an entitlement to the subscriber account, which can then create a flow using the originator's content as the source.

Flow

A connection between one or more video sources and one or more outputs. For each flow, you specify the protocol to use, encryption information, and details about the source. The service replicates and distributes the video to every output that you specify, whether inside or outside the AWS Cloud.

Input

A connection point in MediaConnect that receives content from a source. In flows, the flow's source configuration acts as the input. In the router, a router input is a dedicated resource that receives content and can be routed to multiple outputs simultaneously.

Media stream

A single track of video, audio, or ancillary data. Media streams are used with CDI and ST 2110 JPEG XS flows, where content is demuxed into separate tracks. Each source or output can consist of one or many media streams.

Mezzanine stream

A lightly compressed video stream that takes up less space than a full resolution uncompressed stream. The quality is high enough to use as a source for creating final encodes delivered to consumer devices.

NDI (Network Device Interface)

A standard developed by NewTek (now Vizrt) that enables video-compatible products to communicate, deliver, and receive high-definition video over a standard Ethernet network. NDI allows multiple video systems to share video across a network in real time with low latency. MediaConnect supports NDI as both a source and output type for flows, enabling integration with NDI-based production environments.

Network interface

The network configuration that determines how MediaConnect resources connect to other resources. In flows, a VPC interface provides private connectivity between a flow and your Amazon VPC. Flows use public networking by default. In the router, a network interface can be either public (for connecting over the internet) or VPC (for connecting to resources within your VPC), and is associated with one or more router I/Os.

Offering

A discount that MediaConnect offers in exchange for a commitment to use a certain amount of outbound bandwidth each month. When you purchase an offering, it becomes a reservation.

Output

A connection point in MediaConnect that sends content to a destination. In flows, an output defines where and how the service delivers video. In the router, a router output is a dedicated resource that sends content and can receive from only one input at a time.

Protocol

A set of rules used for video and audio transmission. MediaConnect provides protocol options (such as SRT, RTP, RTP-FEC, RIST, Zixi, and NDI) that implement a quality of service (QoS) layer for mezzanine-quality live video. Supported protocols differ between flows and the router.

Reservation

A commitment to use a specific amount of outbound bandwidth each month over a specified duration. In return, you pay a discounted hourly rate. Reservations are created by purchasing an offering.

Route

The complete end-to-end path from an input to an output within the router. Routes are defined by input-to-output assignments.

Router

A MediaConnect capability that provides dynamic, software-defined signal routing for live video in the cloud. A router can accept multiple inputs simultaneously and route any input to any output on demand. Routers are designed for use cases such as master control, live cloud production, playout, and contribution workflows.

Source

A physical or virtual connection point in your upstream environment that transmits content into MediaConnect. A source might be an on-premises contribution encoder, an NDI device, another MediaConnect flow, or a MediaLive channel output. In flows, you configure sources when you create or update a flow. A standard source comes from outside of MediaConnect, while an entitled source comes from a flow owned by another AWS account that has granted an entitlement to your account. In the router, you connect sources to router inputs.

Accessing MediaConnect

You can access AWS Elemental MediaConnect using any of the following methods:

- **AWS Management Console** – The procedures throughout this guide explain how to use the AWS Management Console to perform tasks for MediaConnect. To access MediaConnect using the console:

```
https://<region>.console.aws.amazon.com/mediaconnect/home
```

- **AWS Command Line Interface** – For more information, see the [AWS Command Line Interface User Guide](#). To access MediaConnect using the CLI endpoint:

```
aws mediaconnect
```

- **AWS Elemental MediaConnect API** – For information about API actions and about how to make API requests, see the [AWS Elemental MediaConnect API Reference](#). To access MediaConnect using the REST API endpoint:

```
https://mediaconnect.<region>.amazonaws.com
```

- **AWS SDKs** – If you're using a programming language that AWS provides an SDK for, you can use an SDK to access AWS Elemental MediaConnect. SDKs simplify authentication, integrate easily with your development environment, and provide easy access to MediaConnect commands. For more information, see [Tools for Amazon Web Services](#).
- **AWS Tools for Windows PowerShell** – For more information, see the [AWS Tools for PowerShell User Guide](#).

Pricing for MediaConnect

As with other AWS products, there are no contracts or minimum commitments for using MediaConnect. Pricing varies by resource type.

MediaConnect router

You are charged an hourly rate for each active input and output, based on maximum bitrate capacity. Base rates include uptime and same-Region transfers. Outputs that receive content from a different Region or that egress to the internet incur additional hourly charges. You are not charged for inputs and outputs that are stopped or idle.

Transport stream flows

You are charged an hourly rate for each running flow, plus per-GB data transfer charges or reserved outbound bandwidth pricing for internet delivery. Standby flows don't incur active resource costs. Reserved outbound bandwidth requires a 12-month commitment.

NDI® flows

You are charged an hourly rate for each running flow. NDI outputs are included with no data transfer charges within a VPC. If you add transport stream outputs, transport stream output data transfer charges apply.

AWS CDI and JPEG XS flows

You are charged an hourly rate for each running flow, plus an hourly rate per output. Rates depend on the maximum video size that you define when you create the flow. Reserved outbound bandwidth is not available for these flow types.

AWS Elemental MediaConnect Gateway

The gateway software is available at no cost. You supply your own hardware and use Amazon Elastic Container Service Anywhere to run a container in on-premises infrastructure. Amazon ECS Anywhere pricing and MediaConnect transport stream flow and data transfer charges apply.

For more information, see [AWS Elemental MediaConnect Pricing](#).

Regions and endpoints for MediaConnect

To reduce data latency in your applications, AWS Elemental MediaConnect offers a regional endpoint to make your requests:

```
https://mediaconnect.<region>.amazonaws.com
```

To view the complete list of AWS Regions where MediaConnect is available, see [AWS Elemental MediaConnect endpoints and quotas](#) in the AWS General Reference.

Feature availability by AWS Region

You can use core MediaConnect flow functionality in all AWS Regions where the service operates. However, some features have region-specific availability. The following table shows which MediaConnect features are available in each Region.

Region Name	Region	MediaConnect flows	MediaConnect router	NDI®	AWS CDI	MediaConnect gateway
US East (Ohio)	us-east-2	✓	✓	✓	✓	✓
US East (N. Virginia)	us-east-1	✓	✓	✓	✓	✓
US West (N. California)	us-west-1	✓	✓	✓	✓	✓
US West (Oregon)	us-west-2	✓	✓	✓	✓	✓
Africa (Cape Town)	af-south-1	✓		✓		✓
Asia Pacific (Hong Kong)	ap-east-1	✓		✓		✓
Asia Pacific (Hyderabad)	ap-south-2	✓		✓		
Asia Pacific (Malaysia)	ap-southeast-5	✓		✓		
Asia Pacific (Melbourne)	ap-southeast-4	✓				
Asia Pacific (Mumbai)	ap-south-1	✓	✓	✓		✓
Asia Pacific (Osaka)	ap-northeast-3	✓	✓	✓		✓

Region Name	Region	MediaConnect flows	MediaConnect router	NDI®	AWS CDI	MediaConnect gateway
Asia Pacific (Seoul)	ap-northeast-2	✓	✓	✓		✓
Asia Pacific (Singapore)	ap-southeast-1	✓	✓	✓		✓
Asia Pacific (Sydney)	ap-southeast-2	✓	✓	✓	✓	✓
Asia Pacific (Tokyo)	ap-northeast-1	✓	✓	✓	✓	✓
Canada (Central)	ca-central-1	✓	✓	✓	✓	✓
Europe (Frankfurt)	eu-central-1	✓	✓	✓	✓	✓
Europe (Ireland)	eu-west-1	✓	✓	✓	✓	✓
Europe (London)	eu-west-2	✓	✓	✓	✓	✓
Europe (Paris)	eu-west-3	✓	✓	✓		✓
Europe (Stockholm)	eu-north-1	✓	✓	✓	✓	✓
Middle East (UAE)	me-central-1	✓				
South America (São Paulo)	sa-east-1	✓	✓	✓		✓

AWS Elemental MediaConnect open-source attributions

To view the open-source components used by MediaConnect, download the following file:

- [MediaConnectOpenSourceAttributions.zip](#)

AWS Elemental MediaConnect use cases

This section provides simplified business use cases to help you understand different ways that you can implement AWS Elemental MediaConnect to deliver content to the AWS Cloud and beyond. The use cases in this section are described in general terms, without the mechanics of how you would use the MediaConnect API to achieve the results that you want.

Your MediaConnect implementation is dependent on your use case:

- For **contribution**, use MediaConnect to ingest content from an on-premises encoder into the AWS Cloud. MediaConnect supports MPEG transport streams, AWS Cloud Digital Interface (CDI), SMPTE 2110 part 22 transports and NDI®.
- For **distribution**, use MediaConnect to deliver content to different geographical areas.
- For **entitlements**, use MediaConnect to share your content with other AWS accounts.
- For **replication and monitoring**, use MediaConnect to distribute video to multiple destinations and enable the monitoring of multiple video signals in real time.


Topics

- [MediaConnect use case: distributing content](#)
- [MediaConnect use case: entitlements](#)
- [MediaConnect use case: contribution for transport stream flows](#)
- [MediaConnect use case: contribution for CDI flows](#)
- [MediaConnect use case: replication and monitoring for CDI flows](#)
- [MediaConnect use case: receiving SRT content from MediaLive](#)

MediaConnect use case: distributing content

You can use AWS Elemental MediaConnect to distribute content to different geographical locations. For example, suppose that your source is an on-premises contribution encoder that is located in Portland, Oregon and you want to distribute your content to locations around the world. You set up your initial AWS Elemental MediaConnect flow in the us-west-2 Region, which is the closest physical AWS Region to your encoder. After your content is in the AWS Cloud, you send it to other MediaConnect flows located in Regions that are closer to your receivers.

The following illustration shows an on-premises contribution encoder located in Portland, Oregon that uploads content to AWS Elemental MediaConnect in the AWS Cloud. The flow has three outputs that send content to others flows in different AWS Regions. These secondary flows are closer to the receivers, which are located in various cities around the world.

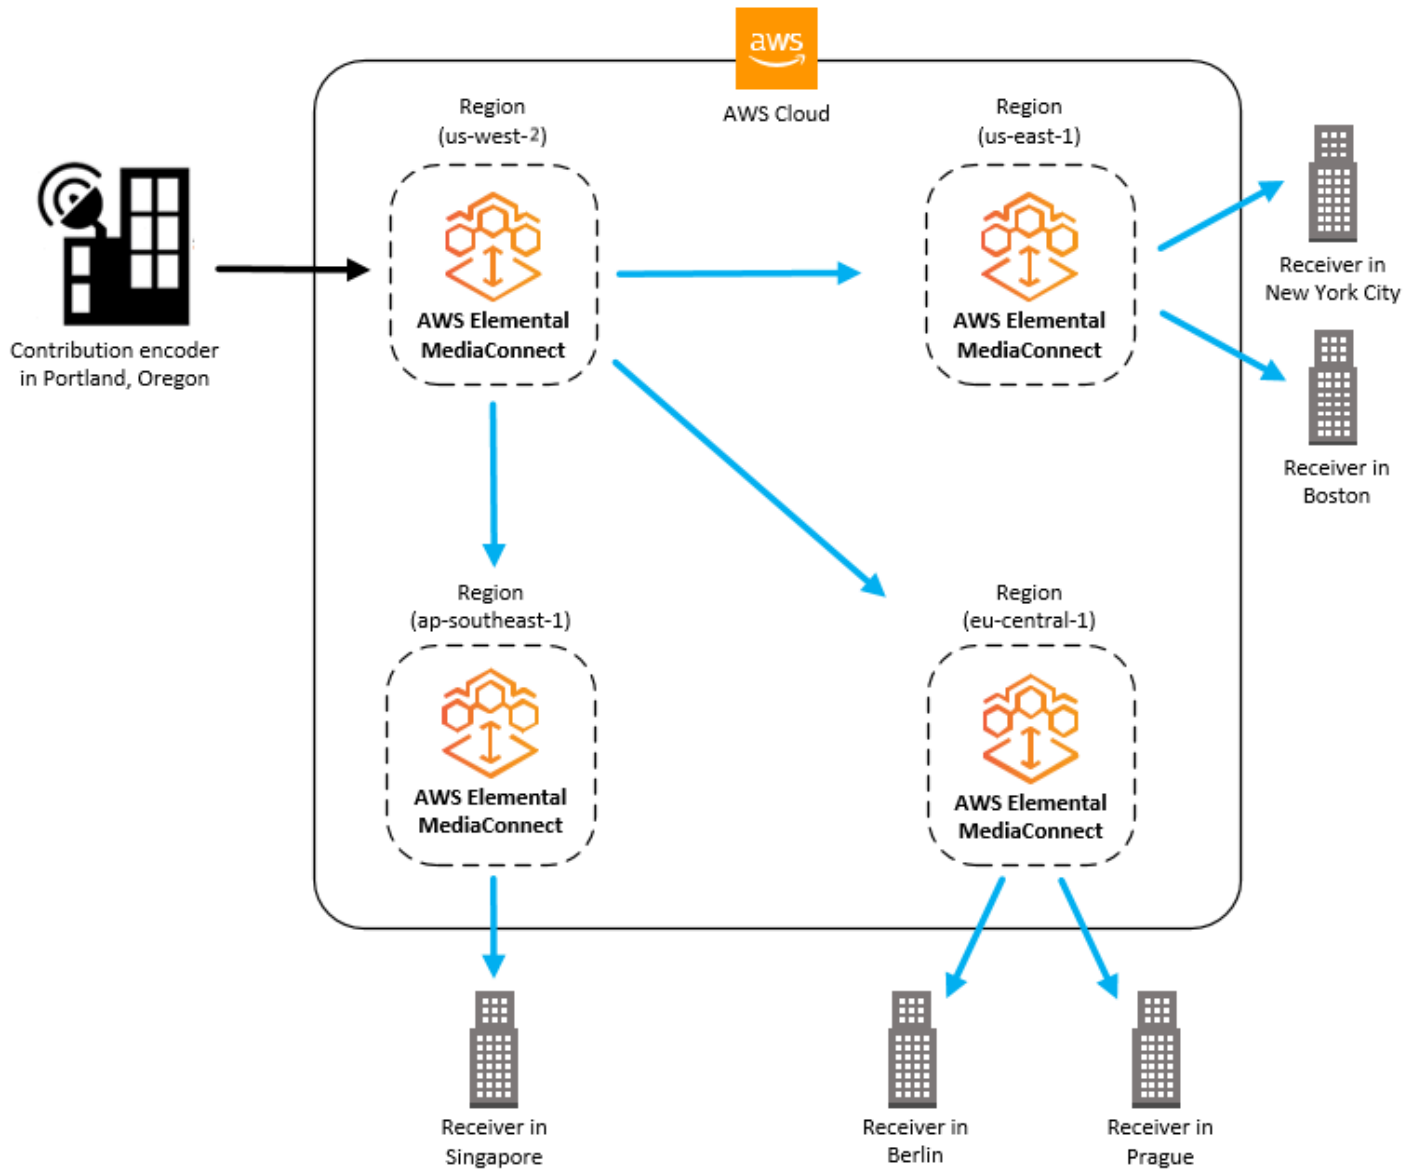


Topics

- [Distributing content across Regions](#)
- [Distributing content from MediaConnect to MediaLive](#)
- [Distributing content from an AWS Elemental MediaLive Multiplex](#)

Distributing content across Regions

You can set up two AWS Elemental MediaConnect flows to distribute content from one AWS Region to another. In this scenario, you create one flow in the Region that is closest to your contribution encoder and a second flow in the Region that is closest to your receiver. The following illustration shows this process.

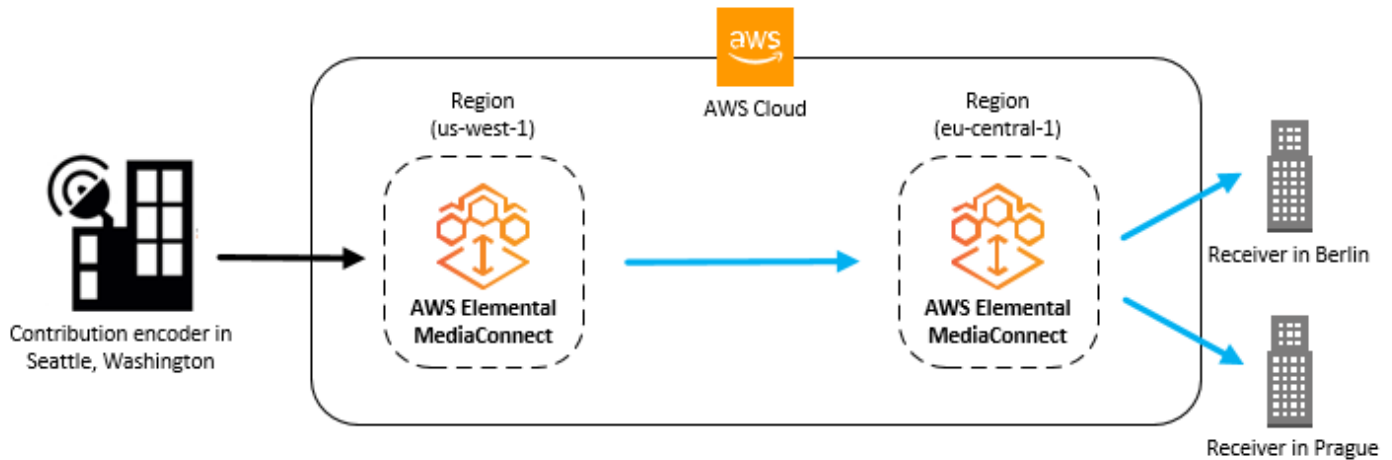

This topic assumes that you already know how to [create a flow](#) and [add outputs to a flow](#).

To distribute content across Regions (console)

1. In the AWS Region that is closest to your source, create a flow. (We'll refer to this as flow A.)
2. Review the **Details** page for flow A to determine its egress IP address.
3. In the AWS Region that is closest to your destination, create a second flow (flow B) with the following details:
 - Source type: Choose **Standard source**.
 - Protocol: Choose **Zixi push**.
 - Inbound port: Selecting Zixi push as the protocol will automatically set this port to **2088**.
 - Allowlist CIDR block: Enter a CIDR value that includes the egress IP of flow A.
4. Review the **Details** page, **Source** tab for flow B to determine its ingest IP address.
5. In flow A, create an output with the following details:
 - Protocol: Choose **Zixi push**.
 - IP address: Enter the ingest IP address of flow B.

- Port: Enter **2088**.

Distributing content from MediaConnect to MediaLive

You can set up a flow in AWS Elemental MediaConnect so that it can distribute content to AWS Elemental MediaLive. With this setup, your MediaConnect flows can serve as upstream inputs for MediaLive channels, enabling MediaLive to process your video streams.

Prerequisites

Before you begin, ensure that:

- You have administrator permissions for MediaConnect
- You can coordinate with someone who has administrator permissions for MediaLive

Note

This page describes the process from the MediaConnect perspective, assuming coordination with someone managing MediaLive. One person can perform both roles if they have the necessary permissions.

Procedure

- [the section called “Step 1: Verify MediaLive permissions”](#)
- [the section called “Step 2: Get the MediaLive channel details”](#)
- [the section called “Step 3. Set up MediaConnect flows”](#)
- [the section called “Step 4: Connect with MediaLive and start your flows”](#)
- [the section called “Step 5: Start the MediaLive channels”](#)

Step 1: Verify MediaLive permissions

To use MediaConnect flows as inputs for MediaLive channels, first ensure MediaLive has the necessary permissions to work with your flows. This is a one-time setup.

To verify permissions

- Check with your MediaLive operator that they've set up the necessary permissions for MediaLive to interact with your MediaConnect flows. They can choose their preferred approach:

- **Simple option (recommended)**

Use the `MediaLiveAccessRole`, which includes all necessary permissions for MediaLive to work with MediaConnect. For instructions, see [Create the trusted entity - simple option](#).

- **Complex option**

Create your own IAM policy and role if you need more specific custom permissions. Alternatively, you can add these specific MediaConnect permissions to an existing custom IAM policy and role. For instructions, see [Create the trusted entity - complex option](#).

Result of this step

MediaLive now has the permissions needed to work with your flows, including creating and removing outputs and reading flow information. You can reuse this role for multiple channels and flows.

Step 2: Get the MediaLive channel details

Before you configure your flows, you need specific information about the MediaLive channel they'll connect to. The channel settings determine which AWS Region and Availability Zones you'll use for your flows.

To get the channel details

1. Coordinate with your MediaLive operator to get information about their channel. They can either use an existing channel, or [create a new channel](#) if they don't have one already.
2. Ask them to provide you with the following information about the channel:
 - AWS Region
 - Availability Zones
 - Channel type (single-pipeline or dual-pipeline)

Result of this step

You now have the information needed to create your flows in the correct AWS Region and Availability Zones.

Step 3. Set up MediaConnect flows

In this step, you create new flows (or identify existing ones) to serve as inputs for the MediaLive channel.

To set up the flows

1. Sign into the MediaConnect console.
2. Determine how many flows you need based on the MediaLive channel type:

- **For a single-pipeline channel**

You'll need one flow in the same Availability Zone as the channel.

- **For a standard (dual-pipeline) channel**

You'll need two flows in different Availability Zones (matching the two MediaLive channel Availability Zones).

3. Decide whether to use existing flows or create new ones.

- **If you're using existing flows**

Check that your flows meet these requirements:

- They're in the same Region as the MediaLive channel.
- They have the correct number and placement of Availability Zones (as determined in step 2).
- They have sufficient bandwidth capacity.
- They haven't reached their maximum number of outputs. (MediaLive automatically creates an output on each flow when you create an input in MediaLive).

If these requirements are met, skip to step 4. Otherwise, create new flows.

- **If you're creating new flows**

[Create flows](#) in the same AWS Region as the MediaLive channel, ensuring the correct Availability Zone placement (as determined in step 2).

Tip

If you're creating two flows, use names that are identical except for a suffix. For example, **sports_event_A** and **sports_event_B**. This will help the MediaLive operator match the flows to the input pipelines in MediaLive.

4. Take note of the Amazon Resource Name (ARN) for your flows, and share this information with the MediaLive operator. The flow ARNs look like this:
 - `arn:aws:mediaconnect:us-west-1:111122223333:flow:1bgf67:sports_event_A`
 - `arn:aws:mediaconnect:us-west-1:111122223333:flow:9pmlk76:sports_event_B`

Result of this step

Your flows are in the correct Region and Availability Zones, and are ready to connect to MediaLive inputs.

Step 4: Connect with MediaLive and start your flows

Now that your flows are ready, you can provide their details to MediaLive and start them.

To connect with MediaLive and start your flows

1. Coordinate with your MediaLive operator:
 - Provide them the flow ARNs from [the section called "Step 3. Set up MediaConnect flows"](#).
 - Inform them they can now create a MediaConnect input on the MediaLive channel using these flow ARNs.
2. In MediaConnect, start each flow that you set up in [the section called "Step 3. Set up MediaConnect flows"](#).

Note

You can start your flows before or after MediaLive creates their input - the order doesn't matter. MediaLive can add outputs to either a running flow or one that hasn't started yet.

Result of this step

MediaLive automatically creates two endpoints on the input (even for single-pipeline channels) and establishes connections to your MediaConnect flows. Your flows are now running and ready to receive content from upstream sources.

Step 5: Start the MediaLive channels

After the MediaConnect flow is started, the final step is to start the MediaLive channel.

To start the MediaLive channel

- Inform the MediaLive operator that they can now [start the channel](#) that's configured to use the MediaConnect inputs.

Result of this step

The MediaLive channel starts ingesting content from your flows and processing it according to the channel's configuration.

This completes the setup process. Your MediaConnect flows are now serving as inputs for the MediaLive channel.

Billing considerations

When using MediaConnect as an input source for MediaLive, keep in mind the following considerations that can impact your costs:

Billing impact when stopping MediaLive channels

- When you stop or pause a MediaLive channel that uses MediaConnect as inputs, the associated MediaConnect outputs don't automatically stop as well. As a result, even though the MediaLive channel is no longer active, the MediaConnect output attempts to send data to it. This can lead to additional charges on your MediaConnect flows.

Mitigating additional charges

- To avoid incurring unnecessary charges in this scenario, we recommend that you manually stop your MediaConnect flows whenever the associated MediaLive channels are no longer in use. You can either stop the flows yourself, or work with your MediaLive team to do this.

- If you work with a separate MediaLive team, we recommend that you have them notify you when they are pausing or stopping a MediaLive channel that uses your MediaConnect flows. That way, you can work together to temporarily stop the associated MediaConnect outputs during those periods, preventing additional charges. This coordination between the MediaLive and MediaConnect teams will help ensure you're only paying for the active usage of the services.

For more information on the pricing and billing implications of using MediaConnect, see the [Pricing](#) section of this guide.

Distributing content from an AWS Elemental MediaLive Multiplex

An AWS Elemental MediaLive [multiplex](#) creates a UDP transport stream (TS) that carries multiple programs, also known as a multi-program transport stream (MPTS). When you create a multiplex, MediaLive automatically grants an entitlement in MediaConnect for your account. Create a flow based on that entitlement and distribute the content from that flow.

To distribute content from a MediaLive multiplex (console)

1. In MediaLive, [create a multiplex](#).

MediaLive creates a MediaConnect entitlement that uses the multiplex as the source. The name of the entitlement includes `multiplex` and the name you chose for the multiplex.


2. In MediaConnect, [create a flow based on the new entitlement](#).
3. [Add outputs](#) to distribute the content.

MediaConnect use case: entitlements

Entitlements allow one AWS account holder to share content in a transport stream flow with other AWS account holders. For example, a sports company wants to share a flow (Baseball-Game) with a local TV station. A sports broadcaster (the originator) creates an entitlement on the Baseball-Game flow to allow access for the local TV station (the subscriber). The local TV station creates an AWS Elemental MediaConnect flow using an output from the Baseball-Game flow as the source.

The subscriber must set up their flow in MediaConnect in the same Region as the originator's flow.

This following illustration shows how to share content in a transport stream flow with another AWS subscriber. The output of the originator's flow can be used as the source of the subscriber's flow.

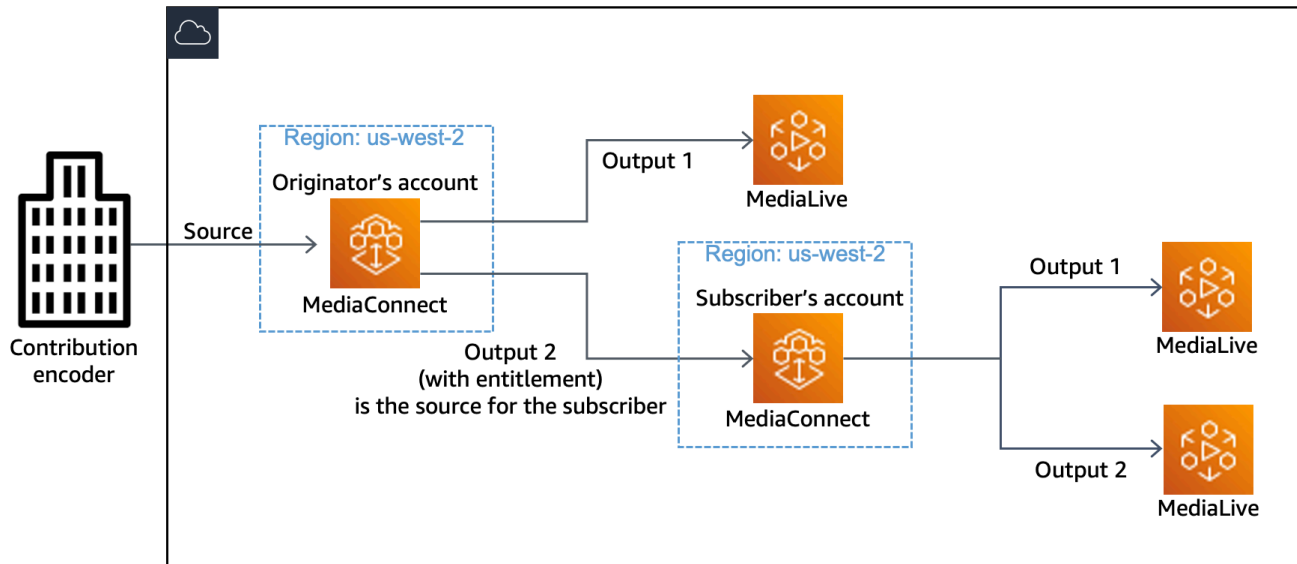


MediaConnect use case: contribution for transport stream flows


You can use AWS Elemental MediaConnect to ingest your content from an on-premises contribution encoder into the AWS Cloud. The source for your MediaConnect flow comes from your on-premises contribution encoder, and the output points to your encoder in the cloud, such as AWS Elemental MediaLive. If your source content is uncompressed, you can use a [CDI workflow](#).

For redundancy, you can set up your flow to have two outputs that point to your cloud encoder. Another setup for redundancy includes two on-premises contribution encoders—a primary and a backup—that each send content to a different MediaConnect flow. The output from each flow then points to the same cloud encoder.

The following illustration shows an on-premises contribution encoder that uploads content to MediaConnect in the AWS Cloud. The flow output points to an MediaLive channel.

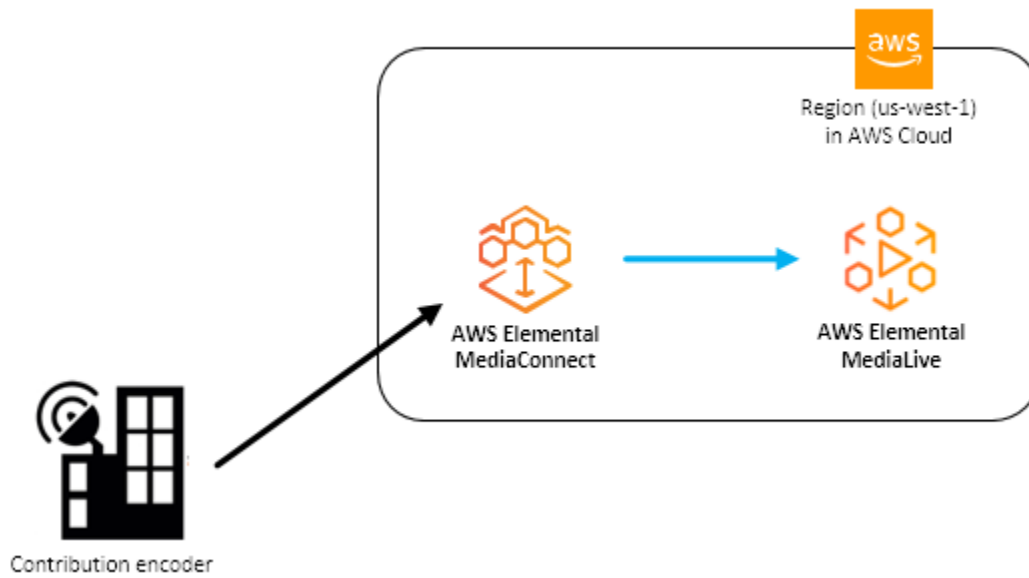

The following illustration shows two on-premises contribution encoders, a primary and a backup, that upload the same content to MediaConnect in the AWS Cloud. There are two flows, each with one output. Both outputs point to a single MediaLive channel.

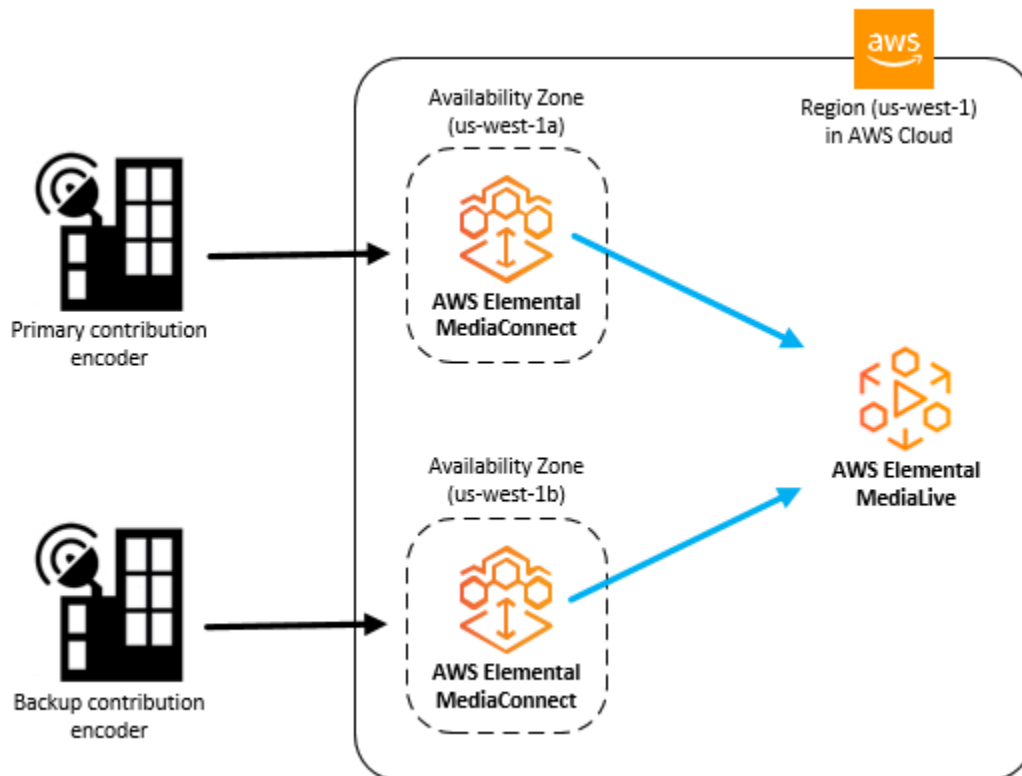

MediaConnect use case: contribution for CDI flows


With AWS Elemental MediaConnect and Direct Connect, you can bridge your on-premises live video network (SDI, 2022-6, or 2110) to your VPC live video network (CDI). MediaConnect uses the JPEG XS codec to reduce your Direct Connect network bandwidth significantly. MediaConnect supports SMPTE 2110 standard (parts 22, 30, and 40) for video, audio, and metadata transfer. MediaConnect converts the content to CDI streams that are ready to be consumed by other services in the cloud, such as AWS Elemental MediaLive. When your cloud VPC content is ready to be distributed back to on-premises networks, you can use MediaConnect to convert the CDI streams back to the SMPTE 2110 standard (parts 22, 30, and 40) for transport.

For redundancy, when you transport content between your on-premises configuration and the AWS Cloud, set up two connections in Direct Connect. Be sure to configure the AWS Elemental Live appliance with settings to match the MediaConnect flows. For more information about configuring the appliance, see SMPTE 2110 [inputs](#) and [outputs](#) in the *AWS Elemental Live User Guide*.

Note

Because CDI outputs don't support inter-Availability Zone transfers, use ST 2110 JPEG XS outputs if you want to send content to a different Availability Zone.

The following illustration shows a workflow that creates a bridge between your on-premises live video infrastructure and the AWS Cloud.

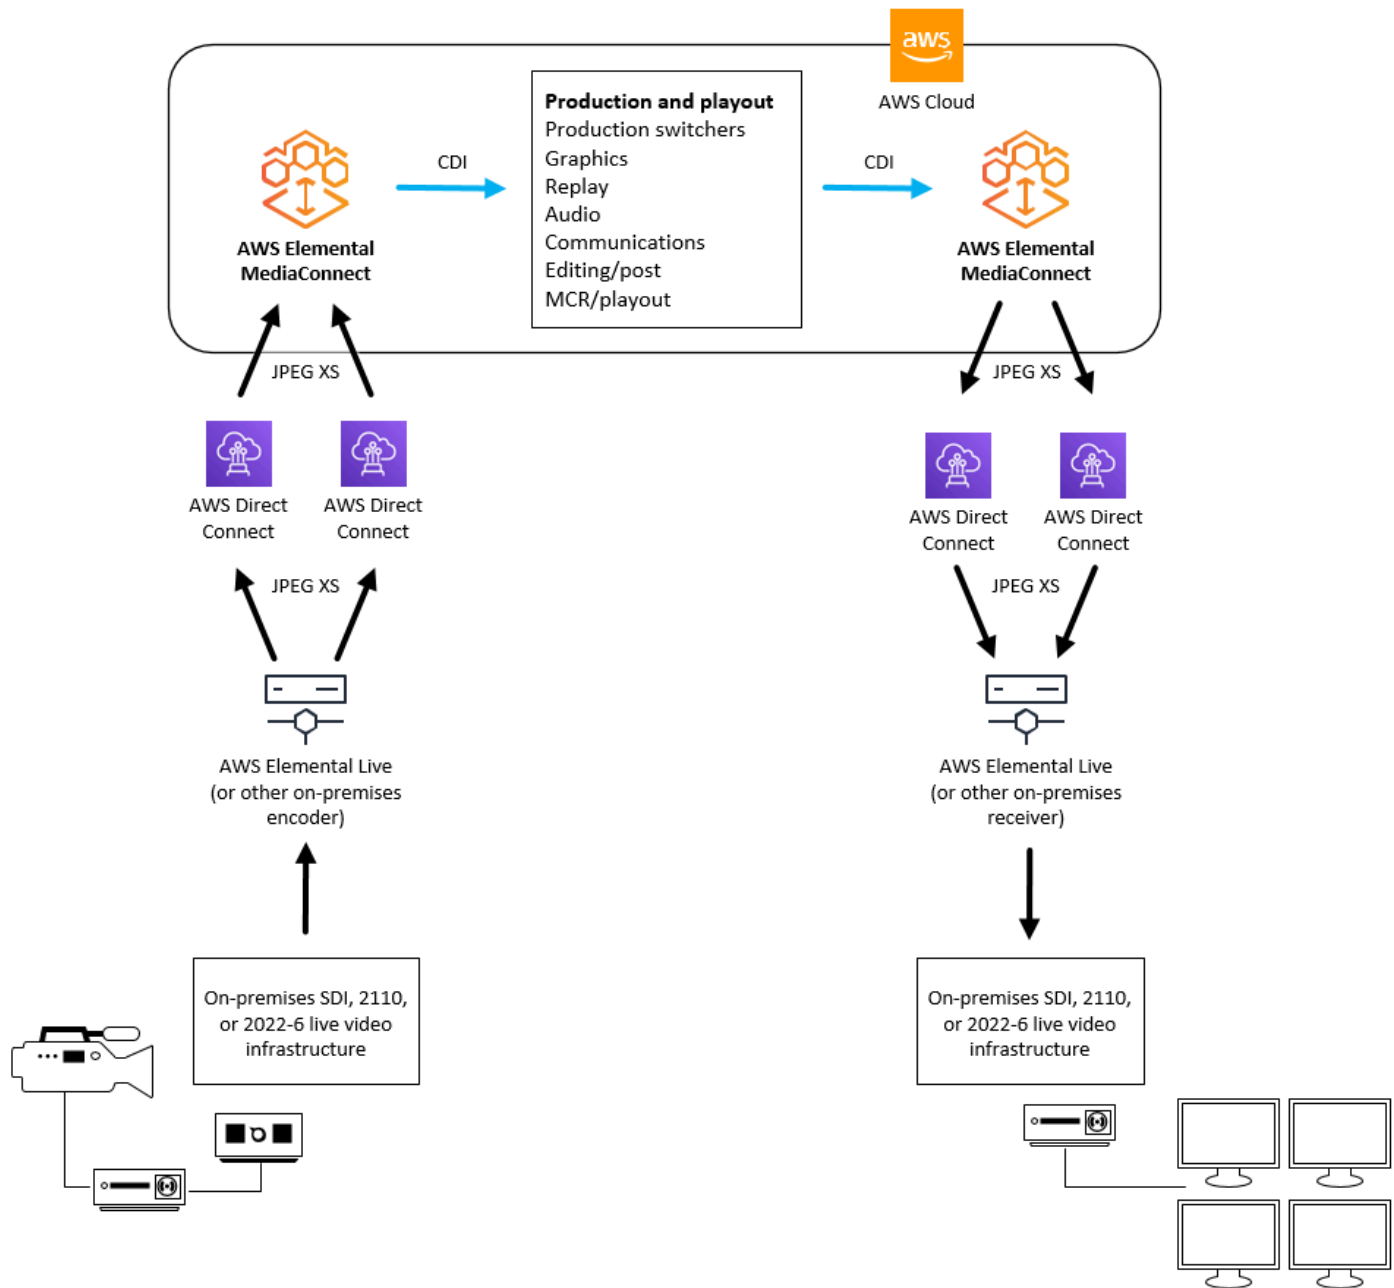


MediaConnect use case: replication and monitoring for CDI flows

You can use AWS Elemental MediaConnect to replicate and distribute video to multiple destinations and monitor the multiple video signals in real time.

For example, you can switch between multiple live events that are happening at different venues to create a single output broadcast. Using a MediaConnect CDI workflow, you can take the outputs from multiple production switchers and send those to a master control switcher and a multiviewer application. You can use another CDI flow to send the final output to the distribution encoder (for example, AWS Elemental MediaLive), and also to the multiviewer application. The production team receives the output from the multiviewer, which enables them to monitor the multiple video signals in real time.

The following illustration shows how you can use MediaConnect CDI workflows to replicate and distribute video to multiple destinations. You can create a single output broadcast from video content coming from multiple events, and also send the output from multiple signals for monitoring in real time.

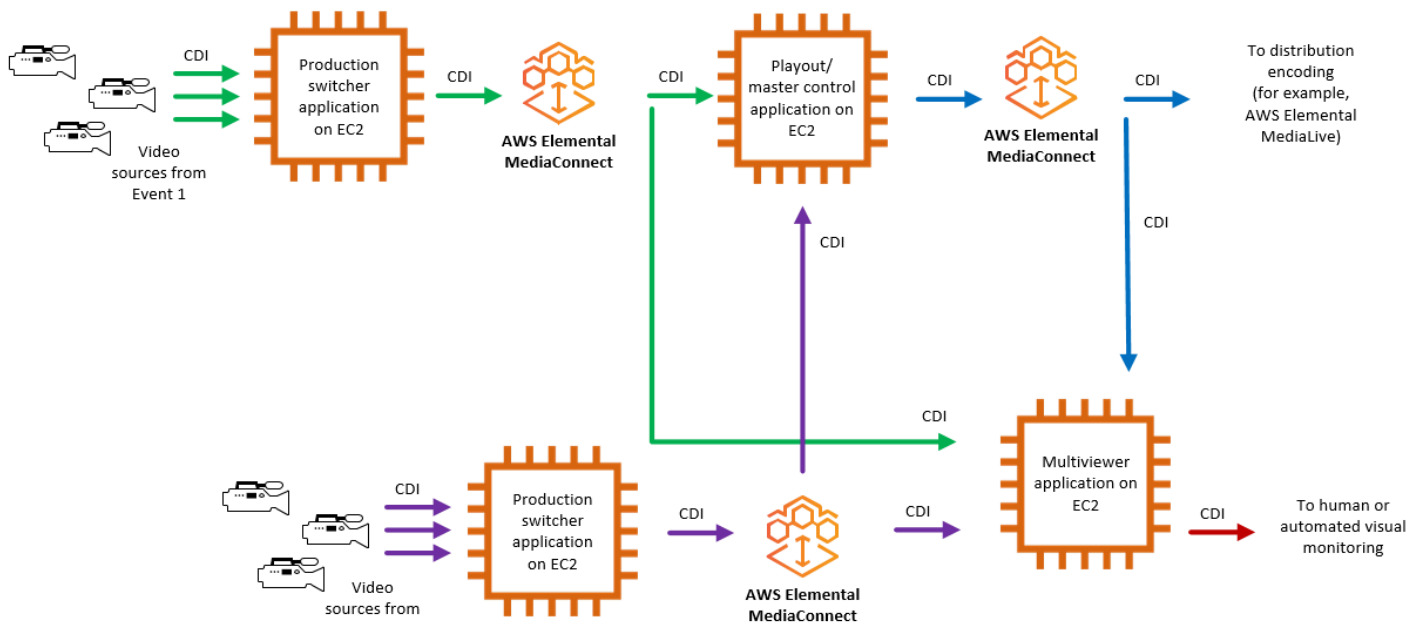

MediaConnect use case: receiving SRT content from MediaLive

You can set up AWS Elemental MediaConnect to receive content from an AWS Elemental MediaLive channel using the SRT protocol. This enables you to establish a secure, reliable transport of live video from MediaLive to MediaConnect for further distribution or processing.

This page describes your responsibilities for setting up to receive SRT output from MediaLive, as described in [Creating an SRT caller output group](#).

Planning

Before you get started, make sure you've considered the following.

- [the section called “Coordinate with the upstream system”](#)
- [the section called “Plan for delivery using Amazon VPC”](#)

Coordinate with the upstream system

You and the MediaLive operator must agree on the following things:

- **Channel configuration** - Determine which type of MediaLive channel you'll use:
 - If the MediaLive channel is a standard channel, you need two flow sources.
 - If the MediaLive channel is a single-pipeline channel, you need one flow source.
- **Latency** - Determine the appropriate latency for your streams.
 - We recommend that you choose a latency value that's close to the MediaLive configuration.
 - If you want the source from MediaLive to include a stream ID, tell the MediaLive operator what that ID is.
- **Encryption algorithm** - Determine the appropriate algorithm.
 - You must agree about the encryption algorithm that you'll use, which can be: AES 128, AES 192, or AES 256
- **Encryption passphrase** - Determine the passphrase that you'll use.
 - The passphrase can be 10 to 79 Unicode characters, which means that spaces are allowed.

Plan for delivery using Amazon VPC

Considerations for Secrets Manager

When connecting to a MediaLive channel output that's running in a VPC, note that SRT outputs are always encrypted and require AWS Secrets Manager integration. As a result, the MediaLive channel output will be in a subnet with these characteristics:

- The subnet for the channel output must have a Secrets Manager endpoint.
- The subnet for the channel output and the Secrets Manager endpoint must use the same security group.

Considerations for MediaLive

When receiving content from MediaLive, the MediaLive channel output and the MediaConnect flow source can be in the same VPC or in different VPCs. They typically share the same VPC but use different subnets with separate VPC security groups. Note the following:

- If both services are in the same AWS account, they can use the same Secrets Manager secret. You don't need to duplicate the secret just because MediaLive and MediaConnect are in different VPCs or subnets.
- If the services are in different AWS accounts, each operator typically sets up the secret separately in their respective AWS account.

Tasks

You'll need to complete the following tasks to receive SRT output from MediaLive.

- [the section called "1. Request a secret for encryption"](#)
- [the section called "2. Create a MediaConnect flow with SRT listener"](#)
- [the section called "3. Configure the MediaConnect flow's allowlist with MediaLive source IPs"](#)
- [the section called "4. Start the flow and channel"](#)

1. Request a secret for encryption

Someone in your organization with appropriate permissions must store the agreed-upon SRT encryption passphrase in a secret in Secrets Manager.

To request the secret

1. Determine if you need one or two secrets.
 - **If MediaConnect and MediaLive are in the same AWS account:** You need only one shared secret that both services will use.
 - **If MediaConnect and MediaLive are in different AWS accounts:** Typically each operator sets up an identical secret separately in their respective AWS account, rather than using a shared secret.
2. Coordinate with the MediaLive operator and agree on who will request the secret creation.
3. If you're responsible for the secret creation, follow these steps for each secret that's needed:

- Ask your AWS administrator to [create a secret](#) in Secrets Manager, using **Other type** as the secret type.
 - Give your AWS administrator the agreed-upon SRT encryption passphrase to store in the secret.
 - Ask your AWS administrator to provide you with the following information:
 - The secret's name
 - The secret's ARN, which will look like this:
`arn:aws:secretsmanager:region:123456789012:secret:Sample-abcdef`
4. If you're using one shared secret, ensure that both MediaConnect and MediaLive operators receive the secret details.

2. Create a MediaConnect flow with SRT listener

You must set up a MediaConnect flow to receive the content from MediaLive. You can then get the inbound IP address from your flow and give it to the MediaLive operator, who will need this to configure their channel.

To set up the flow and find the inbound IP address

1. Open the MediaConnect console.
2. Follow the steps to [create a flow](#) or [edit an existing flow](#) with these specific settings:
 - **Source type:** Choose either **Standard source** or **VPC source** based on your network configuration.
 - **Protocol:** Choose **SRT listener**.
 - **Source description:** Enter a descriptive name.

Tip

If MediaLive is sending two sources, use this field to distinguish between each source. For example, **source-pipeline-0** and **source-pipeline-1**.

- (For standard sources only):
 - **Allowlist CIDR block:** Enter a temporary value (such as **192.168.76.54/32**). You'll update this later with the actual MediaLive channel IP address.

- (For VPC sources only):
 - **VPC interface name:** Specify your VPC interface.
 - **Subnet:** Choose the VPC subnet that you want MediaConnect to use.
 - **Security groups:** Specify the VPC security groups that you want MediaConnect to use.
 - **Port:** Enter a port number between 1 and 65535.
 - **Maximum latency:** Enter the agreed value.
 - **Encryption:** Select **Enable encryption**.
 - **Role ARN:** Specify a role that has permission to access Secrets Manager.
 - **Secret ARN:** Enter the ARN of the secret from the previous task ([the section called "1. Request a secret for encryption"](#)).
3. After you've configured the flow, find the **Sources** tab on the flow details page.
 4. Note the **Inbound IP address** value. For example, `srt://203.0.113.22:5000` or `srt://203.0.113.88:5001`.
 5. Give this IP address to the MediaLive operator. The MediaLive operator can now [create a channel with an SRT caller output group](#) that points to your MediaConnect flow.

3. Configure the MediaConnect flow's allowlist with MediaLive source IPs

After the MediaLive channel is created, you must configure the MediaConnect flow to accept traffic from the channel.

To configure the flow

1. Ask the MediaLive operator for the source IP addresses from their channel.
 - For standard MediaLive channels: Request both Source IP addresses.
 - For single-pipeline channels: Request the single Source IP address.
 - For MediaLive Anywhere channels: Request the Gateway IP address into the network where the channel is running.
2. When you have the IP addresses:
 - Go to the MediaConnect console and open your flow.
 - Go to the **Sources** tab and select the SRT source.
 - Choose **Update**.

- Under **Allowlist CIDR block**, enter the Source IP as a CIDR block (for example, **203.0.113.1/32**).
- Choose **Update**.

Note

- If you have two sources, apply each IP address to the correct source.
- The IP addresses might be labeled as **pipeline 0** and **pipeline 1**.
- If you followed the example in the previous task ([the section called "2. Create a MediaConnect flow with SRT listener"](#)), **pipeline 0** will correspond to the flow source that has **source-pipeline-0** in the source description field.

4. Start the flow and channel

After the flow and channel are both set up, you can now start the content flow from MediaLive to MediaConnect.

To start the flow and channel

1. In the MediaConnect console, [start your flow](#).
2. After the flow is active (this takes about 1 minute), tell the MediaLive operator they can [start the channel](#).
3. After both are running, the MediaLive channel starts sending content to your MediaConnect flow.

Troubleshooting

If you encounter issues with this workflow, use this checklist to identify and resolve common problems:

- Verify that both services are using the same encryption passphrase.
- Check that the MediaConnect flow's allowlist includes the correct MediaLive channel IP address.
- Ensure that both services have the necessary permissions to access the secrets.

- Verify that the port specified in the MediaLive destination URL matches the port in the MediaConnect flow.
- For VPC setups, check that security groups allow the necessary traffic.

Setting up AWS Elemental MediaConnect

Before you start using AWS Elemental MediaConnect, you must sign up for AWS (if you don't already have an AWS account) and create IAM users and roles to allow access to MediaConnect. This includes creating an IAM role for yourself. If you want to use encryption to protect your content, you also must store your encryption keys in AWS Secrets Manager, and then give MediaConnect permission to obtain the keys from your Secrets Manager account.

This section guides you through the steps required to configure users and roles to access AWS Elemental MediaConnect. For background and additional information about identity and access management for MediaConnect, see [the section called "Identity and access management"](#).

Topics

- [Create non-admin roles](#)
- [\(Optional\) Set up encryption](#)

Create non-admin roles

Users in the Administrators group for an account have access to all AWS services and resources in that account. Granting direct access to all AWS resources goes against the best practice of applying the least privileged permissions to a user. This section describes how you can create roles with permissions that are limited to AWS Elemental MediaConnect. This section also describes how your users can assume that role to grant secure and temporary credentials.

Topics

- [Step 1: Create a non-admin policy](#)
- [Step 2: Create non-admin roles](#)
- [Step 3: Assume the role](#)

Step 1: Create a non-admin policy

Create two policies for AWS Elemental MediaConnect: one to provide read/write access and one to provide read-only access. Perform these steps one time only for each policy. Later, you will attach these policies to roles. Those roles can then be temporarily assumed by users to grant access to MediaConnect.

To create policies

1. Use your AWS account ID or account alias, and the credentials for your admin user, to sign in to the [IAM console](#).
2. In the navigation pane of the console, choose **Policies**.
3. On the **Policies** page, create a policy named MediaConnectAllAccess that allows all actions on all resources in AWS Elemental MediaConnect:
 - a. Choose **Create policy**.
 - b. Choose the **JSON** tab and paste the following policy:

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Action": [
        "mediaconnect:*"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "ec2:DescribeAvailabilityZones"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "cloudwatch:GetMetricData"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "iam:PassRole"
      ],
```

```

        "Effect": "Allow",
        "Resource": "*",
        "Condition": {
            "StringLike": {
                "iam:PassedToService": "mediacconnect.amazonaws.com"
            }
        }
    }
]
}

```

This policy allows all actions on all resources in AWS Elemental MediaConnect.

- c. Choose **Next: Tags**.
- d. Choose **Next: Review**.
- e. On the **Review and create** page, for **Policy name**, enter **MediaConnectAllAccess**, and then choose **Create policy**.
4. On the **Policies** page, create a read-only policy named **MediaConnectReadOnlyAccess** for AWS Elemental MediaConnect:
 - a. Choose **Create policy**.
 - b. Choose the **JSON** tab and paste the following policy:

JSON

```

{
    "Version": "2012-10-17",
    "Statement": [
        {
            "Action": [
                "mediacconnect:List*",
                "mediacconnect:Describe*",
                "mediacconnect:Get*"
            ],
            "Effect": "Allow",
            "Resource": "*"
        },
        {
            "Action": [
                "ec2:DescribeAvailabilityZones"
            ],
            "Effect": "Allow",
            "Resource": "*"
        }
    ]
}

```



```

        ],
        "Effect": "Allow",
        "Resource": "*"
    },
    {
        "Action": [
            "cloudwatch:GetMetricData"
        ],
        "Effect": "Allow",
        "Resource": "*"
    },
    {
        "Action": [
            "iam:PassRole"
        ],
        "Effect": "Allow",
        "Resource": "*",
        "Condition": {
            "StringLike": {
                "iam:PassedToService": "mediacconnect.amazonaws.com"
            }
        }
    }
}
]
}

```

- c. Choose **Next: Tags**.
- d. Choose **Next: Review**.
- e. On the **Review and create** page, for **Policy name**, enter **MediaConnectReadOnlyAccess**, and then choose **Create policy**.

Step 2: Create non-admin roles

You can create a role for each policy and users can assume that role, rather than attaching individual policies to each user. Using the following procedure, create two roles: one for the **MediaConnectAllAccess** policy and one for the **MediaConnectReadOnlyAccess** policy.

To create roles

1. In the navigation pane of the IAM console, choose **Roles**.
2. On the **Roles** page, create an administrator role using the **MediaConnectAllAccess** policy:

- a. Choose **Create role**.
 - b. In the **Select trusted entity** section, select **AWS account**.
 - c. In the **An AWS account** section, select the account with the users that will be assuming this role.
 - i. If a third-party will be accessing this role, it is a best practice to select **Require external ID**. For more information about external IDs, visit: [Using an external ID for third-party access](#) in the *IAM User Guide*.
 - ii. It is a best practice to require multi-factor authentication (MFA). You can select the checkbox next to **Require MFA**. For more information about MFA, visit: [Multi-factor authentication \(MFA\)](#) in the *IAM User Guide*.
 - d. Choose **Next** to move to the **Add permissions** section.
 - e. In the **Permissions policy** section, choose the **MediaConnectAllAccess** policy that you created in the procedure in [Step 3a: Create a Policy](#).
 - f. Verify that the correct policies are added to this group, and then choose **Next**.
 - g. In the **Name, review and create** section, name the role MediaConnectAdmins. (Optional) Add a description for the role. Select **Create role**.
3. On the **Roles** page, create an administrator role using the MediaConnectReadOnlyAccess policy:
- a. Choose **Create role**.
 - b. In the **Select trusted entity** section, select **AWS account**.
 - c. In the **An AWS account** section, select the account with the users that will be assuming this role.
 - i. If a third-party will be accessing this role, it is a best practice to select **Require external ID**. For more information about external IDs, visit: [Using an external ID for third-party access](#) in the *IAM User Guide*.
 - ii. It is a best practice to require multi-factor authentication (MFA). You can select the checkbox next to **Require MFA**. For more information about MFA, visit: [Multi-factor authentication \(MFA\)](#) in the *IAM User Guide*.
 - d. Choose **Next** to move to the **Add permissions** section.
 - e. In the **Permissions policy** section, choose the **MediaConnectReadOnlyAccess** policy that you created in the procedure in [Step 3a: Create a Policy](#).

- f. Verify that the correct policies are added to this group, and then choose **Next**.
- g. In the **Name, review and create** section, name the role MediaConnectReaders.
(Optional) Add a description for the role. Select **Create role**.

Step 3: Assume the role

After creating a policy and attaching that policy to a role, your users will need to assume that role to be granted secure and temporary access to MediaConnect.

View the following resources for learning about granting permissions for users to assume the role and how users can switch to the role from the console or AWS CLI.

- Granting a user permissions to switch roles: https://docs.aws.amazon.com/IAM/latest/UserGuide/id_roles_use_permissions-to-switch.html
- Switching roles (console): https://docs.aws.amazon.com/IAM/latest/UserGuide/id_roles_use_switch-role-console.html
- Switching roles (AWS CLI): https://docs.aws.amazon.com/IAM/latest/UserGuide/id_roles_use_switch-role-cli.html

(Optional) Set up encryption

You can protect your content from unauthorized use through encryption. If your source is encrypted, AWS Elemental MediaConnect can decrypt it. In addition, the service can encrypt outputs and entitlements. AWS Elemental MediaConnect offers two options for encrypting content: static key and Secure Packager and Encoder Key Exchange (SPEKE). The steps to set up encryption depend on the type of encryption that you choose. For more information, see the following:

- [Setting up static key encryption using AWS Elemental MediaConnect](#)
- [Setting up SPEKE encryption using AWS Elemental MediaConnect](#)

Getting started with AWS Elemental MediaConnect

AWS Elemental MediaConnect supports two ways to move live video: **flows**, which ingest, replicate, and share live video streams, and the **MediaConnect router**, which dynamically routes live video between independent inputs and outputs in real time. The following tutorials show you how to get started with each.

Topics

- [Getting started with flows](#)
- [Getting started with the router](#)
- [Related resources](#)

Getting started with flows

This tutorial shows you how to use AWS Elemental MediaConnect to create and share flows. The tutorial is based on a scenario where you want to do all of the following:

- Ingest a live video stream of an awards show that is taking place in New York City.
- Distribute your video to an affiliate in Boston who does not have an AWS account, and wants content sent to their on-premises encoder.
- Share your video with an affiliate in Philadelphia who wants to use their AWS account to distribute the video to their three local stations.

Important

The resources you create in this tutorial incur charges to your AWS account. AWS Elemental MediaConnect is not eligible for the AWS Free Tier. When you finish the tutorial, complete the cleanup step to delete the resources and stop incurring charges. For more information, see [AWS Elemental MediaConnect pricing](#).

Topics

- [Prerequisites](#)
- [Step 1: Access AWS Elemental MediaConnect](#)

- [Step 2: Create a flow](#)
- [Step 3: Add an output](#)
- [Step 4: Grant an entitlement](#)
- [Step 5: Share details with your affiliates](#)
- [Step 6: Clean up](#)
- [Next steps](#)

Prerequisites

Before you can use AWS Elemental MediaConnect, you need an AWS account and the appropriate permissions to access, view, and edit MediaConnect components. Complete the steps in [Setting up AWS Elemental MediaConnect](#), and then return to this tutorial.

Step 1: Access AWS Elemental MediaConnect

After you set up your AWS account and create IAM roles, you sign in to the console for AWS Elemental MediaConnect.

To access AWS Elemental MediaConnect

- Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

Step 2: Create a flow

First, you create an AWS Elemental MediaConnect flow to ingest your video from your on-premises encoder into the AWS Cloud. For this tutorial, you use the following details:

- Flow name: AwardsNYCShow
- Source name: AwardsNYCSource
- Source protocol: Zixi push
- Zixi stream ID: ZixiAwardsNYCFeed
- CIDR block sending the content: 10.24.34.0/23
- Source encryption: None

To create a flow

1. On the **Flows** page, choose **Create flow**.
2. In the **Details** section, for **Name**, enter **AwardsNYCShow**.
3. For **Availability Zone**, choose **Any (default)**.
4. In the **Source** section, for **Source type** select **Standard source**.
5. For **Name**, enter **AwardsNYCSource**.
6. For **Protocol**, choose **Zixi push**. AWS Elemental MediaConnect will populate the value of the ingest port.
7. For **Allowlist CIDR block**, enter **10.24.34.0/23**.
8. For **Stream ID**, enter **ZixiAwardsNYCFeed**.
9. Choose **Create flow**.

Step 3: Add an output

To send content to your affiliate in Boston, you must add an output to your flow. This output will send your video to your Boston affiliate's on-premises encoder. For this tutorial, you use the following details:

- Output name: AwardsNYCOutput
- Output protocol: Zixi push
- Zixi stream ID: ZixiAwardsOutput
- IP address of the Boston affiliate's on-premises encoder: 198.51.100.11
- Output encryption: None

To add an output

1. On the **Flows** page, choose the **AwardsNYCShow** flow.
2. Choose the **Outputs** tab.
3. Choose **Add output**.
4. For **Name**, enter **AwardsNYCOutput**.
5. For **Output type**, select **Standard output**.
6. For **Protocol**, choose **Zixi push**.

7. For **Stream ID**, enter **ZixiAwardsOutput**.
8. For **Destination IP address**, enter **198.51.100.11**.
9. For **Port**, enter **1024**.
10. Choose **Add output**.

Step 4: Grant an entitlement

You must grant an entitlement to allow your Philadelphia affiliate to use your content as the source for their AWS Elemental MediaConnect flow. For this tutorial, you use the following details:

- Entitlement name: PhillyTeam
- Philadelphia affiliate's AWS account ID: 222233334444
- Output encryption: None

To grant an entitlement

1. Choose the **Entitlements** tab.
2. Choose **Grant entitlement**.
3. For **Name**, enter **PhillyTeam**.
4. For **Subscriber account ID**, enter **222233334444**.
5. Choose **Grant entitlement**.

Step 5: Share details with your affiliates

Now that you've created your AWS Elemental MediaConnect flow with an output for your Boston affiliate and an entitlement for your Philadelphia affiliate, you need to communicate details about the flow.

Your Boston affiliate will receive the flow on their on-premises encoder. The details of where to send your video stream were provided by your Boston affiliate, and you don't need to provide any other information. After you start your flow, the content will be sent to the IP address that you specified when you created the flow.

Your Philadelphia affiliate must create their own AWS Elemental MediaConnect flow, using your flow as the source. You must provide the following information to your Philadelphia affiliate:

- **Entitlement ARN:** You can find this value on the **Entitlement** tab of the **AwardsNYCShow** flow details page.
- **Region:** This is the AWS Region that you created the **AwardsNYCShow** flow in.

Step 6: Clean up

To avoid extraneous charges, be sure to delete all unnecessary flows. You must stop the flow before it can be deleted.

To stop your flow

1. On the **Flows** page, choose the **AwardsNYCShow** flow.
The details page for the **AwardsNYCShow** flow appears.
2. Choose **Stop**.

To delete your flow

1. On the **AwardsNYCShow** flow details page, choose **Delete**.
A confirmation message appears.
2. Choose **Delete flow**.

Next steps

To learn how to dynamically route live video between independent inputs and outputs with the MediaConnect router, see [Getting started with the router](#).

Getting started with the router

This tutorial shows you how to use the MediaConnect router to dynamically route live video between independent inputs and outputs in real time, with centralized control across AWS Regions.

The tutorial is based on a scenario where you want to do all of the following:

- Receive two live video feeds into the router: a primary awards show feed from New York City and a backup feed.
- Route the primary feed to a distribution destination and a recording destination simultaneously.

- Dynamically switch from the primary feed to the backup feed during a live event.

Important

The router resources you create in this tutorial incur charges to your AWS account. AWS Elemental MediaConnect is not eligible for the AWS Free Tier. When you finish the tutorial, complete the cleanup step to delete the resources and stop incurring charges. For more information, see [AWS Elemental MediaConnect pricing](#).

Topics

- [Prerequisites](#)
- [Step 1: Access AWS Elemental MediaConnect](#)
- [Step 2: Create a router network interface](#)
- [Step 3: Create router inputs](#)
- [Step 4: Create router outputs](#)
- [Step 5: Assign routes](#)
- [Step 6: Switch sources dynamically](#)
- [Step 7: Clean up](#)
- [Next steps](#)

Prerequisites

Before you can use the MediaConnect router, you need an AWS account and the appropriate permissions to access, view, and edit MediaConnect components. Complete the steps in [Setting up AWS Elemental MediaConnect](#), and then return to this tutorial.

Step 1: Access AWS Elemental MediaConnect

After you set up your AWS account and create IAM roles, you sign in to the console for AWS Elemental MediaConnect.

To access AWS Elemental MediaConnect

- Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

Step 2: Create a router network interface

Before you can create router inputs, you need a router network interface. A network interface defines how your sources and destinations connect to the router. You can connect over the public internet or through your Amazon VPC.

For this tutorial, you create a public router network interface with the following details:

- Network interface name: **AwardsNYCInterface**
- Network interface type: **Public**
- Allowedlist CIDR: **10.24.34.0/23**
- Region: **N. Virginia**

To create a router network interface

1. In the navigation pane, choose **Router network interfaces**.
2. Choose **Create router network interface**.
3. For **Name**, enter **AwardsNYCInterface**.
4. For **Interface type**, choose **Public interface**.
5. For **Allowed CIDRs**, enter **10.24.34.0/23**.
6. For **AWS Region**, choose **N. Virginia**.
7. Choose **Create router network interface**.

Note

If you need to receive content through your Amazon VPC instead of the public internet, choose **VPC interface** as the type and provide the subnet ID and security group IDs for your Amazon VPC configuration.

Step 3: Create router inputs

You create router inputs to receive content from your source endpoints. A router input is a connection point in the MediaConnect router that can receive content from your source. Each input is associated with a network interface and can be routed to multiple outputs.

For this tutorial, you create two inputs: one for the primary awards show feed and one for a backup feed. Use the following details:

Primary input:

- Input name: AwardsPrimaryFeed
- Tier: 20 Mbps
- Maximum bitrate: 20,000,000 bps
- Region: N. Virginia
- Routing scope: Regional
- Input type: Standard
- Network interface ARN: (the ARN from Step 2)
- Protocol: SRT Listener
- Port: 5000
- Minimum latency: 100 ms

Backup input:

- Input name: AwardsBackupFeed
- Tier: 20 Mbps
- Maximum bitrate: 20,000,000 bps
- Region: N. Virginia
- Routing scope: Regional
- Input type: Standard
- Network interface ARN: (the ARN from Step 2)
- Protocol: SRT Listener
- Port: 5001
- Minimum latency: 100 ms

To create the primary router input

1. In the navigation pane, choose **Router inputs**.
2. Choose **Create router input**.

3. For **Name**, enter **AwardsPrimaryFeed**.
4. For **Tier**, choose **20 Mbps**.
5. For **Maximum bitrate (bps)**, enter **200000000** or use the slider.
6. For **AWS Region**, choose **N. Virginia**.
7. For **Routing scope**, choose **Regional**.
8. For **Input type**, choose **Standard**.
9. For **Network interface ARN**, select the ARN for **AwardsNYCInterface**.
10. For **Protocol**, choose **SRT Listener**.
11. For **Port**, enter **5000**.
12. For **Minimum latency**, enter **100**.
13. Choose **Create router input**.

To create the backup router input

1. In the navigation pane, choose **Router inputs**.
2. Choose **Create router input**.
3. For **Name**, enter **AwardsBackupFeed**.
4. For **Tier**, choose **20 Mbps**.
5. For **Maximum bitrate (bps)**, enter **200000000** or use the slider.
6. For **AWS Region**, choose **N. Virginia**.
7. For **Routing scope**, choose **Regional**.
8. For **Input type**, choose **Standard**.
9. For **Network interface ARN**, select the ARN for **AwardsNYCInterface**.
10. For **Protocol**, choose **SRT Listener**.
11. For **Port**, enter **5001**.
12. For **Minimum latency**, enter **100**.
13. Choose **Create router input**.

After creation, each router input is in a **Standby** state. You must start the input before it can receive content.

To start a router input

1. On the **Router inputs** page, select the **AwardsPrimaryFeed** input.
2. Choose **Start**. The input transitions to an **Active** state and is ready to receive content.
3. Repeat for the **AwardsBackupFeed** input.

After the inputs start, provide your upstream sources with the input IP address and the port number for each input so they can begin sending content.

Step 4: Create router outputs

You create router outputs to deliver content to your downstream destinations. A router output is a connection point in the MediaConnect router that delivers content to a destination.

For this tutorial, you create two outputs: one for primary distribution and one for recording. Use the following details:

Primary distribution output:

- Output name: PrimaryDistribution
- Tier: 20 Mbps
- Maximum bitrate: 20,000,000 bps
- Region: N. Virginia
- Output type: Standard
- Network interface ARN: (the ARN from Step 2)
- Protocol: SRT Caller
- Destination IP address: *destination-ip-address*
- Port: 6000
- Minimum latency: 100 ms

Recording output:

- Output name: RecordingDestination
- Tier: 20 Mbps
- Maximum bitrate: 20,000,000 bps

- Region: N. Virginia
- Output type: Standard
- Network interface ARN: (the ARN from Step 2)
- Protocol: SRT Caller
- Destination IP address: *destination-ip-address*
- Port: 6100

To create the primary distribution output

1. In the navigation pane, choose **Router outputs**.
2. Choose **Create router output**.
3. For **Name**, enter **PrimaryDistribution**.
4. For **Tier**, choose **20 Mbps**.
5. For **Maximum bitrate (bps)**, enter **200000000** or use the slider.
6. For **AWS Region**, choose **N. Virginia**.
7. For **Output type**, choose **Standard**.
8. For **Network interface ARN**, select the ARN for **AwardsNYCInterface**.
9. For **Protocol**, choose **SRT Caller**.
10. For **Destination address**, enter your destination IP address.
11. For **Port**, enter **6000**.
12. For **Minimum latency**, enter **100**.
13. Choose **Create router output**.

To create the recording output

1. In the navigation pane, choose **Router outputs**.
2. Choose **Create router output**.
3. For **Name**, enter **RecordingDestination**.
4. For **Tier**, choose **20 Mbps**.
5. For **Maximum bitrate (bps)**, enter **200000000** or use the slider.
6. For **AWS Region**, choose **N. Virginia**.
7. For **Output type**, choose **Standard**.

8. For **Network interface ARN**, select the ARN for **AwardsNYCInterface**.
9. For **Protocol**, choose **SRT Caller**.
10. For **Destination address**, enter your destination IP address.
11. For **Port**, enter **6100**.
12. Choose **Create router output**.

After creation, each router output is in a **Standby** state. You must start the output before it can deliver content.

To start a router output

1. On the **Router outputs** page, select the **PrimaryDistribution** output.
2. Choose **Start**. The output transitions to an **Active** state and is ready to deliver content.
3. Repeat for the **RecordingDestination** output.

Step 5: Assign routes

After you set up your router inputs and outputs, you can assign routes to control how content flows between them. A route connects an input to one or more outputs. It determines where your content goes.

AWS Elemental MediaConnect provides two ways to manage your route assignments:

- **Router control panel view** – A real-time control interface well suited to live production. Like a traditional broadcast router, it lets you make immediate changes and see them take effect instantly. Visual indicators help you monitor your routes' status during live events.
- **Router matrix view** – When you need to plan more complex changes, the matrix view lets you set up multiple route changes at once, making it particularly useful for scheduled program changes and complex routing scenarios.

To assign a route using the control panel view

1. In the navigation pane, choose **Router control panel**.
2. Choose **Configure** to open the configuration panel.
3. Select both the **AwardsPrimaryFeed** and **AwardsBackupFeed** inputs from the configuration panel.

4. Select both the **PrimaryDistribution** and **RecordingDestination** outputs from the configuration panel.
5. Select **Real-time control**.
6. Select the **PrimaryDistribution** output and then select the **AwardsPrimaryFeed** input. The route takes effect immediately.
7. Select the **RecordingDestination** output. Select the **AwardsPrimaryFeed** input again. The route takes effect immediately.

Your content now flows from **AwardsPrimaryFeed** to both **PrimaryDistribution** and **RecordingDestination** simultaneously.

You can also manage your route assignments in the **Router matrix**. The matrix shows all inputs as rows and all outputs as columns, with a marker at each intersection that is currently routed. The matrix is useful for reviewing and planning multiple route changes at once. Because you already assigned routes in the control panel, the matrix shows **AwardsPrimaryFeed** routed to both **PrimaryDistribution** and **RecordingDestination**.

To review and change routes using the matrix view

1. In the navigation pane, choose **Router matrix**.
2. Choose **Configure** to open the configuration panel.
3. Select both the **AwardsPrimaryFeed** and **AwardsBackupFeed** inputs and both the **PrimaryDistribution** and **RecordingDestination** outputs.
4. In the matrix, the intersections of **AwardsPrimaryFeed** with **PrimaryDistribution** and with **RecordingDestination** are marked as routed. To change a route, choose a different intersection in the same output column. For example, to switch **PrimaryDistribution** to the backup feed, choose the intersection of **AwardsBackupFeed** and **PrimaryDistribution**.
5. When you finish adjusting routes, choose **Apply route matrix** to apply your changes.

Step 6: Switch sources dynamically

With the router, you can switch sources instantly during a live event. For example, to switch from the primary feed to the backup feed:

To switch sources using the control panel view

1. In the control panel view, select the **PrimaryDistribution** output.
2. Select the **AwardsBackupFeed** input. The switch takes effect immediately; your downstream destination now receives the backup feed.

The previous route from **AwardsPrimaryFeed** to **PrimaryDistribution** is automatically unassigned when you assign a new input to the same output.

You can switch back to the primary feed at any time by reassigning **AwardsPrimaryFeed** to the **PrimaryDistribution** output.

Step 7: Clean up

To avoid extraneous charges, be sure to stop and delete all unnecessary router resources. You must stop router inputs and outputs before they can be deleted.

To stop and delete router outputs

1. In the navigation pane, choose **Router outputs**.
2. Select the **PrimaryDistribution** output.
3. Choose **Stop** to put the output in **Standby** state.
4. After the output stops, choose **Delete**.
5. Repeat for the **RecordingDestination** output.

To stop and delete router inputs

1. In the navigation pane, choose **Router inputs**.
2. Select the **AwardsPrimaryFeed** input.
3. Choose **Stop** to put the input in **Standby** state.
4. After the input stops, choose **Delete**.
5. Repeat for the **AwardsBackupFeed** input.

To delete the router network interface

1. In the navigation pane, choose **Router network interfaces**.

2. Select the **AwardsNYCInterface** network interface.
3. Choose **Delete**.

Next steps

To learn about ingesting and transporting live video with flows, see [Getting started with flows](#).

Related resources

The following resources can help you as you work with AWS Elemental MediaConnect:

- [Using MediaConnect flows](#) – Learn more about creating, replicating, and sharing flows.
- [Using the MediaConnect router](#) – Learn more about routing live video with the MediaConnect router.
- [Protocols in MediaConnect](#) – Review the transport protocols that MediaConnect supports.
- [AWS Elemental MediaConnect pricing](#) – Review pricing details for MediaConnect.

Using the MediaConnect router

The AWS Elemental MediaConnect router enables you to manage live video and audio routing both within the AWS Cloud and over the public internet.

When managing live media content, you need to control where your media streams flow and be able to change these connections quickly as programming requires. The MediaConnect router helps you perform these tasks in the AWS Cloud on a global scale. It brings familiar broadcast switching concepts to the MediaConnect console, making it easier for you to manage multiple live media streams and perform typical broadcast operations like source switching and destination management across different AWS Regions worldwide. Like a traditional broadcast router, it serves as a central control point for connecting your media sources to various destinations, but with the added advantage of the global AWS infrastructure.

The router supports flexible routing options between many sources and destinations, enabling you to quickly adjust routes paths as your programming requirements change. This functionality works alongside existing MediaConnect flows to provide additional media stream management capabilities.

Key points

Router concepts and terminology

Before working with the router, familiarize yourself with these key concepts and terms.

Source and input components

- **Source (upstream endpoint)**

A physical or virtual connection point in your upstream environment that can transmit content into MediaConnect.

- **Router input**

A connection point in the MediaConnect router that can receive content from your source endpoint. Each input can be routed to multiple outputs. There are several types of router input:

- **Standard input**

A basic router input that receives content from a single source endpoint.

- **Failover input**

A router input that can receive content from two source endpoints, allowing manual or automatic switching between them.

- **Merge input**

A router input that combines content from two source endpoints with configurable merge window timing.

- **Flow input**

A router input that can receive content from a MediaConnect flow.

- **MediaLive channel input**

A router input that can receive content from a MediaLive channel output.

Destination and output components

- **Destination (downstream endpoint)**

A physical or virtual connection point in your downstream environment that can receive content from MediaConnect.

- **Router output**

A connection point in the MediaConnect router that can send content to your destination endpoint.

- **Standard output**

A basic router output that sends content to a downstream destination endpoint.

- **Flow output**

A router output that can send content to a MediaConnect flow.

- **MediaLive output**

A router output that can send content to a MediaLive input.

Routing system and operations

- **Route**

The complete end-to-end path from an input to an output within the router. Routes are defined by input-to-output assignments within the router.

- **Router I/O**

A connection point in the MediaConnect router that can either receive content (a router input) or transmit content (a router output).

- **Router fabric**

The managed AWS network that carries streams between router inputs and router outputs.

- **Routing network interface**

The network configuration that determines how a router I/O connects to other resources. Router I/Os can be associated with either a public interface (for connecting to the internet) or a VPC interface (for connecting to resources within your VPC).

- **Take**

The act of assigning an input to an output. For example, if you change an output's source from input Camera1 to input Camera2, you would describe the output as "taking" Camera2. You can undo a take by clearing the input assignment for an output.

How the router works

Router setup


Building on these concepts, the following steps show how you set up and use the router at a high level:

1. **Create network interfaces** - Set up public or VPC network interfaces to define the network security settings for how your router I/Os connect to other resources.
2. **Create router I/Os** - Set up I/Os that connect to your external endpoints, associating each one with a network interface.
3. **Start the router I/Os** - Change I/O status from Standby to Active when you're ready to begin streaming.
4. **Assign routes** - Define routes by assigning inputs to outputs. You can assign routes regardless of I/O status.

You can do these steps manually in the console, or programmatically using the MediaConnect API. When the router is set up in this way, it can connect **every** destination endpoint to **any** source

stream. This gives you the flexibility to instantly switch feeds between sources and destinations in real time, either individually or in bulk.

The following diagram shows the anatomy of the MediaConnect router. The router system consists of a collection of different sources and destinations. These external endpoints are connected to router inputs and outputs. As you add or delete router I/Os, the size and shape of the routing matrix adjusts accordingly.

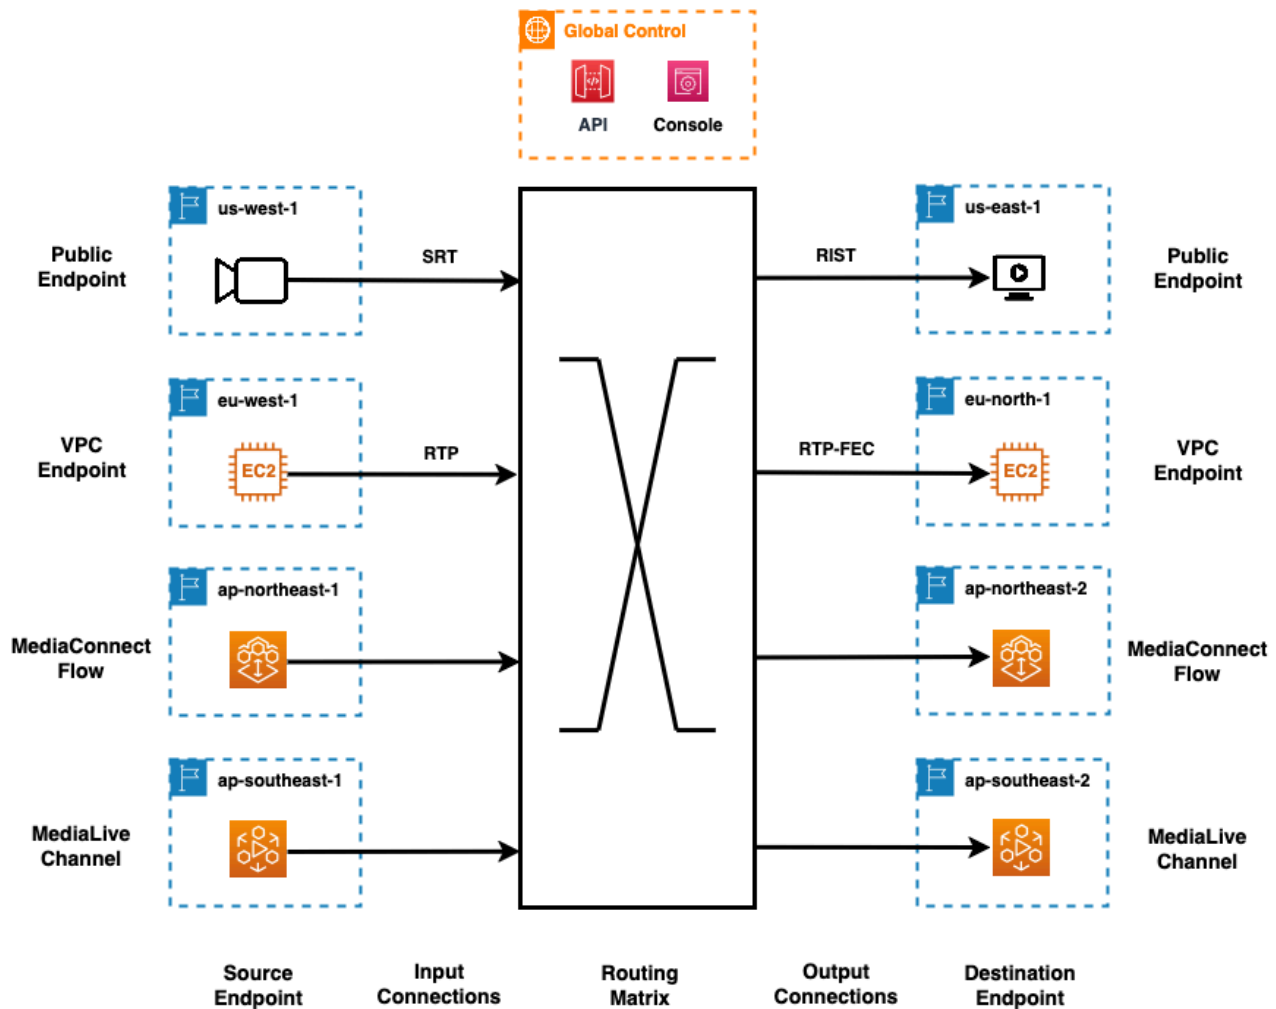

Stream Adaptive Multipath Routing

The MediaConnect router establishes persistent connections between upstream sources and downstream destinations using your choice of transport protocols. These edge protocols are terminated in the router I/O and the transport stream is carried within the router fabric using a

routing algorithm that is optimized for high-bitrate video delivery using the shared AWS network environment. You don't need to set up or manage any network infrastructure and you can monitor the performance of individual routes with Amazon CloudWatch metrics at the router output.

To maximize packet delivery reliability, MediaConnect router uses an adaptive multipath technique that monitors multiple AWS network paths simultaneously and actively responds to network conditions. Whereas other methods use a single path for routing, this multipath approach helps maintain video quality and low latency in variable network conditions. It selects optimal paths for your packets and preserves packet ordering for live video workflows. MediaConnect router provides consistent end-to-end latency for routes within an AWS Region and across AWS Regions. This constant delay between sender and receiver helps prevent buffering and frame dropping in live video applications.

If packet loss is detected on one path, it immediately reroutes packets using alternate reliable paths. Packets are only retransmitted as needed, making efficient use of network bandwidth while maintaining stream integrity. This adaptive approach ensures consistent, high-quality video without interruptions, even in demanding scenarios like live sports broadcasts where network conditions change rapidly.

You can configure the latency that the router fabric uses to recover lost packets. Each router output has a recovery latency mode. The default mode balances latency against stream quality, and a low-latency mode reduces latency for workflows that are sensitive to delay.

Router capabilities and management

The router provides several key capabilities for managing your media workflows. You can:

- Route live feeds between any source and destination (whether within the AWS Cloud, or outside of it)
- Distribute your content across AWS Regions to public and VPC endpoints
- Freely mix and match endpoint types as needed
- Connect existing MediaConnect flows to your router inputs and outputs
- Use MediaLive inputs as a destination for your router outputs
- Use MediaLive channel outputs as a source for your router inputs
- Use failover inputs with manual or automatic switching between two sources
- Use merge inputs that can combine content from two sources with configurable merge window timing

You manage these functions through the MediaConnect console, where you can:

- See all your active routes at a glance
- Make bulk changes to multiple routes at the same time
- Control routing across all AWS Regions from one place
 - For example, you can use the US West (Oregon) console to create router inputs in Europe (Dublin) and assign them to router outputs in Europe (London). This eliminates the need to switch between Regional consoles and manually manage your IP address and encryption settings.

For information about router I/O maintenance scheduling and windows, see [Maintenance in MediaConnect](#).

Router considerations and limitations

As you plan your router implementation, keep these points in mind.

Router features and considerations

Feature	Description
Supported protocols	The MediaConnect router supports multiple protocols to enable compatibility across hybrid workflows. The following protocols are currently supported: SRT, RTP, RTP-FEC, RIST.
Internal routing	The MediaConnect router internally handles data delivery between router inputs and router outputs independent of the protocols used between the source and router inputs, or the router outputs and destination. For instance, you only need to configure router input protocol ARQ latency based on the distance between the source and the router input, not the distance to your final destinations. After your content reaches the router input, MediaConnect manages all subsequent delivery, including transfers across Regions.

Feature	Description
	Similarly, you only need to configure router output protocol ARQ latency based on the distance between the router output and the destination.
Fault tolerance	The routing service provides tolerance to failures at the EC2, AZ, and Regional levels by automatically migrating and restoring I/O state.
Unified Region management	You can manage your router resources across multiple AWS Regions from a single console.
Cross-Region routing	The MediaConnect router supports cross-Region routing. This means you can route audio and video streams between inputs and outputs even if they're in different AWS Regions.
Router network interface capacity	You can create up to five router network interfaces in each AWS Region. Each public router network interface can have up to 10 address ranges. For VPC interfaces, you can associate up to 5 security groups.
Router input capacity	You can create up to 20 router inputs in each AWS Region. You can connect one input to up to 10 outputs simultaneously. Each input supports up to 500 Mbps.
Router output capacity	You can create up to 20 router outputs in each AWS Region. Each output supports up to 500 Mbps.

Feature	Description
Source failover and merge	The MediaConnect router supports both automatic failover between redundant sources and merged content from two source endpoints. Supported protocols: • Failover: RTP, RIST, SRT-listener, SRT-caller • Merge: RTP, RIST Both sources must: • Use the same protocol configuration • Use the same network configuration (VPC or public) • Use different port numbers Merge inputs include configurable merge window timing. Converting between failover and merge types requires recreating the input.
MediaLive integration	The MediaConnect router supports routing to or from MediaLive. You can send content from router outputs to MediaLive inputs, or receive content from MediaLive channel outputs into router inputs. For more details, see the section called “Integrating MediaLive”.
Flow integration	The MediaConnect router supports routing to or from MediaConnect flows. For more details on flow integration considerations, see the section called “Integrating flows”.
Maintenance schedule updates	Unlike flows, router resources must be in standby mode before you can make any maintenance schedule changes. Once a router I/O is started, the schedule remains fixed until the next restart. For more information, see Maintenance in MediaConnect.

Next steps

You can learn how to set up and use the router in the following pages of this guide.

- [Managing router network interfaces in MediaConnect](#)
 - [Creating a router network interface in MediaConnect](#)
 - [Viewing router network interfaces in MediaConnect](#)
 - [Updating a router network interface in MediaConnect](#)
 - [Deleting a router network interface in MediaConnect](#)
- [Managing router I/Os in MediaConnect](#)
 - [Creating a router I/O in MediaConnect](#)
 - [Viewing router I/Os in MediaConnect](#)
 - [Updating a router I/O in MediaConnect](#)
 - [Starting a router I/O in MediaConnect](#)
 - [Stopping a router I/O in MediaConnect](#)
 - [Restarting a router I/O in MediaConnect](#)
 - [Deleting a router I/O in MediaConnect](#)
 - [MediaConnect router I/O states](#)
 - [Integrating router I/Os with MediaConnect flows](#)
 - [Integrating router I/Os with MediaLive](#)
 - [Source failover and merge for router inputs in MediaConnect](#)
- [Managing routes in MediaConnect](#)
 - [Using the router control panel view in MediaConnect](#)
 - [Using the router matrix view in MediaConnect](#)

Managing router network interfaces in MediaConnect

Router network interfaces control how the router communicates with the outside world. Router I/Os that connect to a public or VPC endpoints need a network interface, which determines how the router I/O connects to other resources and what security measures protect the connection. Note that router connections to MediaLive channels and MediaConnect flows are automatically managed and do not require a network interface.

You can work with two types of router network interface:

- **Public network interfaces** - These allow communication over the public internet. They're ideal for connecting to external sources or destinations like cameras, encoders, and content delivery platforms. When using public interfaces, you must specify allowed IP addresses (CIDRs) for security purposes.
- **VPC network interfaces** - These connect to resources within your Amazon Virtual Private Cloud (VPC), and provide private networking within AWS. VPC interfaces are best suited for connecting your router to other AWS services or resources within your VPC.

You can use the same router network interface for multiple inputs and outputs on your router. This allows you to simplify your network configuration and reduce the number of interfaces you need to maintain.

This chapter shows you everything you need to know about working with router network interfaces.

Topics

- [Creating a router network interface in MediaConnect](#)
- [Viewing router network interfaces in MediaConnect](#)
- [Updating a router network interface in MediaConnect](#)
- [Deleting a router network interface in MediaConnect](#)

Creating a router network interface in MediaConnect

Router network interfaces determine how your router communicates with other network resources and the internet. You can configure these interfaces to connect either through the public internet or through your Amazon Virtual Private Cloud (VPC), depending on your networking requirements. The interface type you choose affects the security settings and accessibility of your router connections.

You can create up to five router network interfaces in each AWS Region. Keep in mind that network interfaces are Regional resources, and you can only use them with router I/Os that are in the same Region.

Prerequisites

- You have an AWS account.
- You know the AWS Region where you want to create the router network interface.

For VPC network interfaces:

- You have [set up MediaConnect as a trusted service](#) in IAM.
- You have created a VPC subnet and associated security groups in Amazon VPC. The subnet you choose determines the availability zone and network range for your network interface, while the security groups act as a virtual firewall.

For more information about VPCs, see the [Amazon VPC User Guide](#). For information about configuring security groups to work with your VPC interface, see [Security group considerations](#).

Procedure

Follow these steps to create a router network interface.

To create a router network interface

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router network interfaces**.
3. Choose **Create router network interface**.
4. Under **Router network interface details**, provide the following information:

- a. **Name** - Enter a name that helps you identify the purpose of this network interface.

 Tip

Including details like location or use case (for example, **Studio-A-Public** or **NYC-VPC**) makes it easier to manage multiple network interfaces.

- b. **Region** - Specify where you want to create this router network interface. Create your network interface in a Region where you plan to set up routing - you'll need this interface when creating router inputs and outputs.
- c. **Interface type** - Choose one of the following options:
- For public internet connectivity:
 - Choose **Public interface**.
 - Decide whether you want to block all inbound connections.
 - In **Allowed CIDR blocks**, specify up to 10 IP address ranges (for example, `203.0.113.0/24`). These blocks determine which IP addresses can connect to your router network interface.
 - For VPC connectivity:
 - Choose **VPC interface**.
 - Select a subnet from your VPC. For best performance, choose a subnet in the same Availability Zone as your other AWS resources.
 - Select up to five security groups to control access. These act as virtual firewalls for your router network interface.
5. Choose **Create router network interface**.

Next steps

After creating a network interface, you can:

- [Review your network interfaces](#) to ensure your network setup is complete
- [Update your router network interface settings if needed](#)
- [Delete unused router network interfaces](#)

Additional resources

To create network interfaces programmatically, see the following page in the *MediaConnect API Reference*:

- [CreateRouterNetworkInterface](#)

This includes information about how to use the `CreateRouterNetworkInterface` operation and its parameters in one of the language-specific AWS SDKs.

Viewing router network interfaces in MediaConnect

You can view your router network interfaces in the MediaConnect console. For each interface, you can see the configuration details, status, and associated resources.

Prerequisites

The following procedure assumes you have at least one router network interface in your AWS account.

Procedure

Follow these steps to view the network interfaces that are available in your AWS account.

To view your router network interfaces

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router network interfaces**.
3. Review the list of your router network interfaces.
4. Select a router network interface and choose **View resource**.
5. On the details page, use the following tabs to find specific information:

Router network interface details tabs

Tab	Description
Inputs	View the router inputs that are using this network interface.
Outputs	View the router outputs that are using this network interface.
Configuration	View the basic configuration information and current state of the network interface.
Tags	View the tags that are applied to this network interface.

Next steps

After reviewing your network interfaces, you can:

- [Update your router network interface settings if needed](#)

- [Create additional router network interfaces](#)
- [Delete unused router network interfaces](#)

Additional resources

To view network interfaces programmatically, see the following pages in the *MediaConnect API Reference*:

- [ListRouterNetworkInterfaces](#)
- [GetRouterNetworkInterface](#)
- [BatchGetRouterNetworkInterface](#)

This includes information about how to use these operations and parameters in one of the language-specific AWS SDKs.

Updating a router network interface in MediaConnect

After creating a router network interface in MediaConnect, you can modify its configuration to adapt to changing network requirements. This enables you to update the properties of your public and VPC interfaces, ensuring that your network setup remains flexible and up-to-date.

Prerequisites

- The following procedure assumes that you've already created a router network interface.
- For VPC interfaces only: If you plan to change your VPC or security group settings, make sure that the VPC interface you're updating isn't currently associated with any router inputs or outputs.

Procedure

To update a router network interface

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router network interfaces**.
3. Select the router network interface that you want to update.
4. Choose **Edit**.
5. Update any of the following settings:
 - For public interfaces: You can edit the interface name, the inbound connections setting, and the allowed CIDR blocks.
 - For VPC interfaces: You can edit the subnet and the security groups selections.
6. Choose **Save changes**.
7. Check the outcome:
 - a. If successful: The router network interface will be updated with your changes.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

Next steps

After you update a network interface, you can [review the updated network interface](#) to verify that your updates were successful.

Additional resources

To update a router network interface programmatically, see the following page in the *MediaConnect API Reference*:

- [UpdateRouterNetworkInterface](#)

This includes information about how to use this operation and parameters in one of the language-specific AWS SDKs.

Deleting a router network interface in MediaConnect

You can delete router network interfaces that are no longer needed for your workflow. This helps you to maintain a clean network configuration and reduce unused resources.

Important

After you delete a network interface, you can't recover it. You'll need to create a new one if you need similar functionality later.

Prerequisites

Before you begin:

- Make sure no router I/Os are currently using the router network interface you want to delete.
- Consider documenting the router network interface's configuration in case you need to recreate it later.

Procedure

To delete a router network interface

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router network interfaces**.
3. Choose the name of the router network interface that you want to delete.
4. Choose **Delete**.
5. To confirm, choose **Delete router network interface**.

Note

The deleted interface might still appear in your list for about an hour, but it won't be functional.

Next steps

After deleting a network interface, you can:

- [Create a new network interface](#) with different settings if needed.
- [Review your remaining network interfaces](#) to ensure your network setup is complete.

Additional resources

To delete network interfaces programmatically, see the following page in the *MediaConnect API Reference*:

- [DeleteRouterNetworkInterface](#)

This includes information about how to use the `DeleteRouterNetworkInterface` operation and its parameters in one of the language-specific AWS SDKs.

Managing router I/Os in MediaConnect

Router I/Os are where your media streams enter and exit the router. Think of them as the connections between your router and your media sources and destinations.

You'll work with two types of router I/O:

- **Router inputs** - These receive your content from sources such as live camera feeds, satellite downlinks, and studio productions
- **Router outputs** - These deliver your content to destinations such as broadcast transmitters, a playout server, and monitoring displays

Each I/O can handle specific bitrates and protocols, which you set up during I/O creation. You can create as many router I/Os as you need and manage them all from one place, even if they're in different AWS Regions.

This chapter shows you everything you need to know about working with router I/Os.

Topics

- [Creating a router I/O in MediaConnect](#)
- [Viewing router I/Os in MediaConnect](#)
- [Updating a router I/O in MediaConnect](#)
- [Starting a router I/O in MediaConnect](#)
- [Stopping a router I/O in MediaConnect](#)
- [Restarting a router I/O in MediaConnect](#)
- [Deleting a router I/O in MediaConnect](#)
- [MediaConnect router I/O states](#)
- [Integrating router I/Os with MediaConnect flows](#)
- [Integrating router I/Os with MediaLive](#)
- [Source failover and merge for router inputs in MediaConnect](#)

Creating a router I/O in MediaConnect

When you create a router I/O, you'll configure its connection details and operating parameters. Each router I/O connects to an external endpoint, which can be a public IP address, or a private VPC IP address.

You can create two types of router I/Os:

- A **router input**, which receives content from a source endpoint (like a live video feed)
- A **router output**, which sends content to a destination endpoint (like a broadcast service)

MediaConnect assigns each router I/O a permanent IP address. This ensures stable connections between your external endpoints and router I/Os, even when you change internal routing assignments. These connections persist until you either update the I/Os or delete them.

When creating a router I/O, you must specify both a tier and a maximum bitrate. The tier you select determines the capacity limits, performance characteristics, and associated costs. The maximum bitrate must fall within the limits of your selected tier. There are separate tiers for inputs and outputs, each with different capacity limits.

Choose a tier of up to 100 Mbps for compressed video, such as the MPEG transport streams used in typical broadcast contribution workflows. Choose a higher-bitrate tier for TR-07 (JPEG XS) workflows, which carry lightly compressed video at much higher bitrates. In all cases, select the tier whose limit covers your source's maximum bitrate.

You can configure router I/Os with either a Regional routing scope or a global routing scope. By default, they use Regional scope, which restricts them to being assigned only to other router I/Os within the same AWS Region. You can optionally set the routing scope to global, which allows cross-Region routing (additional data transfer costs might apply).

Note

- AWS charges you for active router I/Os based on the tier you select. When a router I/O is active, it charges the hourly rate for that tier. Cross-Region routing and public internet egress for outputs incur additional hourly charges when data transfer is active. For more information, see [MediaConnect pricing](#).
- For router inputs, MediaConnect manages incoming data transfers based on the tier's enforced bitrate limit. If content exceeds this limit, the source stream will be rejected.

Router inputs have a fanout limit, determining the maximum number of outputs that can be simultaneously connected. This is set to 10.

- For router outputs, the maximum bitrate must be greater than or equal to the input it's assigned to.

Prerequisites

- You have an AWS MediaConnect account.
- You know the AWS Region where you want to create the router I/O.
- You've identified the external endpoint that you want to connect to your router I/O.
- You have [created a network interface](#).
- If you want to connect your router I/O to a MediaConnect flow, your flow must be set up for router integration. For more information, see [the section called "Integrating flows"](#).
- If you want to connect your router output to a MediaLive input, your MediaLive input must be set up for router integration. For more information, see [the section called "Integrating MediaLive"](#).
- If you want to connect your router input to a MediaLive channel output, your MediaLive channel must have a MediaConnect Router output group configured. For more information, see [the section called "Integrating MediaLive"](#).

Procedure

Follow these procedures to create a router input or a router output.

To create a router input

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Choose **Create router input**.
4. Under **Router input details**, set up your input:
 - a. **Name** - Give your input a descriptive name.

 Tip

Include details like the content type or source in the name (for example, **StudioA-Live** or **SatelliteFeed1**). This approach makes managing multiple inputs easier as your routing system grows.

- b. **Tier** - Select a tier based on your performance requirements.
- c. **Maximum bitrate** - Specify the highest bitrate that you expect (in bits per second).

 Important

This setting acts as a hard limit. If the incoming content exceeds this bitrate on a sustained basis, the source stream will be suspended and will automatically resume when the bitrate returns to an acceptable range.

- d. **Region** - Select an AWS Region where you want to create this input.

 Tip

Choose a Region close to your upstream content source for optimal performance.

- e. **Routing scope** - Select *regional* to restrict routing to outputs in the same AWS Region, or *global* to enable cross-region routing.
5. Under **Input type**, choose an option and complete its configuration:
- a. **Standard** - To receive content from an external source endpoint, follow these steps:
 - i. Under **Standard router input configuration**, select a network interface to use. For public network interfaces, select the availability zone where the router input will be placed in. For VPC network interfaces, the availability zone is inferred from the network interface subnet.
 - ii. Under **Protocol configuration**, select a protocol and set it up:

RIST
 - 1. **Port** - Enter the listening port for incoming content.
 - 2. **Recovery latency** - Set your desired value in milliseconds.

RTP

1. **Port** - Enter the listening port for incoming content.
2. **Forward error correction** - Choose whether to enable this feature.

SRT Caller

1. **Source address** - Enter the IP address or domain name for the SRT connection.
2. **Router input source port** - Specify the SRT Listener source port.
3. **Minimum latency** - Specify the smallest buffer latency that you want to maintain between the source and the router input.

Note

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

4. **Stream ID** - Enter the identifier for the stream.
5. **SRT Caller decryption configuration** - If you want to enable decryption, follow these steps:
 - a. Select **Enable decryption**.
 - b. Under **Role ARN**, enter the ARN of the role that you created when you set up MediaConnect as a trusted entity.
 - c. Under **Secret ARN**, enter the ARN that AWS Secrets Manager assigned when you created the secret to store the encryption key.

SRT Listener

1. **Port** - Enter the listening port for incoming content.
2. **Minimum latency** - Specify the smallest buffer latency that you want to maintain between the source and the router input.

Note

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

3. **SRT Listener decryption configuration** - If you want to enable decryption, follow these steps:
 - a. Select **Enable decryption**.
 - b. Under **Role ARN**, enter the ARN of the role that you created when you set up MediaConnect as a trusted entity.
 - c. Under **Secret ARN**, enter the ARN that AWS Secrets Manager assigned when you created the secret to store the encryption key.
- b. **MediaConnect Flow** - To receive content from a flow, follow these steps.

Note

This option requires a flow with an output that's been set up for router integration. For more information, see [the section called "Integrating flows"](#). If you want to create the router input and connect the flow at a later time, select the **Do not connect to a MediaConnect flow** option and then select the

availability zone where the router input will be placed in. Both the router input and the upstream flow must be placed in the same availability zone.

- i. Under **MediaConnect flow ARN**, specify the flow that you want to connect to.
- ii. Under **MediaConnect flow output ARN**, specify the output of the flow.
- iii. Under **Flow transit decryption key type**, choose how to decrypt the flow's encrypted content as it moves from the flow to the router input.
 - A. **Automatic encryption key** - Choose this if you want automatic key management (recommended in most cases). With this option, MediaConnect will handle key creation and rotation for you.
 - B. **AWS Secrets Manager encryption key** - Choose this if your security requirements require you to use your own encryption keys. Then, do the following:
 - I. For **Role ARN**, enter the ARN of the IAM role that allows MediaConnect to access your encryption keys.
 - II. For **Secret ARN**, enter the ARN of the secret in Secrets Manager that contains your encryption key.

 Important

The content of the secret must be an AES-256 key in hexadecimal format. The key must have 64 digits.

- c. **MediaLive channel** - To receive content from a MediaLive channel output, follow these steps.

 Note

This option requires a MediaLive channel with a MediaConnect Router output group. For more information, see [the section called "Integrating MediaLive"](#). If you want to create the router input and connect the channel at a later time, select the **Do not connect to a MediaLive channel** option and then select the Availability Zone where the router input will be placed in. Both the router input and the MediaLive channel pipeline must be in the same Availability Zone.

- i. Under **MediaLive channel ARN**, specify the channel that you want to connect to.
 - ii. Under **Pipeline**, specify the pipeline ID of the channel output.
 - iii. Under **Output name**, specify the name of the channel output within the MediaConnect Router output group.
 - iv. Under **Source transit decryption key type**, choose how to decrypt content as it moves from the MediaLive channel to the router input. This must match the encryption type configured on the MediaLive channel output. For details about the available options, see [the section called "Encryption options"](#).
- d. **Failover** - For failover configuration, follow these steps:
- i. Under **Failover router input configuration**, select the network interface and the protocol. For public network interfaces, select the availability zone where the router input will be placed in. For VPC network interfaces, the availability zone is inferred from the network interface subnet.
 - ii. Under **First source protocol configuration**, define the protocol settings for the primary source.

RIST

1. **Port** - Enter the listening port for incoming content.
2. **Recovery latency** - Set your desired value in milliseconds.

RTP

1. **Port** - Enter the listening port for incoming content.
2. **Forward error correction** - Choose whether to enable this feature.

SRT Caller

1. **Source address** - Enter the IP address or domain name for the SRT connection.
2. **Router input source port** - Specify the SRT Listener source port.
3. **Minimum latency** - Specify the smallest buffer latency that you want to maintain between the source and the router input.

 Note

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRT0_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRT0_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

4. **Stream ID** - Enter the identifier for the stream.
5. **Decryption** - If you want to enable decryption, follow these steps:
 - a. Select **Enable decryption**.
 - b. Under **Role ARN**, enter the ARN of the role that you created when you set up MediaConnect as a trusted entity.
 - c. Under **Secret ARN**, enter the ARN that AWS Secrets Manager assigned when you created the secret to store the encryption key.

SRT Listener

1. **Port** - Enter the listening port for incoming content.
2. **Minimum latency** - Specify the smallest buffer latency that you want to maintain between the source and the router input.

 Note

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side,

the receiver buffer is configured by the `SRTTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

3. **Decryption** - If you want to enable decryption, follow these steps:

- a. Select **Enable decryption**.
 - b. Under **Role ARN**, enter the ARN of the role that you created when you set up MediaConnect as a trusted entity.
 - c. Under **Secret ARN**, enter the ARN that AWS Secrets Manager assigned when you created the secret to store the encryption key.
- iii. Under **Second source protocol configuration**, repeat the previous step for the secondary source using a different port number.

 Note

When using RTP with FEC enabled for failover/merge on a router input, MediaConnect automatically reserves three ports: the port you specify, plus the ports that are +2 and +4 from that.
For example, if you specify port 2000 for the input, MediaConnect will also reserve ports 2002 and 2004 for the FEC streams.

- iv. Under **Source priority configuration**, choose how sources are prioritized during failover scenarios.
- A. **No priority** - Choose this if you want MediaConnect to treat the sources with equal priority and switch between them as needed.
 - B. **Primary/Secondary** - Choose this if you want to select one of the sources as a primary source. MediaConnect will switch to the secondary source if the primary source is not available, and will switch back to the primary source as soon as data returns.
- e. **Merge** - For merge configuration, follow these steps:

- i. Under **Merge router input configuration**, select the network interface and the protocol, and define a recovery window in milliseconds.

For public network interfaces, select the availability zone where the router input will be placed in. For VPC network interfaces, the availability zone is inferred from the network interface subnet.

The recovery window is the size of the buffer (delay) that you want MediaConnect to maintain. A larger recovery window means a longer delay in transmitting the stream, but more room for error correction. A smaller recovery window means a shorter delay, but less room for error correction.

- ii. Under **First source protocol configuration**, define the protocol settings for the first source.

RIST

1. **Port** - Enter the listening port for incoming content.
2. **Recovery latency** - Set your desired value in milliseconds.

RTP

1. **Port** - Enter the listening port for incoming content.
2. **Forward error correction** - Choose whether to enable this feature.

- iii. Under **Second source protocol configuration**, repeat the previous configuration step for the second source using a different port number.

Note

When using RTP with FEC enabled for failover/merge on a router input, MediaConnect automatically reserves three ports: the port you specify, plus the ports that are +2 and +4 from that.

For example, if you specify port 2000 for the input, MediaConnect will also reserve ports 2002 and 2004 for the FEC streams.

6. Under **Transit encryption key configuration**, choose how to encrypt content as it moves through the router fabric.

 Note

This encryption applies only to content moving through the router fabric. It is separate from any encryption you configure between your source and input, or between your output and destination.

- a. **Automatic encryption key** - Choose this if you want automatic key management (recommended in most cases). With this option, MediaConnect will handle key creation and rotation for you.
- b. **AWS Secrets Manager encryption key** - Choose this if your security requirements require you to use your own encryption keys. Then, do the following:
 - i. For **Role ARN**, enter the ARN of the IAM role that allows MediaConnect to access your encryption keys.
 - ii. For **Secret ARN**, enter the ARN of the secret in Secrets Manager that contains your encryption key.

 Important

The content of the secret must be an AES-256 key in hexadecimal format. The key must have 64 digits.

7. Under **Maintenance configuration**, choose an option:
 - a. **Default** - Choose this if you want MediaConnect to define the maintenance schedule for you.
 - b. **Preferred day and time** - Choose this if you want to define your own maintenance schedule.
8. Under **Tags**, define up to 50 tags to help you identify and organize this router input.
9. Choose **Create router input**.

To create a router output

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router outputs**.

3. Choose **Create router output**.
4. Under **Router output details**, set up your output:
 - a. **Name** - Give your output a descriptive name.

 Tip

Include details like content type or destination in the name (such as **ControlRoom-Monitor** or **Affiliate1**). This can make managing multiple outputs easier as your routing system grows.

- b. **Tier** - Select a tier based on your performance requirements.
 - c. **Maximum bitrate** - Enter the highest bitrate you expect (in bits per second).

 Important

This setting affects which inputs your output can take a route from. To ensure routing compatibility, the output's maximum bitrate must be at least as large as the input bitrate.

- d. **Region** - Select an AWS Region where you want to create this output.

 Tip

Choose a Region close to your downstream content destination for optimal performance.

- e. **Routing scope** - Select *regional* to restrict routing from inputs in the same AWS Region, or *global* to enable cross-region routing.
5. Under **Output type**, choose one of these options and complete its configuration.
 - a. **Standard** - To send content to an external source endpoint, follow these steps:
 - i. Under **Standard router output configuration**, select a network interface to use. For public network interfaces, select the availability zone where the router output will be placed in. For VPC network interfaces, the availability zone is inferred from the network interface subnet.
 - ii. Under **Protocol configuration**, select a protocol and set it up:

RIST

1. **Destination address** - Specify where you're sending the content.
2. **Port** - Specify the port to use.

RTP

1. **Destination address** - Specify where you're sending the content.
2. **Port** - Specify the port to use.
3. **Forward error correction** - Choose whether to enable this feature.

SRT Caller

1. **Destination address** - Enter the IP address or domain where you're sending the content to.
2. **Port** - Specify the port to use.
3. **Minimum latency** - Specify the smallest buffer latency that you want to maintain between the router output and the destination.

Note

The SRT protocol uses a minimum latency configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer might overflow, causing the stream to fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the maximum bitrate value multiplied by the minimum latency value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

4. **Stream ID** (optional) - Enter an identifier for the stream.

5. **SRT Caller encryption configuration** - If you want to enable encryption, follow these steps:
 - a. Select **Enable encryption**.
 - b. Under **Role ARN**, enter the ARN of the role that you created when you set up MediaConnect as a trusted entity.
 - c. Under **Secret ARN**, enter the ARN that AWS Secrets Manager assigned when you created the secret to store the encryption key.

SRT Listener

1. **Port** - Specify the port to use.
2. **Minimum latency** - Specify the smallest buffer latency that you want to maintain between the router output and the destination.

Note

The SRT protocol uses a minimum latency configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer might overflow, causing the stream to fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the maximum bitrate value multiplied by the minimum latency value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

3. **SRT Listener encryption configuration** - If you want to enable encryption, follow these steps:
 - a. Select **Enable encryption**.
 - b. Under **Role ARN**, enter the ARN of the role that you created when you set up MediaConnect as a trusted entity.
 - c. Under **Secret ARN**, enter the ARN that AWS Secrets Manager assigned when you created the secret to store the encryption key.

RTMP Push

1. Choose how to enter the destination:

- Choose **Enter a URL** to paste a complete RTMP or RTMPS URL. MediaConnect fills in the scheme, destination address, port, and application name from the URL. Use the format `rtmp(s)://Address[:Port]/ApplicationName`. If you omit the port, MediaConnect uses the default (1935 for RTMP, 443 for RTMPS).
- Choose **Enter fields separately** to specify each field individually:
 - a. **Scheme** - Choose **RTMP**, or **RTMPS** to encrypt the connection with TLS.
 - b. **Destination address** - Enter where you're sending the content. For RTMP, this can be an IP address or a domain name. For RTMPS, you must specify a domain name.
 - c. **Port** - Specify the port to use. For RTMP, use a port from 1024 to 65535. For RTMPS, use 443 or a port from 1024 to 65535.
 - d. **Application name** - Enter the application name that your destination expects.

2. **Stream name** - Enter the stream name that your destination expects.

3. **TLS encryption type** - If you chose **RTMPS**, keep this set to **Public**. MediaConnect supports public certificate-based TLS encryption only.

Note

RTMP Push has the following requirements and limitations:

- The application name and stream name can each be up to 1,024 characters, can contain only printable ASCII characters, can't begin or end with a space, and can't contain double quotation marks or backslashes.
- The content must use the H.264 video codec and the AAC audio codec.
- For RTMPS, MediaConnect supports public certificate-based TLS encryption only. Enhanced RTMP (E-RTMP) isn't supported.

b. **MediaConnect Flow** - To send content to a flow, follow these steps.

 Note

This option requires a flow with a source that's been set up for router integration. For more information, see [the section called "Integrating flows"](#).

If you want to create the router output and connect the flow at a later time, select the **Do not connect to a MediaConnect flow** option and then select the availability zone where the router output will be placed in. Both the router output and the downstream flow must be placed in the same availability zone.

- i. Under **MediaConnect flow ARN**, specify the flow that you want to connect to.
- ii. Under **MediaConnect flow source ARN**, specify the source of the flow.
- iii. Under **Transit encryption key type**, choose how to encrypt the content as it moves from the router output to the flow.
 - A. **Automatic encryption key** - Choose this if you want automatic key management (recommended in most cases). With this option, MediaConnect will handle key creation and rotation for you.
 - B. **AWS Secrets Manager encryption key** - Choose this if your security requirements require you to use your own encryption keys. Then, do the following:
 - I. For **Role ARN**, enter the ARN of the IAM role that allows MediaConnect to access your encryption keys.
 - II. For **Secret ARN**, enter the ARN of the secret in Secrets Manager that contains your encryption key.

 Important

The content of the secret must be an AES-256 key in hexadecimal format. The key must have 64 digits.

- c. **MediaLive input** - To send content to a MediaLive input, follow these steps.

 Note

This option requires a MediaLive input that's been set up for router integration. For more information, see [the section called "Integrating MediaLive"](#).

If you want to create the router output and connect the MediaLive input at a later time, select the **Do not connect to a MediaLive input** option and then select the availability zone where the router output will be placed in. Both the router output and the downstream MediaLive input must be placed in the same availability zone.

- i. Under **MediaLive input ARN**, specify the input that you want to connect to.
- ii. Under **Pipeline**, specify the pipeline that you want to use.
- iii. Under **Transit encryption key type**, choose how to encrypt the content as it moves from the router output to the MediaLive input.
 - A. **Automatic encryption key** - Choose this if you want automatic key management (recommended in most cases). With this option, MediaConnect will handle key creation and rotation for you.
 - B. **AWS Secrets Manager encryption key** - Choose this if your security requirements require you to use your own encryption keys. Then, do the following:
 - I. For **Role ARN**, enter the ARN of the IAM role that allows MediaConnect to access your encryption keys.
 - II. For **Secret ARN**, enter the ARN of the secret in Secrets Manager that contains your encryption key.

 Important

The content of the secret must be an AES-256 key in hexadecimal format. The key must have 64 digits.

6. Under **Router fabric configuration**, choose an option for **Recovery latency mode**:
 - a. **Balanced** - Choose this if you want MediaConnect to optimize for stream quality. This is the default mode.
 - b. **Low latency** - Choose this if you want to reduce latency. This mode can reduce stream quality under adverse network conditions.
7. Under **Maintenance configuration**, choose an option:
 - a. **Default** - Choose this if you want MediaConnect to define the maintenance schedule for you.

- b. **Preferred day and time** - Choose this if you want to define your own maintenance schedule.
8. Under **Tags**, define up to 50 tags to help you identify and organize this router output.
9. Choose **Create router output**.

Next steps

- To view the router I/Os you've created, see [Viewing router I/Os in MediaConnect](#).
- To start using your router I/O, see [Starting a router I/O in MediaConnect](#).
- To control how your media flows through the router, see [Managing routes in MediaConnect](#).

Additional resources

To create router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [CreateRouterInput](#)
- [CreateRouterOutput](#)

This includes information about how to use the `CreateRouterInput` and `CreateRouterOutput` operations and parameters in one of the language-specific AWS SDKs.

Viewing router I/Os in MediaConnect

You can view your router inputs and outputs in the MediaConnect console. For each input and output, you can see the status, connections, and monitoring details.

Prerequisites

The following procedure assumes you have at least one router I/O in your AWS account.

Procedure

Follow these steps to view the router I/Os that are available in your AWS account.

To view your router inputs

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Review the list of your inputs, which shows basic information such as the following:

Router inputs list fields

Field	What it tells you
Name	The name that you gave this router input.
Region	Where this input is located.
Type	The type of router input.
State	The current status of this router input. For more information, see MediaConnect router I/O states .
Routed outputs	The number of outputs that are currently taking this input.
Time until maintenance	The countdown that shows when the next scheduled maintenance starts for this input.

4. To see more information about a router input, select an input and choose **View details**.
5. Use these tabs to find specific information about the router input:

Router input details tabs

Tab	What you'll find here
Monitoring	Live status information including properties, thumbnail data, maintenance schedule countdown, and alerts.
Metrics	Performance data for this input.
Assigned outputs	The outputs which are currently taking this input.
Configuration	The current settings for this input.
Tags	The tags that are currently applied to this input.

To view your router outputs

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router outputs**.
3. Review the list of your outputs, which shows basic information such as the following.

Router outputs list fields

Field	Description
Name	The name that you gave this output.
Region	Where this output is located.
Type	The type of output.
State	The current status of this output.
Routed state	The current routing status of the output. • Routing - The output is in the process of connecting to an input, or disconnecting from an input. • Routed - The output is currently taking an input. • Unrouted - The output is not currently taking any input.

Field	Description
Time until maintenance	The countdown that shows when the next scheduled maintenance starts for this input.

4. To see more information about a router output, select an output and choose **View details**.
5. Use these tabs to find specific information about the router output.

Router output details tabs

Tab	What you'll find here
Monitoring	Live status information for the output, including health metrics and alerts.
Metrics	Performance data for this output.
Assigned input	The current status of the input that this output is taking.
Configuration	Your output's settings, network details, and tags.
Tags	The tags that are currently assigned to this output.

Next steps

After reviewing your router inputs and outputs, you can perform the following actions:

- [Starting a router I/O in MediaConnect](#)
- [Managing routes in MediaConnect](#)

Additional resources

To view router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [ListRouterInputs](#)
- [ListRouterOutputs](#)
- [GetRouterInput](#)
- [GetRouterInputThumbnail](#)

- [GetRouterOutput](#)
- [BatchGetRouterInput](#)
- [BatchGetRouterOutput](#)

This includes information about how to use these operations and parameters in one of the language-specific AWS SDKs.

Updating a router I/O in MediaConnect

When your requirements change, you can edit existing router I/Os to meet your needs. You can update the I/O name, description, maximum bitrate, protocol settings, and other configuration parameters at any time.

Prerequisites

- The following procedure assumes you've already created at least one router I/O.
- If you want to update a router I/O's maintenance configuration, you must ensure that the router I/O is in **Standby** state.
- If you want to connect your router I/O to a MediaConnect flow, your flow must be set up for router integration. For more information, see [the section called "Integrating flows"](#).
- If you want to connect your router output to a MediaLive input, your MediaLive input must be set up for router integration. For more information, see [the section called "Integrating MediaLive"](#).
- If you want to connect your router input to, or disconnect it from, a MediaLive channel output, your MediaLive channel must have a MediaConnect Router output group configured. For more information, see [the section called "Integrating MediaLive"](#).

Procedure

To update a router input

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to update and choose **Edit**.
4. Update the router input details as needed.
5. Choose **Save changes**.
6. Check the outcome:
 - a. If successful: The router input will be updated with your changes.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

To update a router output

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

2. In the navigation pane, choose **Router outputs**.
3. Select the router output that you want to update and choose **Edit**.
4. Update router output details as needed.

 Note

You cannot change the **Recovery latency mode** while the output is taking an input. Clear the input assignment for the output, and then change the mode.

5. Choose **Save changes**.
6. Check the outcome:
 - a. If successful: The router output will be updated with your changes.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

Next steps

After you update a router I/O, you can [review the updated I/O](#) to verify that your updates were successful.

Additional resources

To update router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [UpdateRouterInput](#)
- [UpdateRouterOutput](#)

This includes information about how to use these operations and their parameters in one of the language-specific AWS SDKs.

Starting a router I/O in MediaConnect

Before you can deliver content through the router, you must first start the router I/O that you want to use. This action changes the router input or output status to **Active**.

Prerequisites

The following procedure assumes that you've already created a router input or a router output.

Procedure

Follow these steps to start a router input or output.

To start a router input

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to start.
4. Choose **Start**.
5. Check the outcome:
 - a. If successful: You'll see the status change from **Standby** to **Starting**, and then to **Active**.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

To start a router output

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router outputs**.
3. Select the router output that you want to start.
4. Choose **Start**.
5. Check the outcome:
 - a. If successful: You'll see the status change from **Standby** to **Starting**, and then to **Active**.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

Next steps

You can now use these I/Os in your routing assignments. To assign routes between your inputs and outputs, see [Managing routes in MediaConnect](#).

Additional resources

To start router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [StartRouterInput](#)
- [StartRouterOutput](#)

This includes information about how to use the `StartRouterInput` and `StartRouterOutput` operations and parameters in one of the language-specific AWS SDKs.

Stopping a router I/O in MediaConnect

You can stop a router input or output when you need to temporarily pause its operation. When you stop an I/O, it changes to a Standby state and stops incurring charges.

Important things to know about stopping I/Os:

- You can stop and start a router I/O at any time.
- Stopping a router I/O doesn't affect your other I/Os or their takes.
- When you stop an I/O, MediaConnect cancels any maintenance restarts that were scheduled when the I/O was started.
- When you stop an I/O, its routing assignments remain in place. For example:
 - If you stop an output, it maintains its input assignment and will resume the same connection when restarted.
 - If you stop an input, connected outputs will stop receiving video, but their routing connections and capacity reservations are preserved.

Prerequisites

Before you start, ensure you have:

- An active router input or router output
- No active processes that require the I/O

Procedure

Follow these steps to stop a router input or a router output.

To stop a router input

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to stop.
4. Choose **Stop**.
5. Check the outcome:
 - a. If successful: The router input status will change to **Stopping**, then **Standby**.

- b. If unsuccessful: You'll see an error message explaining what went wrong.

To stop a router output

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router outputs**.
3. Select the router output that you want to stop.
4. Choose **Stop**.
5. In the confirmation dialog, choose **Stop router output**.
6. Check the outcome:
 - a. If successful: The router output status will change to **Stopping**, then **Standby**.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

Next steps

After stopping an I/O, you can:

- [Restart the I/O](#) later when needed.
- [Delete the I/O](#) if you won't use it again.
- [Create a new I/O](#) with different settings.

Additional resources

To stop router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [StopRouterInput](#)
- [StopRouterOutput](#)

This includes information about how to use the `StopRouterInput` and `StopRouterOutput` operations and parameters in one of the language-specific AWS SDKs.

Restarting a router I/O in MediaConnect

You can manually restart your router I/Os in MediaConnect when you need to perform maintenance or system updates. MediaConnect automatically performs maintenance restarts every 60-66 days from the initial start date. However, manual restarts give you additional flexibility to manage your router I/Os on your own schedule.

Note

Restarting a router I/O also applies any pending maintenance updates and resets the maintenance countdown. For more information about how maintenance works for router I/Os, see [Maintenance in MediaConnect](#).

Prerequisites

Before you start, ensure that you have an active router input or output.

Procedure

Follow these steps to restart a router input or output.

To restart a router input

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to restart.
4. Choose **Restart**.
5. The router input status changes to **Migrating** while it restarts, and then returns to **Active**.

To restart a router output

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router outputs**.
3. Select the router output that you want to restart.
4. Choose **Start**.
5. The router output status changes to **Migrating** while it restarts, and then returns to **Active**.

Next steps

After manually restarting an I/O, you can:

- [Monitor its status](#) in the console
- [View the countdown](#) until the next scheduled maintenance restart
- [Update the maintenance schedule if needed](#) (must put I/O in standby mode first)

Additional resources

To restart router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [RestartRouterInput](#)
- [RestartRouterOutput](#)

This includes information about how to use the `RestartRouterInput` and `RestartRouterOutput` operations and parameters in one of the language-specific AWS SDKs.

Deleting a router I/O in MediaConnect

When you no longer need a router input or output, you can delete it from your configuration. This permanently removes the I/O and frees up its resources. You might delete a router I/O when you want to switch to a different routing setup or clean up your unused resources.

Important

Deleting a router I/O is permanent and can't be undone. When you delete a router I/O, any takes using this router I/O will be removed.

Prerequisites

Before you start:

- Make sure that the I/O you want to delete is either in Standby or Stopping state.
- Make sure that the router I/O isn't connected to a flow or a MediaLive channel.
- For inputs: Ensure the input is not assigned to any outputs.
- Consider documenting the I/O's configuration in case you need to recreate it later.

Procedure

To delete a router input

To delete a router input

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the input that you want to delete and choose **View resources**.
4. Choose **Delete**.
5. In the dialog box that appears, choose **Delete router input** to confirm your decision.
6. Check the outcome:
 - a. If successful: The router output status will change to Deleted.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

To delete a router output

To delete a router output

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router outputs**.
3. Select the router output that you want to delete and choose **View resource**.
4. Choose **Delete**.
5. In the dialog box that appears, choose **Delete router output** to confirm your decision.
6. Check the outcome:
 - a. If successful: The router output status will change to Deleted.
 - b. If unsuccessful: You'll see an error message explaining what went wrong.

Next steps

After deleting an I/O, you can:

- [Create a new router I/O](#) with different settings if needed.
- [Review your remaining router I/Os](#) to ensure your routing setup is complete.

Additional resources

To delete router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [DeleteRouterInput](#)
- [DeleteRouterOutput](#)


This includes information about how to use the `DeleteRouterInput` and `DeleteRouterOutput` operations and parameters in one of the language-specific AWS SDKs.

MediaConnect router I/O states

An AWS Elemental MediaConnect router I/O transitions through different states from the moment you create it through to the moment you delete it. These states can be grouped into several categories:

- Operational transitions: **Starting** and **Stopping** states manage the activation of an I/O
- Settings updates: The **Updating** state handles modifications to an I/O's configuration
- Maintenance: The **Migrating** state indicates that the I/O is undergoing a maintenance operation

The following illustration shows the I/O lifecycle and the transitions between I/O states. Note that depending on the type of I/O, it may begin its lifecycle directly in the **Standby** state, bypassing the **Creating** state.

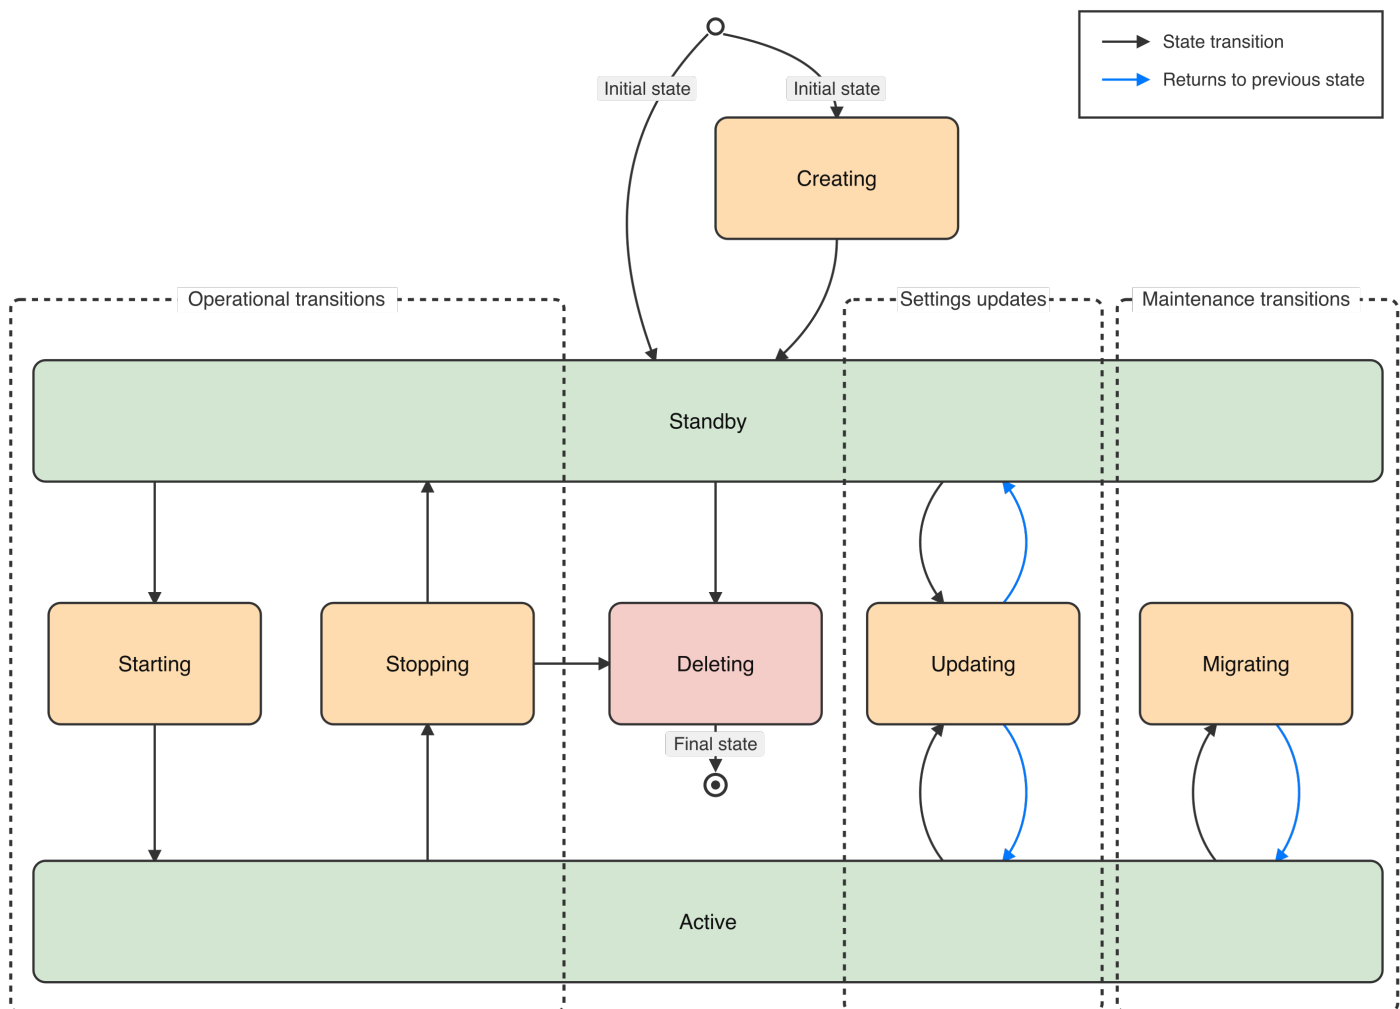

State definitions

The following definitions describe each state in detail, in the order you might typically encounter them:

Creating

MediaConnect is creating the router I/O and setting up the necessary resources and configurations. During this process, the service prepares the I/O to handle content routing and establishes its initial settings.

Standby

The router I/O is ready for use. This is the default state after you create or stop an I/O. In this state, the I/O is fully configured and idle, but is prepared to start processing content as soon as you activate it.

Starting

This is a transition state where MediaConnect is starting up the router I/O to prepare for content processing. The service activates the necessary components to begin handling media streams according to the I/O's configuration.

Active

The router I/O is actively processing content. For inputs, this means receiving content from the source and making it available for routing. For outputs, this means receiving routed content and sending it to the configured destination.

Updating

This is a configuration change state where MediaConnect is updating specific settings for the I/O, such as the protocol configuration or maximum bitrate. During this state, the service applies the requested changes while maintaining the I/O's existing connections and routing assignments.

Migrating

MediaConnect is in the process of performing a maintenance operation on the router I/O. This state occurs during scheduled maintenance windows or manual restart operations. The I/O returns to its previous state after the maintenance operation completes.

Stopping

This is a transition state where MediaConnect is stopping the router I/O's operations. The service stops content processing and prepares the I/O to return to the Standby state.

Deleting

MediaConnect is in the process of permanently removing the router I/O. After this state, the router I/O will no longer exist.

In addition, the following states manage error handling:

Error

This is an error handling state where the router I/O has encountered an issue that prevents normal operation. Common issues that can trigger this state include network connectivity problems, resource constraints, or configuration conflicts. The I/O remains in this state until MediaConnect can initiate recovery procedures or until manual intervention resolves the underlying issue.

Recovering

This is an error handling state where MediaConnect is attempting to resolve issues that caused the I/O to enter an error state. During this state, MediaConnect works to restore the I/O's functionality based on its configured settings and routing assignments.

Integrating router I/Os with MediaConnect flows

You can integrate your AWS Elemental MediaConnect flows with your router I/Os to extend your media workflow capabilities. This enables you to combine the flexibility of the router with the distribution features of flows.

You can connect your flows to your router setup in two ways:

1. Use a flow as a source for a router input

When you connect a flow to a router input, you can incorporate existing flow workflows into your routing setup. This is useful when you want to:

- Route content from existing flows through the router fabric
- Combine flow and router capabilities in the same workflow
- Maintain existing flow setups while adding routing capabilities

2. Use a flow as a destination for a router output

When you connect a router output to a flow, you can use your flow as a distribution amplifier for your routed content. This setup is useful when you want to:

- Distribute router output to multiple destinations
- Enable cross-account access through flow entitlements
- Send content to AWS Elemental MediaLive using managed outputs

Prerequisites

Before you start, review these important considerations:

- **For connections between router inputs and flows**
 - The router inputs and flow outputs must be in the same availability zone and AWS Region.
 - A flow output can connect to one router input at a time. To switch connections, disconnect the flow output first.
 - You can't delete connected resources. You must disconnect the flow from the router input before you can delete either resource.
- **For connections between router outputs and flows**
 - If the flow has two sources, both sources must be connected to the router output.
 - A router output can connect to one flow at a time.

- You can connect two router outputs to two flow sources on the same flow and perform fail over between them.
- Only failover is supported between flow sources. Merge is not supported.
- You can't delete connected resources. You must disconnect the flow from the router output before you can delete either resource.
- When switching the content being routed to a connected flow source, we recommend using the **Take Router Input** operation on the connected router output. This performs a faster and cleaner switch than changing the router output directly, which can potentially cause brief video interruptions.

Procedure

Connecting a router input to a flow

To connect a router input to a flow output

1. [Add an output](#) to your flow, making sure that the flow output has **Router integration** enabled.
2. [Create](#) or [update](#) a router input with the following settings:
 - Choose **Flow** as the configuration type
 - Specify the desired flow output from step 1
3. [Start the flow](#).
4. [Start the router input](#).

When the router input and the flow are running, and the router input is assigned to an active router output, the stream is forwarded from the flow through the router.

Disconnecting a router input from a flow

To disconnect a router input from a flow output

1. [Edit](#) the router input.
2. Select **Do not connect to a MediaConnect flow**.
3. Choose **Save changes**.

The router input keeps its other settings and returns to a disconnected state. You can connect it to a flow output again at any time.

Connecting a router output to a flow

To connect a router output to a flow source

1. [Create](#) or [update](#) a flow, making sure that the flow source has **Router integration** enabled.
2. [Create](#) or [update](#) a router output with the following settings:
 - Choose **Flow** as the configuration type
 - Specify the desired flow source from step 1
3. [Start the flow](#).
4. [Start the router output](#).

When the router output and the flow are running, and the router output is taking an active router input, the stream is forwarded through the router to the flow.

Disconnecting a router output from a flow

To disconnect a router output from a flow source

1. [Edit](#) the router output.
2. Select **Do not connect to a MediaConnect flow**.
3. Choose **Save changes**.

The router output keeps its other settings and returns to a disconnected state. You can connect it to a flow source again at any time.

Troubleshooting

- To update the transit encryption or decryption key configuration, you must first disconnect the router I/O from the flow.

Additional resources

Connection management is focused on the router. You use the router API operations to select a flow output to feed into your router input, or a flow source to receive content from your router output.

To connect flows to router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [CreateRouterInput](#)
- [CreateRouterOutput](#)
- [UpdateRouterInput](#)
- [UpdateRouterOutput](#)

This includes information about how to use these operations and parameters in one of the language-specific AWS SDKs.

Integrating router I/Os with MediaLive

You can integrate your AWS Elemental MediaLive channels with your router I/Os in AWS Elemental MediaConnect. This enables you to combine the flexibility of the router with the processing and encoding capabilities of MediaLive.

You can connect MediaLive to your router setup in two ways:

1. Use a MediaLive input as a destination for a router output

When you connect a router output to a MediaLive input, you can send routed content to MediaLive for processing. This is useful when you want to:

- Incorporate MediaLive channels into your routing workflow
- Dynamically switch which routed content is sent to MediaLive for processing

2. Use a MediaLive channel output as a source for a router input

When you connect a MediaLive channel output to a router input, you can route processed content for global distribution. This is useful when you want to:

- Use MediaLive processing features like content normalization, SCTE-35 processing, and clip replay before routing
- Distribute MediaLive output across regions using the router's cross-region capabilities

Prerequisites

Before you start, ensure that:

- You have administrator permissions for MediaConnect
- You can coordinate with a MediaLive operator who has administrator permissions for MediaLive

Note

This page describes the process from the MediaConnect perspective, assuming coordination with an operator managing MediaLive. One operator can perform both roles if they have the necessary permissions.

- Your MediaLive operator has configured the necessary permissions for MediaLive to interact with MediaConnect. They can choose their preferred approach:

- **Simple option**

Use the `MediaLiveAccessRole`, which includes all necessary permissions for MediaLive to work with MediaConnect. This is the simplest option, and we recommend it for most use cases. For instructions, see [Create the trusted entity - simple option](#).

- **Complex option**

Create your own IAM policy and role if you need more specific custom permissions. For instructions, see [Create the trusted entity - complex option](#).

Keep in mind the following important considerations when using this feature:

- The router I/O and the MediaLive pipeline must be in the same Availability Zone and AWS Region.
- The encryption scheme on the router side must match the encryption scheme on the MediaLive side.
- You can't delete connected resources. You must disconnect them first.
- A MediaLive resource (input or channel output) can only be connected to one router I/O at a time.
- You need the appropriate MediaLive permission on the target resource (`medialive:UpdateInput` for inputs, `medialive:UpdateChannel` for channels).

Encryption options

You can use the following encryption options for content moving between MediaConnect and MediaLive:

Automatic encryption key

MediaConnect and MediaLive handle encryption automatically with no manual key management required. This is the simplest option, and we recommend it for most use cases.

AWS Secrets Manager encryption key

Use this option if you must manage your own encryption keys. To use this option, provide the following:

- **Role ARN** – The ARN of the IAM role that allows the service to access your encryption keys.
- **Secret ARN** – The ARN of the secret in Secrets Manager that contains your encryption key.

⚠ Important

The content of the secret must be an AES-256 key in hexadecimal format. The key must have 64 digits.

ℹ Note

If you use AWS Secrets Manager encryption, make sure the encryption configuration matches on both the MediaConnect and MediaLive sides. Both services must be authorized to access the secret.

Procedure

Follow the steps for the direction of integration that you want to set up.

Connecting a router output to a MediaLive input

To connect a router output to a MediaLive input

1. Create an input in MediaLive

Ask your MediaLive operator to create an input with the following settings:

- The input type must be **MediaConnect router**.
- They must specify an Availability Zone for each pipeline.
 - For a single-pipeline input, specify one Availability Zone.
 - For a standard (dual-pipeline) input, specify two Availability Zones.
- The pipeline ID must be either 0 or 1.
- Choose the encryption type. For more information, see [the section called “Encryption options”](#).

After creation, the MediaLive input appears in the MediaConnect console as an available destination for your router output.

2. Create a router output in MediaConnect

Create or update a router output with the following settings:

- Choose **MediaLive input** as the output type.
- Specify the ARN of the MediaLive input from step 1.
- Specify the pipeline ID (0 or 1).
- Choose the encryption type to match the MediaLive input. For more information, see [the section called “Encryption options”](#).

3. Create a channel in MediaLive

The MediaLive operator must create a MediaLive channel and attach the MediaLive input from step 1. With this setup in place, you can send video from the MediaConnect router to MediaLive.

Disconnecting a router output from a MediaLive input

To disconnect a router output from a MediaLive input

1. [Edit](#) the router output.
2. Select **Do not connect to a MediaLive input**.
3. Choose **Save changes**.

The router output keeps its other settings and returns to a disconnected state. You can connect it to a MediaLive input again at any time.

Connecting a router input to a MediaLive channel output

To connect a router input to a MediaLive channel output

1. Create a MediaConnect Router output group in MediaLive

Ask your MediaLive operator to configure the channel with a MediaConnect Router output group with the following settings:

- Specify an Availability Zone for each pipeline.
- Add one or more outputs to the output group.
- Choose the encryption type. For more information, see [the section called “Encryption options”](#).

2. Create a router input in MediaConnect

Create or update a router input with the following settings:

- Choose **MediaLive channel** as the input type.
- Specify the ARN of the MediaLive channel from step 1.
- Specify the pipeline ID (0 or 1).
- Specify the output name from the Router output group.
- Choose the decryption type to match the MediaLive channel output. For more information, see [the section called “Encryption options”](#).

 Note

You can create the router input in a disconnected state and connect it to the MediaLive channel output later.

3. Start the channel and router input

Start both the MediaLive channel and the router input. With this setup in place, you can send processed content from MediaLive to the MediaConnect router.

Disconnecting a router input from a MediaLive channel output

To disconnect a router input from a MediaLive channel output

1. [Edit](#) the router input.
2. Select **Do not connect to a MediaLive channel**.
3. Choose **Save changes**.

The router input keeps its other settings and returns to a disconnected state. You can connect it to a MediaLive channel output again at any time.

Troubleshooting

If you encounter issues with this workflow, use this checklist to identify and resolve common problems:

- The MediaLive resource (input or channel) that you specified exists in your AWS account.

- The MediaLive resource is the correct type (MediaConnect router input type for inputs, or a channel with a MediaConnect Router output group configured).
- The router I/O and the MediaLive pipeline are in the same Availability Zone and AWS Region.
- The encryption scheme on the router side matches the encryption scheme on the MediaLive side.
- You have the appropriate MediaLive permission on the target resource (mediaLive:UpdateInput for inputs, mediaLive:UpdateChannel for channels).
- The MediaLive resource is not already connected to another router I/O.
- To update the transit encryption or decryption key configuration, you must first disconnect the router I/O from the MediaLive input or channel output.

Additional resources

Connection management is focused on the router. You use the router API operations to create router inputs and outputs that connect to MediaLive channels and inputs.

To connect MediaLive resources to router I/Os programmatically, see the following pages in the *MediaConnect API Reference*:

- [CreateRouterInput](#)
- [CreateRouterOutput](#)
- [UpdateRouterInput](#)
- [UpdateRouterOutput](#)

This includes information about how to use these operations and parameters in one of the language-specific AWS SDKs.

Source failover and merge for router inputs in MediaConnect

MediaConnect supports two types of redundancy configurations for router inputs: **Failover** and **Merge**.

Failover mode

In failover mode, a router input can have two sources. The router input will automatically switch sources based on the source priority configuration. If no priority is defined, the router input will randomly use one of the sources and will switch to the other source if the active source does not send data for 500 milliseconds. If one source is defined as the *Primary* source, the router input will use the primary source and will switch to the secondary source if the primary source does not send data for 500 milliseconds. The router input will switch back to the primary source as soon as data returns.

To create a failover router input, you specify the input type as **Failover** and provide a protocol configuration for each source. MediaConnect treats the first source as the primary, and the second as the backup.

For instructions on how to create or update a router input, see [????](#) and [????](#).

Merge mode

In merge mode, a router input accepts two identical, simultaneous video streams on the same IP address but different ports. MediaConnect merges the content of the two streams at the network packet level, allowing a graceful recovery from any single-source loss. For example: if the router input is using source A and packet 123 is missing, MediaConnect pulls in packet 123 from source B and continues using source A.

To create a merge router input, you specify the router input type as **Merge** and provide a protocol configuration for each source. The two sources must be binary identical, which means that they need to have originated from the same encoder. Additionally, if the sources use RTP protocol, they must have RTP headers with aligned sequence numbers and they must also comply with the SMPTE ST 2022-7 standard.

When configuring a merge router input, you can also set a recovery window. This is the size of the buffer (delay) that you want MediaConnect to maintain. A larger recovery window means a longer delay in transmitting the stream, but more room for error correction. A smaller recovery window means a shorter delay, but less room for error correction.

For instructions on how to create or update a router input, see [???](#) and [???](#).

Supported protocols

The following table describes which source protocols support failover and merge for MediaConnect router inputs.

Protocol	Does this protocol support source failover?	How many sources can be added?	Supported failover modes
RIST	Yes	2	Merge or failover
RTP	Yes	2	Merge or failover
SRT listener	Yes	2	Failover only
SRT caller	Yes	2	Failover only

Managing routes in MediaConnect

After you've set up your router I/Os, you can control how content flows between them by assigning and unassigning routes. A route connects an input to one or more outputs, determining where your content goes. For example, you might route a live sports feed to multiple regional broadcasters, send a studio production to both transmission and recording, or direct archive content to specific distribution channels.

All routing happens inside MediaConnect, letting you switch sources immediately and send one input to multiple outputs. You can manage everything from one place, even across different AWS Regions, giving you centralized control of your resources.

MediaConnect provides two ways to manage your route assignments:

1. Router control panel view

This real-time control interface is ideal for live production. Like a traditional broadcast router, it lets you make immediate changes and see them take effect immediately. Visual indicators help you monitor your routes' status during live events.

2. Router matrix view

When you need to plan more complex changes, the matrix view lets you set up multiple route changes at once. You can preview your changes before applying them, making it particularly useful for scheduled program changes and complex routing scenarios.

3. Output details page

For quick changes to individual outputs, you can use the Take Input option on any output details page. This method lets you select a new input for a single output without opening the control panel or matrix view.

As you work with routes, remember that outputs are unassigned by default. You can take (assign) an input from any compatible output, regardless of whether the output is active or in standby. Taking a new input changes which source signal flows to the destination, similar to using a traditional switching router. These routing changes don't affect your external endpoint connections between your source and input, or between your output and destination.

This chapter shows you how to use both the router control panel view and the router matrix view to manage your route assignments.

Topics

- [Using the router control panel view in MediaConnect](#)
- [Using the router matrix view in MediaConnect](#)

Using the router control panel view in MediaConnect

The router control panel view provides an intuitive interface for taking inputs and monitoring your routes in real time, similar to a traditional broadcast router. You can use the control panel to see your current routing assignments at a glance, and make immediate changes.

When routing content through the control panel, remember these key points:

- Each output can take content from only one input at a time
- Each input can send content to multiple outputs

Tip

If you need to quickly change just one output, you can also take an input from the output details page. This alternative method works well for individual changes, while the control panel is better suited for managing multiple routes.

Prerequisites

Before you get started, ensure the following:

- You have one or more router inputs
- You have one or more router outputs
- The router inputs and outputs are compatible for pairing

Note

Outputs are checked for compatibility with inputs based upon routing scope and maximum bitrate. When the routing scope is set to regional for a router I/O, it is only compatible with I/O resources in the same AWS Region. To enable a router input or output for cross-region operation, set the routing scope to global.

Also, router outputs are only compatible with router inputs of equal or lesser maximum bitrate. For example, if an input is 20 Mbps, you can't route it to an output that's set up for less than 20 Mbps.

Procedure

Follow these procedures to review and assign routes in the control panel.


To review the router control panel

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. Choose **Router control panel**. The control panel displays two main sections:
 - Input tiles represent your available content sources
 - Output tiles represent your available destinations
3. To see all of your router I/Os in the control panel, choose **Auto-select inputs** and **Auto-select outputs**.
 - Alternatively, you can manually select inputs and outputs in the **Configure control panel** pane. This is useful when managing a subset of routes, like those for a particular event or program.
4. (Optional) Customize your control panel experience with these options:
 - Turn on **Abbreviate resource names** to show shortened I/O names.
 - Select **Locked** to prevent accidental routing changes.
 - Select **Real-time control** to enable immediate routing changes.

Important

Be careful when enabling real-time control. All changes take effect immediately, and your output takes the selected input in real time.


The following image shows the control panel with no active routes.

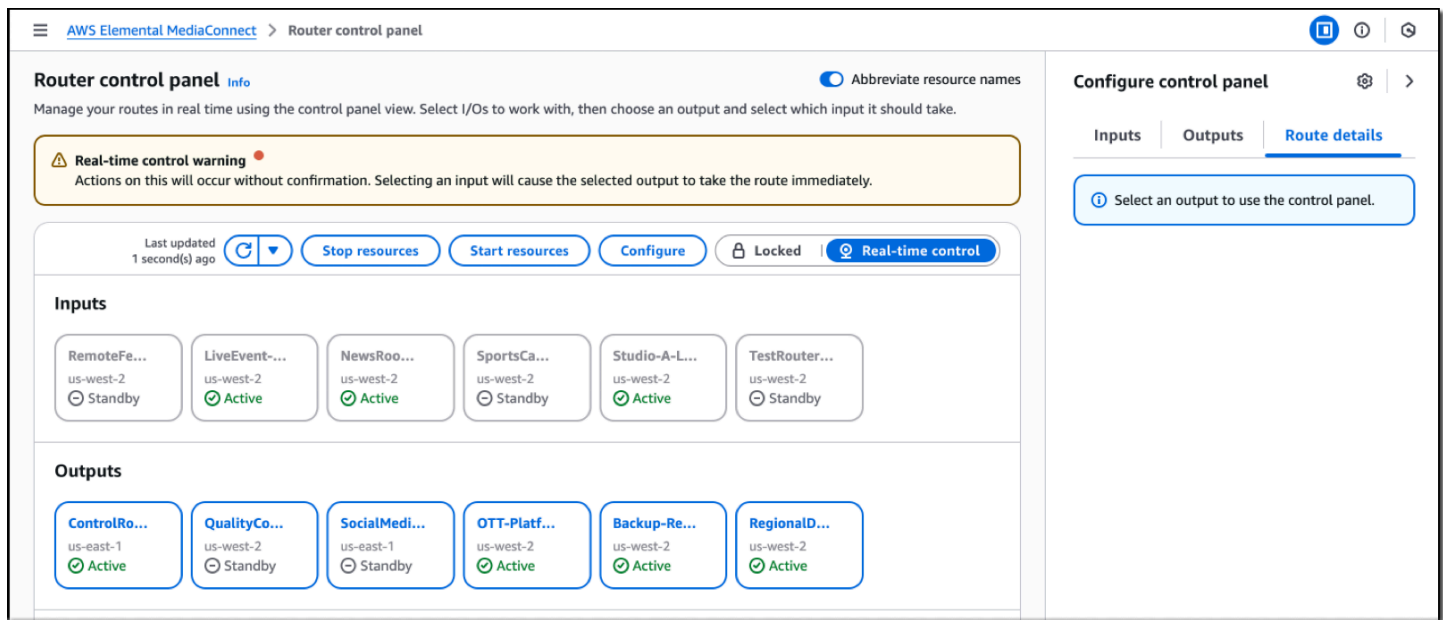

To make changes on the router control panel

1. In the router control panel, select **Real-time control** to enable immediate routing changes.
2. Select an output to work with.
3. Choose what you want to do:
 - a. To set up a new route: Select the input that you want your output to take.
 - b. To change an existing route: Select a different input for your output to take.
 - c. To remove an existing route: Deselect the current input.
4. Review the outcome:
 - a. For a new route: You'll see a success message, and the input tile flashes yellow while the take is in progress. When the take is complete, the input is highlighted blue to indicate the new connection.
 - b. For a cleared route: You'll see a success message appears, and the input tile's highlight will disappear.
 - c. For a failed change: You'll see an error message explaining the problem, and your route won't change.
5. When you're done making changes, choose **Locked** to change the control panel to read-only mode and prevent accidental takes.

In the following image, the blue highlight shows an active route between an input (SportsCam-Main) and an output (ControlRoom-Monitor).

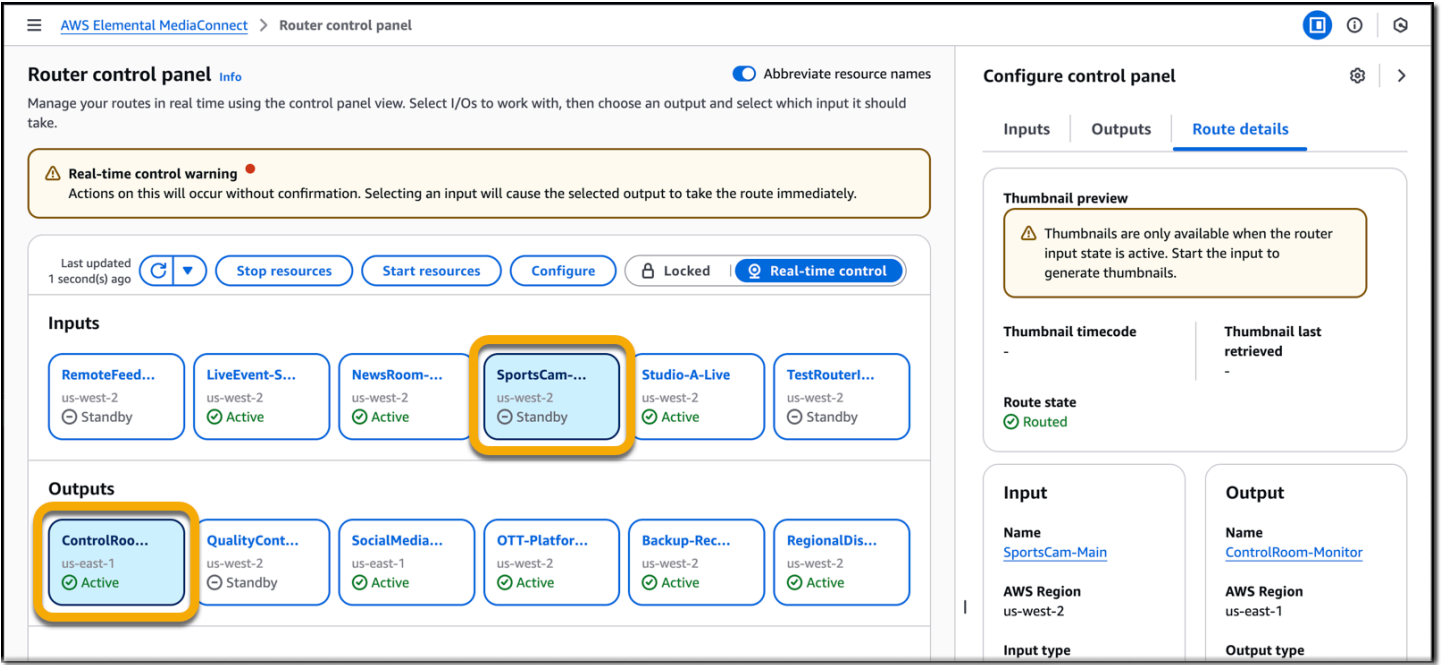

Using the router matrix view in MediaConnect

The router matrix view helps you manage multiple routes efficiently. Unlike the control panel where takes happen immediately, the matrix view lets you prepare multiple takes and review them before applying them all at once.

When routing content, keep in mind the following:

- Each output can take content from only one input at a time.
- Each input can send content to multiple outputs.

Tip

If you need to change just one output, you can also take an input from the output details page. This alternative method works well for individual changes, while the matrix view is better suited for managing multiple routes.

Prerequisites

Before you get started, ensure the following:

- You have one or more router inputs
- You have one or more router outputs
- The router inputs and outputs are compatible for pairing

Note

Outputs are checked for compatibility with inputs based upon routing scope and maximum bitrate. When the routing scope is set to regional for a router I/O, it is only compatible with I/O resources in the same AWS Region. To enable a router input or output for cross-region operation, set the routing scope to global.

Also, router outputs are only compatible with router inputs of equal or lesser maximum bitrate. For example, if an input is 20 Mbps, you can't route it to an output that's set up for less than 20 Mbps.

Procedure

Follow these procedures to open the router matrix view and perform bulk takes.

To review the router matrix

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. Choose **Router matrix**.
3. To see all your router I/Os in the router matrix view, choose **Auto-select resources**. This view supports up to 20 inputs and 10 outputs.
 - Alternatively, you can manually select inputs and outputs in the **Configure router matrix** pane. This is useful when managing a subset of routes, like those for a particular event or program.

The router matrix view shows your available outputs and inputs in a grid format:

- Rows represent router inputs (your available content sources)
- Columns represent router outputs (your available destinations)
- Each cell represents a potential output assignment

Inputs	ControlRoom-Monitor	QualityControl-Monitor	SocialMedia-Stream	OTT-Platform-1	Backup-Recorder	RegionalDistribution-East
RemoteFeed-NYC	☒	☐	☐	☐	☒	☐
LiveEvent-Stadium	☐	☒	☐	☒	☐	☐
NewsRoom-Feed	☐	☐	☐	☐	☐	☐
SportsCam-Main	☐	☐	☒	☐	☐	☐
Studio-A-Live	☐	☐	☐	☐	☐	☐
TestRouterInput	☐	☐	☐	☐	☐	☒

To perform a bulk take update

1. In the router matrix view, choose the routes that you want to change.

- To create a new route, select an empty cell.
- To remove an existing route, select a populated cell.

2. Choose **Apply route matrix** to save your changes.

The screenshot shows the AWS Elemental MediaConnect route matrix interface. At the top, there is a status bar indicating 'Last updated 0 second(s) ago' and several buttons: 'Stop resources', 'Start resources', 'Configure', 'Reset', and 'Apply route matrix' (highlighted in orange). Below the buttons is a table with the following structure:

Inputs	ControlRoom-Monitor	QualityControl-Monitor	SocialMedia-Stream	OTT-Platform-1	Backup-Recorder	RegionalDistribution-East
RemoteFeed-NYC	☒	☐	☐	☐	☒	☐
LiveEvent-Stadium	☐	☒	☐	☒	☐	☐
NewsRoom-Feed	☐	☐	☐	☐	☐	☒
SportsCam-Main	☐	☐	☒	☐	☐	☐
Studio-A-Live	☐	☐	☐	☒	☐	☐
TestRouterInput	☐	☐	☐	☐	☐	☒

Below the table is a legend with the following items:

- ☒ Currently routed
- ☐ Currently unrouted
- ☒ Staged to be routed
- ☒ Staged to be unrouted

3. Review the outcome:

- While the takes are in progress: You'll see which routes are still being updated.
- If all takes succeed: You'll see a success message confirming the update.
- If any takes fail: You'll see which routes couldn't be changed and why they failed.

Note

Each take happens independently. This means some outputs might take their new inputs faster than others, and if one take fails, the others will still proceed.

Using MediaConnect flows

A MediaConnect flow is a connection between one or more video sources and one or more outputs. For each flow, you specify the protocol to use, encryption information, and details about the source. MediaConnect returns an ingest endpoint where you can send your live video as a single unicast stream. The service replicates and distributes the video to every output that you specify, whether inside or outside the AWS Cloud.

Key points

Flows concepts and terminology

Before working with flows, familiarize yourself with these key concepts and terms.

Flow components

- **Source**

External video content that includes configuration information (encryption and source type) and a network address. Each flow has at least one source. A standard source comes from a source other than another MediaConnect flow, such as an on-premises encoder. An entitled source comes from a MediaConnect flow that is owned by another AWS account and has granted an entitlement to your account.

- **Output**

The destination where you want MediaConnect to send ingested video. An output can have the same protocol or a different protocol from the source.

- **Protocol**

A set of rules used for video and audio transmission. MediaConnect provides protocol options (such as Zixi, RTP, and RTP-FEC) that implement a quality of service (QoS) layer to enable the service to work with mezzanine-quality live video.

Cross account content sharing

- **Entitlement**

A permission that is granted to allow an AWS account to access the content in a specific MediaConnect flow. The content originator grants an entitlement to a specific AWS account

(the subscriber). Once an entitlement is granted, the subscriber can create a flow using the originator's flow as the source. You can only grant entitlements to transport stream flows.

- **Originator account**

An AWS account that was used to create a flow with at least one entitlement.

- **Subscriber account**

An AWS account that been granted access to content from an AWS Elemental MediaConnect flow that is owned by another AWS account (the originator account). This permission is granted when the originator sets up an entitlement for the subscriber. The entitlement permits the subscriber to create a flow that uses the originator's content as the source.

VPC interfaces

- **VPC interface**

A connection between a flow and a virtual private cloud (VPC) that was created using the Amazon Virtual Private Cloud (Amazon VPC) service.

AWS CDI and SMPTE 2110 support

- **AWS CDI flow**

A MediaConnect flow that transports high-quality content that has been lightly compressed using JPEG XS. The content is demuxed into separate media streams for audio, video, or ancillary data. Each AWS CDI flow can use multiple media streams for the source and multiple media streams for each output. MediaConnect uses AWS Cloud Digital Interface (AWS CDI) network technology to ingest content that adheres to the SMPTE 2110, part 22 transport standard.

- **Media stream**

A single track or stream of media that contains video, audio, or ancillary data. After you add a media stream to a flow, you can associate it with sources and outputs on that flow, as long as they use the AWS CDI protocol or the ST 2110 JPEG XS protocol. Each source or output can consist of one or many media streams.

- **Mezzanine stream**

A lightly compressed video stream that takes up less space than a full resolution uncompressed stream. The quality of a mezzanine stream is high enough to use as a source for creating final encodes that are delivered to consumer devices.

How flows work

Flows setup

Building on these concepts, the following steps show how you set up and use flows at a high level:

1. **Create a flow** - Set up a flow to receive content from an upstream sender and send the content to one or more downstream receivers.
2. **Start the flow** - Change the flow status from Standby to Active when you're ready to begin streaming.

You can do these steps manually in the console, or programmatically using the MediaConnect API.

Flows capabilities and management

Flows provide several key capabilities for managing your media workflows. You can:

- Ingest live video into the AWS Cloud.
- Distribute live video to multiple destinations inside or outside the AWS Cloud.
- Subscribe to a live video stream that is supplied by another AWS account. This requires permission from the content originator through an entitlement.
- Send content from one AWS Region to another.

You manage these functions through the MediaConnect console, where you can:

- See all your active flows.
- Start and stop multiple flows at the same time.
- Create, delete and update flows.

MediaConnect manages flows maintenance through automated scheduling, with restarts occurring approximately every 60 days from the time when you start the flows. You can customize these maintenance windows by selecting your preferred day and start hour when you create or update your flows. You can monitor when your next maintenance window begins by checking the console.

Flows considerations and limitations

As you plan your flow implementation, keep these points in mind.

Flow features and considerations

Feature	Description
Supported protocols	MediaConnect flows support multiple protocols to enable compatibility across hybrid workflows. The following protocols are currently supported: RTP, RTP-FEC, RIST, SRT-listener, SRT-caller, Zixi-Pull, Zixi-Push and NDI®.
Cross account content sharing	Content originators can grant entitlements to share their content with other AWS accounts (subscriber accounts). Subscribers can then set up their own MediaConnect flows using the originator's flow as their source.
Flows capacity	You can create up to 20 flows in each AWS Region. Each flow supports up to 50 outputs.
Source failover and merge	MediaConnect flows support both automatic failover between redundant sources and merged content from two source endpoints. Supported protocols: • Failover: RTP, RTP-FEC, RIST, SRT-listener, SRT-caller, Zixi-Push • Merge: RTP, RTP-FEC, RIST, Zixi-Push Both sources must: • Use the same protocol configuration • Use the same network configuration (VPC or public) • Use different port numbers
MediaConnect router integration	The MediaConnect router supports routing to or from MediaConnect flows.

Feature	Description
	For more details on flow integration considerations, see the section called “Integrating flows” .

Next steps

You can learn how to set up and use flows in the following pages of this guide:

- [Managing flows in MediaConnect](#)
- [Managing sources in MediaConnect](#)
- [Managing outputs in MediaConnect](#)
- [Managing entitlements in MediaConnect](#)
- [VPC interfaces](#)
- [Protocols in MediaConnect](#)
- [Media streams in MediaConnect](#)
- [Best practices for MediaConnect flows](#)

Managing flows in MediaConnect

A flow is a transport between a source and one or more destinations. When you create a flow, you specify the source, a name, and an Availability Zone. After you create a flow, you can add outputs to indicate where you want your content to be sent and how you want it transported.

MediaConnect supports three types of flows:

- **Transport stream flows** transport compressed content that is muxed (audio, video, and ancillary data are combined) into a single stream. The quality is high enough to use as a source for creating final encodes that are delivered to consumer devices.

Transport stream flows also support converting NDI® to or from transport streams, enabling you to connect your NDI-enabled production systems with traditional contribution and distribution workflows.

You can grant an entitlement to share the content with another AWS account. A user of the subscriber account can then create a new MediaConnect flow using your flow as the source.

When this happens, the service generates an output on your flow to represent the stream that feeds the subscriber's flow.

It is important to manage the number of outputs and entitlements on the flow. Each transport stream flow can only have 50 outputs. Although you can grant up to 50 entitlements on a flow, each of those entitlements will generate an output. For example, you create a flow named **BasketballGame** and you add 40 outputs that send content to on-premises encoders. You also grant 30 entitlements to share your content with other AWS accounts. When your subscribers create flows using **BasketballGame** as their source, the service generates new outputs for each of those subscribers. After the first 10 subscribers create flows, your **BasketballGame** flow reaches its maximum number of outputs (40 for the original outputs that you created and another 10 that the service created for the subscribing flows). When the 11th subscriber tries to create a flow using **BasketballGame** as a source, the service returns an error.

- **NDI flows** take transport stream compressed content into your Virtual Private Cloud (VPC) and convert it to NDI®, or convert your NDI content to a compressed transport stream for distribution outside of your VPC.
- **CDI flows** transport high-quality uncompressed or lightly compressed content into and out of the AWS Cloud. You can configure a CDI flow to use JPEG XS to transport lightly compressed content. The content is demuxed into separate media streams for audio, video, or ancillary data. Each CDI flow can use multiple media streams for the source and multiple media streams for each output. MediaConnect uses AWS Cloud Digital Interface (AWS CDI) network technology to transport content that adheres to the SMPTE 2110, part 22 transport standard.

Topics

- [Creating a flow](#)
- [Viewing a list of MediaConnect flows](#)
- [Viewing the details of a flow](#)
- [Starting a flow](#)
- [Stopping a flow](#)
- [Updating a flow](#)
- [Managing tags on a flow](#)
- [Deleting a flow](#)
- [Flow sizes and capabilities](#)

Creating a flow

A flow is a connection between one or more sources and one or more outputs or entitlements.

The method that you use to create a flow is dependent on the type of flow that you want to create and the type of content in the source:

- [Transport stream flow with a standard source](#) – Uses content from any source that is not a VPC source or an entitled source.
- [Transport stream flow with an entitled source](#) – Uses content that is owned by another AWS account that has granted an entitlement to your account.
- [Transport stream flow with a VPC source](#) – Uses compressed content that comes from a VPC that you configure.
- [NDI flow](#) – Uses content that comes from an NDI® sender in a VPC that you configure.
- [CDI flow](#) – Uses uncompressed content that comes from a VPC that you configure.

Note

If you want to create a transport stream flow that uses redundant sources for failover, create the flow with one of the sources. After the flow is created, [add the other source](#). Because MediaConnect treats both sources as the primary source, it doesn't matter which one you specify when you first create the flow. If your flow uses an entitled source, you can't add a second source. For redundancy with CDI workflows, create two separate flows.

Creating a transport stream flow that uses a standard source

Transport stream flows transport compressed content that is muxed into a single stream.

A flow uses a *standard* source when the content comes from anywhere other than a VPC ([VPC source](#)) or another AWS account ([entitled source](#)).

Prerequisites

Before you begin, make sure you've completed the following steps:

Encryption setup (if required)

If the source of your flow requires encryption, you'll need to [set up encryption](#).

NDI® configuration (for NDI use cases only)

We recommend reviewing the [NDI outputs](#) documentation to familiarize yourself with this feature before getting started.

If you want to add an NDI output to your flow, you need a VPC with NDI discovery servers provisioned in your network. MediaConnect connects to these servers, but it doesn't create them for you.

- For a quick start with VPCs, you can use our [AWS CloudFormation VPC template](#) to automatically create a VPC with public and private subnets. For more information about VPCs, see the [Amazon VPC User Guide](#).
- For NDI discovery server deployment, AWS provides guidance on automated setup across multiple Availability Zones using AWS CloudFormation, including best practices for installation and configuration. For instructions, see [Setting Up NDI Discovery Servers for Broadcast Workflows](#).
- We recommend that you configure your security groups with a self-referencing ingress rule and egress rule. You can then attach this security group to the EC2 instances where your NDI servers are running within the VPC. This approach automatically allows all necessary NDI communication between components in your VPC, and all required network traffic is permitted. For guidance on setting up self-referencing security group rules, see [Security Group Referencing](#) in the Amazon VPC User Guide.

Procedure

Create a transport stream flow that uses a standard source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose **Create flow**.
3. In the **Details** section, for **Name**, specify a name for your flow. This name will become part of the ARN for this flow.

Note

MediaConnect allows you to create multiple flows with the same name. However, we encourage you to use unique flow names within an AWS Region to help with organization. After you create a flow, you can't change the name.

4. For **Availability Zone**, choose an Availability Zone for your flow. Use this option when you are setting up redundant flows. Otherwise, you can leave this as **Any**. If you leave the default, the service will randomly assign an Availability Zone within the current AWS Region, or if your source comes from a VPC, the service will assign the Availability Zone of the VPC subnet to the flow.
5. Under **Flow size**, select the size that matches your use case. For more information about flow sizes, see [Flow sizes and capabilities](#).

For medium flows:

- Proceed directly to step 6.

For large flows:

- If you don't need NDI outputs for your flow, proceed directly to step 6.
- If you want to add NDI outputs to your flow, configure the NDI settings as follows:
 1. Set **Flow NDI support** to **Enabled**.
 2. (Optional) Enter an **NDI machine name**.
 - This name is used as a prefix to help you identify the NDI sources that your flow creates. For example, if you enter **MACHINENAME**, your NDI sources will appear as **MACHINENAME (ProgramName)**.
 - If you don't enter a name, MediaConnect generates a unique 12-character ID as the prefix. This ID is derived from the flow's Amazon Resource Name (ARN), so the machine name references the flow resource.

Tip

Thoughtful naming is especially important when you have multiple flows creating NDI sources. For example, a production environment with 100 NDI sources would benefit from clear, descriptive machine name prefixes like STUDIO-A, STUDIO-B, NEWSROOM, and so on.

3. Add up to three **NDI discovery servers**. For each server, provide the following information:
 - Enter the server IP address from your existing NDI infrastructure.
 - Select the VPC interface adapter to control network access.

- (Optional) Specify a port number. If you leave this blank, MediaConnect uses the NDI Discovery server default of TCP-5959.

Tip

You can add up to three discovery servers. Having multiple discovery servers improves reliability and helps ensure your NDI sources are discoverable across your network.

6. Determine which protocol your source uses.

Note

If you want to specify redundant sources for failover, create the flow with one of the sources. After the flow is created, update it to activate failover on the source, and add the second source to the flow. Because MediaConnect treats both sources as the primary source, it doesn't matter which one you specify when you first create the flow.

7. For specific instructions based on your source type and protocol, choose one of the following tabs:

RIST

1. In the **Source** section, for **Source type**, choose **Standard source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console.
3. For **Protocol**, choose **RIST**.
4. For **Ingest port**, specify the port that the flow will listen on for incoming content.

Note

The RIST protocol requires one additional port for error correction. To accommodate this requirement, MediaConnect reserves the port that is +1 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000 and 4001.

5. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing

(CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

6. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.
7. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 1-15,000 ms. If you keep this field blank, the service uses the default value of 2,000 ms.

RTP or RTP-FEC

1. In the **Source** section, for **Source type**, choose **Standard source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **RTP** or **RTP-FEC**.
4. For **Ingest port**, specify the port that the flow will listen on for incoming content.

 Note

The RTP-FEC protocol requires two additional ports for error correction. To accommodate this requirement, MediaConnect reserves the ports that are +2 and +4 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000, 4002, and 4004.

5. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing

(CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

6. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.

SRT listener

1. In the **Source** section, for **Source type**, choose **Standard source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **SRT listener**.
4. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
5. For **Allowlist CIDR block**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

6. For **Inbound port**, specify the port that the flow listens on for incoming content.

7. For **Source listener address**, enter the address MediaConnect will use for the SRT connection. The address can be an IP address or a domain name.
8. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
9. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.
- 10 For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRT0_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRT0_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

- 11 If the source is encrypted, choose **Activate** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

SRT caller

1. In the **Source** section, for **Source type**, choose **Standard source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **SRT caller**.

4. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
5. For **Source listener address**, enter the address MediaConnect will use for the SRT connection. The address can be an IP address or a domain name.
6. For **Source listener port**, enter the port MediaConnect will use for the SRT connection.
7. For **Maximum bitrate** (optional), specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.
8. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

9. For **Stream ID** (optional), enter an identifier for the stream. This identifier can be used to communicate information about the stream.
10. If the source is encrypted, choose **Activate** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

Zixi push

1. In the **Source** section, for **Source type**, choose **Standard source**.

2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **Zixi push**.

 Note

MediaConnect assigns the inbound port for Zixi push sources at the time of creation. A port number of 2088 will be assigned automatically.

4. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

5. For **Stream ID**, specify the stream ID that the Zixi sender uses.

 Important

If you leave this field blank, MediaConnect uses the source name as the stream ID. The stream ID must match the value that the Zixi sender uses. If it differs from the source name, specify the stream ID explicitly.

6. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms.
7. If the source is encrypted, choose **Activate** in the **Decryption** section and do the following:

- a. For **Decryption type**, choose **Static key**.
- b. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
- c. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
- d. For **Decryption algorithm**, choose the type of encryption that was used to encrypt the source.

Zixi push for AWS Elemental Link UHD device

To use an AWS Elemental Link device as a source for MediaConnect, you must create a Zixi push flow using the following procedure. After creating the Zixi push flow, you must configure the AWS Elemental Link device using MediaLive. See the following MediaLive setup instructions to complete the process after you have created the flow: [Using a device in a flow](#) in the *MediaLive User Guide*. Ensure you have access to both MediaConnect and MediaLive to complete these steps.

1. In the **Source** section, for **Source type**, choose **Standard source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **Zixi push**.

Note

MediaConnect assigns the inbound port for Zixi push sources at the time of creation. A port number of 2088 will be assigned automatically.

4. For **Allowlist CIDR block**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

⚠ Important

If you know the range of public IP addresses that your Link device uses to connect to the internet, enter that CIDR block. Note that this is not the same as the IP address of the AWS Elemental Link device. If you cannot obtain this information, it is possible to configure the CIDR block to be open to all possible IP addresses by using 0.0.0.0/0. Typically, it is not best practice to assign a CIDR block that is open to the entire internet (0.0.0.0/0). However, if this method must be used, the data being transferred is encrypted using AES-128 encryption.

5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms. The **Maximum latency** value should match the **Latency** value configured on the AWS Elemental Link device. For information on configuring the Link device's latency, see: [Configuring the device](#) in the *AWS Elemental MediaLive User Guide*
6. For **Decryption**, choose **Activate** and do the following:
 - a. For **Decryption type**, choose **Static key**.
 - b. For **Decryption algorithm**, choose **AES-128**. AWS Elemental Link requires AES-128, do not select another algorithm.
 - c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
8. Under **Source monitoring configuration**, choose which monitoring features you want to enable.
 - a. Turn on **Thumbnails state** to generate source thumbnails that you can preview in the console.
 - b. Turn on **Content quality analysis state** to monitor for the following audio and video quality issues.

- i. (Optional) Turn on **Black frames** to detect periods of black video frames in the stream.
 - ii. (Optional) Turn on **Frozen frames** to detect periods of unchanging video frames in the stream.
 - iii. (Optional) Turn on **Silent audio** to detect periods of audio silence in the stream.
 - iv. (Optional) Set a duration threshold between 10 and 60 seconds for each metric that you enable. The default is 30 seconds.
9. At the bottom of the page, choose **Create flow**.

Create a transport stream flow that uses a standard source (AWS CLI)

1. Create a JSON file that contains the details of the flow that you want to create.

The following example shows the structure for the contents of the file:

```
{
  "Name": "AwardsShow",
  "Outputs": [
    {
      "Destination": "198.51.100.5",
      "Description": "RTP output",
      "Name": "RTPOutput",
      "Protocol": "rtp",
      "Port": 5020
    }
  ],
  "Source": {
    "Name": "AwardsShowSource",
    "Protocol": "rtp-fec",
    "WhitelistCidr": "10.24.34.0/23"
  }
}
```

2. In the AWS CLI, use the create-flow command:

```
aws mediaconnect create-flow --cli-input-json file://rtp.json --profile PMprofile
```

The following example shows the return value:


```
{
  "Flow": {
    "EgressIp": "203.0.113.0",
    "AvailabilityZone": "us-east-1d",
    "Name": "AwardsShow",
    "Status": "STANDBY",
    "FlowArn": "arn:aws:mediaconnect:us-
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow",
    "Source": {
      "SourceArn": "arn:aws:mediaconnect:us-
east-1:111122223333:source:3-4aBC56dEF78hiJ90-4de5fG6Hi78Jk:AwardsShowSource",
      "Name": "AwardsShowSource",
      "IngestPort": 5000,
      "WhitelistCidr": "10.24.34.0/23",
      "IngestIp": "198.51.100.15",
      "Transport": {
        "Protocol": "rtp-fec",
        "MaxBitrate": 80000000
      }
    },
    "Entitlements": [],
    "Outputs": [
      {
        "Port": 5020,
        "Name": "AwardsShowOutput",
        "OutputArn": "arn:aws:mediaconnect:us-
east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:AwardsShowOutput",
        "Description": "RTP-FEC Output",
        "Destination": "198.51.100.5",
        "Transport": {
          "Protocol": "rtp",
          "SmoothingLatency": 0
        }
      }
    ]
  }
}
```

Next steps

Now that you've created a flow, complete these steps to start delivering your content:

- [Add outputs](#) to specify where you want your MediaConnect flow to send your content
- [Grant entitlements](#) to allow users of other AWS accounts to subscribe to your content
- [Start your flow](#) to begin content delivery

Additional resources

For more information about source monitoring options for your flow, see the following pages in this guide:

- [Viewing thumbnails of the source video](#)
- [Monitoring with content quality analysis in AWS Elemental MediaConnect](#)

Creating a transport stream flow that uses an entitled source

Transport stream flows transport compressed content that is muxed into a single stream. An entitled source is content that comes from another AWS account.

Prerequisites

- **NDI® configuration (for NDI use cases only)**

We recommend reviewing the [NDI outputs](#) documentation to familiarize yourself with this feature before getting started.

If you want to add an NDI output to your flow, you need a VPC with NDI discovery servers provisioned in your network. MediaConnect connects to these servers, but it doesn't create them for you.

- For a quick start with VPCs, you can use our [AWS CloudFormation VPC template](#) to automatically create a VPC with public and private subnets. For more information about VPCs, see the [Amazon VPC User Guide](#).
- For NDI discovery server deployment, AWS provides guidance on automated setup across multiple Availability Zones using AWS CloudFormation, including best practices for installation and configuration. For instructions, see [Setting Up NDI Discovery Servers for Broadcast Workflows](#).
- We recommend that you configure your security groups with a self-referencing ingress rule and egress rule. You can then attach this security group to the EC2 instances where your NDI servers are running within the VPC. This approach automatically allows all necessary

NDI communication between components in your VPC, and all required network traffic is permitted. For guidance on setting up self-referencing security group rules, see [Security Group Referencing](#) in the Amazon VPC User Guide.

Procedure

To create a transport stream flow that uses an entitled source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose **Create flow**.
3. In the **Details** section, for **Name**, specify a name for your flow. This name will become part of the ARN for this flow.

Note

MediaConnect allows you to create multiple flows with the same name. However, we encourage you to use unique flow names within an AWS Region to help with organization. After you create a flow, you can't change the name.

4. For **Availability Zone**, choose one of the following options:
 - Select **Any** (recommended)
 - Select a specific Availability Zone (useful if you're setting up redundant flows)

If you use the default setting (**Any**), MediaConnect will randomly assign an Availability Zone within the current AWS Region. If your source comes from a VPC, the service will assign the Availability Zone of the VPC subnet to the flow.

Note

If your source comes from your VPC, the Availability Zone of your flow must match that of your VPC subnet. We recommend that you leave this as **Any** and let the service ensure that the Availability Zone is set correctly.

5. Under **Flow size**, select the size that matches your use case. For more information about flow sizes, see [Flow sizes and capabilities](#).

For medium flows:

- Proceed directly to step 6.

For large flows:

- If you don't need NDI outputs for your flow, proceed directly to step 6.
- If you want to add NDI outputs to your flow, configure the NDI settings as follows:
 1. Set **Flow NDI support** to **Enabled**.
 2. (Optional) Enter an **NDI machine name**.
 - This name is used as a prefix to help you identify the NDI sources that your flow creates. For example, if you enter **MACHINENAME**, your NDI sources will appear as **MACHINENAME (ProgramName)**.
 - If you don't enter a name, MediaConnect generates a unique 12-character ID as the prefix. This ID is derived from the flow's Amazon Resource Name (ARN), so the machine name references the flow resource.

 Tip

Thoughtful naming is especially important when you have multiple flows creating NDI sources. For example, a production environment with 100 NDI sources would benefit from clear, descriptive machine name prefixes like STUDIO-A, STUDIO-B, NEWSROOM, and so on.

3. Add up to three **NDI discovery servers**. For each server, provide the following information:
 - Enter the server IP address from your existing NDI infrastructure.
 - Select the VPC interface adapter to control network access.
 - (Optional) Specify a port number. If you leave this blank, MediaConnect uses the NDI Discovery server default of TCP-5959.

 Tip

You can add up to three discovery servers. Having multiple discovery servers improves reliability and helps ensure your NDI sources are discoverable across your network.

6. In the **Source** section:

- For **Source type**, choose **Entitled source**.
- For **Entitlement ARN**, choose the appropriate entitlement. This list includes all entitlements that have been granted to you.

 Tip

You can click in this field and start entering the entitlement name. MediaConnect will filter the list to include only entitlements with a name that matches what you enter.

7. Under **Source monitoring configuration**, choose which monitoring features you want to enable.

- a. Turn on **Thumbnails state** to generate source thumbnails that you can preview in the console.
- b. Turn on **Content quality analysis state** to monitor for the following audio and video quality issues.
 - i. (Optional) Turn on **Black frames** to detect periods of black video frames in the stream.
 - ii. (Optional) Turn on **Frozen frames** to detect periods of unchanging video frames in the stream.
 - iii. (Optional) Turn on **Silent audio** to detect periods of audio silence in the stream.
 - iv. (Optional) Set a duration threshold between 10 and 60 seconds for each metric that you enable. The default is 30 seconds.

8. Choose **Create flow**.

Next steps

Now that you've created a flow, complete these steps to start delivering your content:

- [Add outputs](#) to specify where you want your MediaConnect flow to send your content
- [Grant entitlements](#) to allow users of other AWS accounts to subscribe to your content
- [Start your flow](#) to begin content delivery

Additional resources

For more information about source monitoring options for your flow, see the following pages in this guide:

- [Viewing thumbnails of the source video](#)
- [Monitoring with content quality analysis in AWS Elemental MediaConnect](#)

Creating a transport stream flow that uses a VPC source

Transport stream flows transport compressed content that is muxed into a single stream.

When you create a flow that uses a source from your virtual private cloud (VPC), your content does not go over the public internet. This is useful for security reasons as well as reliability. You set up your VPC and then create a flow that has an interface to that VPC. Alternatively, you can create a flow based on an entitlement that another AWS account granted to allow you to use their content ([entitled source](#)) or a [standard source](#).

Prerequisites

Before you begin, make sure you've completed the following steps:

VPC configuration

In Amazon VPC, set up your VPC and associated security groups. For more information about VPCs, see the [Amazon VPC User Guide](#). For information about configuring security groups to work with your VPC interface, see [Security group considerations](#).

IAM setup

In IAM, [set up MediaConnect as a trusted service](#).

Encryption setup (if required)

If the source of your flow requires encryption, [set up encryption](#).

NDI® configuration (for NDI use cases only)

We recommend reviewing the [NDI outputs](#) documentation to familiarize yourself with this feature before getting started.

If you want to add an NDI output to your flow, you need a VPC with NDI discovery servers provisioned in your network. MediaConnect connects to these servers, but it doesn't create them for you.

- AWS provides guidance on automated setup across multiple Availability Zones using AWS CloudFormation, including best practices for installation and configuration. For instructions, see [Setting Up NDI Discovery Servers for Broadcast Workflows](#).
- We recommend that you configure your security groups with a self-referencing ingress rule and egress rule. You can then attach this security group to the EC2 instances where your NDI servers are running within the VPC. This approach automatically allows all necessary NDI communication between components in your VPC, and all required network traffic is permitted. For guidance on setting up self-referencing security group rules, see [Security Group Referencing](#) in the Amazon VPC User Guide.

Procedure

To create a transport stream flow that uses a VPC source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose **Create flow**.
3. In the **Details** section, for **Name**, specify a name for your flow. This name will become part of the ARN for this flow.

Note

MediaConnect allows you to create multiple flows with the same name. However, we encourage you to use unique flow names within an AWS Region to help with organization. After you create a flow, you can't change the name.

4. For **Availability Zone**, choose **Any** or choose the Availability Zone where your VPC subnet resides. We recommend that you leave this as **Any** and let the service ensure that the Availability Zone is set correctly.
5. Under **Flow size**, select the size that matches your use case. For more information about flow sizes, see [Flow sizes and capabilities](#).

For medium flows:

- Proceed directly to step 6.

For large flows:

- If you don't need NDI outputs for your flow, proceed directly to step 6.
- If you want to add NDI outputs to your flow, configure the NDI settings as follows:
 1. Set **Flow NDI support** to **Enabled**.
 2. (Optional) Enter an **NDI machine name**.
 - This name is used as a prefix to help you identify the NDI sources that your flow creates. For example, if you enter **MACHINENAME**, your NDI sources will appear as **MACHINENAME (ProgramName)**.
 - If you don't enter a name, MediaConnect generates a unique 12-character ID as the prefix. This ID is derived from the flow's Amazon Resource Name (ARN), so the machine name references the flow resource.

Tip

Thoughtful naming is especially important when you have multiple flows creating NDI sources. For example, a production environment with 100 NDI sources would benefit from clear, descriptive machine name prefixes like STUDIO-A, STUDIO-B, NEWSROOM, and so on.

3. Add up to three **NDI discovery servers**. For each server, provide the following information:
 - Enter the server IP address from your existing NDI infrastructure.
 - Select the VPC interface adapter to control network access.
 - (Optional) Specify a port number. If you leave this blank, MediaConnect uses the NDI Discovery server default of TCP-5959.

 Tip

You can add up to three discovery servers. Having multiple discovery servers improves reliability and helps ensure your NDI sources are discoverable across your network.

6. In the **Source** section, for **Source type**, choose **VPC source**.
7. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console.
8. Determine which protocol your source uses.

 Note

If you want to specify redundant sources for failover, create the flow with one of the sources. After the flow is created, update it to activate failover on the source, and add the second source to the flow. Because MediaConnect treats both sources as the primary source, it doesn't matter which one you specify when you first create the flow.

9. For specific instructions based on your protocol, choose one of the following tabs:

RIST

1. For **Protocol**, choose **RIST**.
2. For **Ingest port**, specify the port that the flow will listen on for incoming content.

 Note

The RIST protocol requires one additional port for error correction. To accommodate this requirement, MediaConnect reserves the port that is +1 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000 and 4001.

3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
4. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.

5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 1-15,000 ms. If you keep this field blank, the service uses the default value of 2,000 ms.

RTP or RTP-FEC

1. For **Protocol**, choose **RTP** or **RTP-FEC**.
2. For **Ingest port**, specify the port that the flow will listen on for incoming content.

Note

The RTP-FEC protocol requires two additional ports for error correction. To accommodate this requirement, MediaConnect reserves the ports that are +2 and +4 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000, 4002, and 4004.

3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
4. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.

SRT listener

1. In the **Source** section, for **Source type**, choose **VPC source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **SRT listener**.
4. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
5. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
6. For **Inbound port**, specify the port that the flow listens on for incoming content.

7. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.
8. For **Minimum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10 -15,000 ms. If you keep this field blank, the service uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRT0_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRT0_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

9. If the source is encrypted, choose **Activate** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

SRT caller

1. In the **Source** section, for **Source type**, choose **VPC source**.
2. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
3. For **Protocol**, choose **SRT caller**.
4. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
5. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.

6. For **Source listener port**, enter the port the flow will use to pull the source from.
7. For **Maximum bitrate** (optional), specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate.
8. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

9. For **Stream ID** (optional), enter an identifier for the stream. This identifier can be used to communicate information about the stream.
10. If the source is encrypted, choose **Activate** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

Zixi push

1. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
2. For **Protocol**, choose **Zixi push**.

 Note

MediaConnect assigns the inbound port for Zixi push VPC sources at the time of creation. A port number 2090–2099 will be assigned automatically.

3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
4. For **Stream ID**, specify the stream ID that the Zixi sender uses.

 Important

If you leave this field blank, MediaConnect uses the source name as the stream ID. The stream ID must match the value that the Zixi sender uses. If it differs from the source name, specify the stream ID explicitly.

5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms.
6. If the source is encrypted, choose **Activate** in the **Decryption** section and do the following:
 - a. For **Decryption type**, choose **Static key**.
 - b. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - c. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
 - d. For **Decryption algorithm**, choose the type of encryption that was used to encrypt the source.
10. For each VPC that you want to connect to the flow, do the following:
 1. In the **VPC interface** section, choose **Add VPC interface**.
 2. For **Name**, specify a name for your VPC interface. The name of the VPC interface must be unique within the flow.

3. For **Role ARN**, specify the Amazon Resource Name (ARN) of the role that you created when you set up MediaConnect as a trusted service.
4. For **VPC**, choose the ID of the VPC that you want to use.

 Note

If you don't see the VPC that you want in the list, verify that the VPC has been set up in Amazon Virtual Private Cloud and that you have IAM permissions to view the VPC.

5. For **Subnet**, choose the VPC subnet that you want MediaConnect to use to set up your VPC configuration. You must choose at least one and can choose as many as you want.
 6. For **Security groups**, specify the VPC security groups that you want MediaConnect to use to set up your VPC configuration. You must choose at least one security group.
11. Under **Source monitoring configuration**, choose which monitoring features you want to enable.
- a. Turn on **Thumbnails state** to generate source thumbnails that you can preview in the console.
 - b. Turn on **Content quality analysis state** to monitor for the following audio and video quality issues.
 - i. (Optional) Turn on **Black frames** to detect periods of black video frames in the stream.
 - ii. (Optional) Turn on **Frozen frames** to detect periods of unchanging video frames in the stream.
 - iii. (Optional) Turn on **Silent audio** to detect periods of audio silence in the stream.
 - iv. (Optional) Set a duration threshold between 10 and 60 seconds for each metric that you enable. The default is 30 seconds.
12. At the bottom of the page, choose **Create flow**.

Next steps

Now that you've created a flow, complete these steps to start delivering your content:

- [Add outputs](#) to specify where you want your MediaConnect flow to send your content

- [Grant entitlements](#) to allow users of other AWS accounts to subscribe to your content
- [Start your flow](#) to begin content delivery

Additional resources

For more information about source monitoring options for your flow, see the following pages in this guide:

- [Viewing thumbnails of the source video](#)
- [Monitoring with content quality analysis in AWS Elemental MediaConnect](#)

Creating a flow that uses a CDI source

A CDI flow transports high-quality uncompressed or lightly compressed content into and out of the AWS Cloud. You can configure a CDI flow to use JPEG XS to transport lightly compressed content. The content is demuxed into separate media streams for audio, video, or ancillary data. Each CDI flow can use multiple media streams for the source and multiple media streams for each output. MediaConnect uses AWS Cloud Digital Interface (AWS CDI) network technology to transport content that adheres to the SMPTE 2110, part 22 transport standard.

CDI flows only support sources from a virtual private cloud (VPC) that you set up using Amazon VPC. You set up your VPC and then create a flow that has an interface to that VPC.

MediaConnect doesn't support two sources on CDI flows. For redundancy with ST 2110 JPEG XS sources, you can specify two inbound VPC interfaces on an individual media stream. For redundancy with CDI sources, create a second flow.

Prerequisites

Before you begin this procedure, make sure that the following steps have been completed:

- Review the suggested workflow shown in [Contribution for CDI flows](#).
- In Amazon VPC, set up your VPC and associated security groups. For more information about VPCs, see the [Amazon VPC User Guide](#). For information about configuring security groups to work with your VPC interface, see [Security group considerations](#).
- In IAM, [set up MediaConnect as a trusted service](#).

Procedure

Create an AWS CDI flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose **Create flow**.
3. In the **Details** section, for **Name**, specify a name for your flow. This name will become part of the ARN for this flow.

Note

MediaConnect allows you to create multiple flows with the same name. However, we encourage you to use unique flow names within an AWS Region to help with organization. After you create a flow, you can't change the name.

4. For **Availability Zone**, choose the Availability Zone where your VPC subnet resides.
5. For **Flow size**, select **Large 4x**.
6. In the **Source** section, for **Source type**, choose **VPC source**.
7. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console.
8. Skip to the **VPC interface** section.
9. For each VPC that you want to connect to the flow, do the following:
 1. Choose **Add VPC interface**.
 2. For **Name**, specify a name for your VPC interface. The name of the VPC interface must be unique within the flow.
 3. For **Type**, choose the type of network adapter that you want MediaConnect to use on this interface. If you want to use this interface for a CDI source or output, you must choose **EFA** as the type.
 4. For **Role ARN**, specify the Amazon Resource Name (ARN) of the role that you created when you set up MediaConnect as a trusted service.
 5. For **VPC**, choose the ID of the VPC that you want to use.

 Note

If you don't see the VPC that you want in the list, verify that the VPC has been set up in Amazon Virtual Private Cloud and that you have IAM permissions to view the VPC.

6. For **Subnet**, choose the VPC subnet that you want MediaConnect to use to set up your VPC configuration. You must choose at least one and can choose as many as you want.
7. For **Security groups**, specify the VPC security groups that you want MediaConnect to use to set up your VPC configuration. You must choose at least one security group.
10. For each media stream that you want to add to the flow, do the following:
 1. In the **Media streams** section, choose **Add media stream**.
 2. In the **Name** field, specify a descriptive name that will help you distinguish this media stream from others in the flow.
 3. For **Description**, specify a description that will help you remember the use of this media stream.
 4. For **Stream ID**, specify a unique identifier for the media stream.

If the source or any of the outputs uses the CDI protocol, specify the value that is expected by the production and playout systems.

If the source and all outputs use the ST 2110 JPEG XS protocol, specify a value that is unique to that of other media streams within the flow.

5. Choose **Advanced options** to display the additional options based on your stream type.
6. For specific instructions on the advanced options based on your stream type, choose one of the following tabs:

Audio

- a. For **Stream type**, choose **Audio**.
- b. For **Media clock rate**, specify the sample rate for the stream. This value is measured in Hz.
- c. For **Language**, specify the language of the audio. This value should be in a format that the receiver recognizes.
- d. For **Channel order**, specify the format of the audio channel.

- e. Choose **Add media stream**.

Video

- a. For **Stream type**, choose **Video**.

For many fields, MediaConnect provides a default value that represents the recommended setting. Change the default value if needed.

- b. **Media clock rate** is the sample rate for the stream, and is set to 90000. This value is measured in Hz.
- c. For **Video format**, specify the resolution of the video.
- d. For **Exact framerate**, specify the frame rate of the video. This value should be represented in frames per second.
- e. For **Colorimetry**, specify the format that was used for the representation of color in the video.
- f. For **Scan mode**, specify the method that was used to scan the incoming video.
 - Choose **Interlace** if the incoming video is interlaced (for example, 480i or 1080i).
 - Choose **Progressive** if the incoming video is progressive (for example, 720p or 1080p).
 - Choose **Progressive segmented frame** if the incoming video is PSF (for example, 1080psf).
- g. For **TCS**, specify the transfer characteristic system (TCS) that was used in the video.
- h. For **Range**, specify the encoding range of the video.
- i. For **PAR**, specify the pixel access ratio (PAR) of the video.
- j. Choose **Add media stream**.

Ancillary data

- a. For **Stream type**, choose **Ancillary data**.
- b. **Media clock rate** is the sample rate for the stream, and is set to 90000. This value is measured in Hz.
- c. Choose **Add media stream**.

11. Scroll back up to the **Sources** section.

12. Determine which protocol your source uses.

13. For specific instructions based on your protocol, choose one of the following tabs:

CDI

1. For **Protocol**, choose **CDI**.
2. For **Description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
3. For **Inbound port**, specify the port that the flow will listen on for incoming content. This value can be anything from 1024 to 65535, with the exception of 2077 and 2088 (those ports are reserved for other protocols).
4. For **VPC interface**, choose the name of the VPC interface that you want to use as the source.
5. For each media stream that you want to use as part of the source, do the following.
 - a. For **Media stream name**, choose the name of the media stream.
 - b. For **Encoding name**, accept the default value.
 - For ancillary data streams, the encoding name is **smpte291**.
 - For audio streams, the encoding name is **pcm**.
 - For video, the encoding name is **raw**.

ST 2110 JPEG XS

1. For **Protocol**, choose **ST 2110 JPEG XS**.
2. For **Description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
3. For **Max sync buffer**, specify the size of the buffer that you want MediaConnect to use to sync incoming source data. This value is measured in milliseconds (ms).
4. For **VPC interface name 1**, choose one of the VPC interfaces that you want to use as a source.
5. For **VPC interface name 2**, choose a second VPC interface that you want to use as a source. There is no priority between VPC interfaces 1 and 2.
6. For each media stream that you want to use as part of the source, do the following.
 - a. For **Media stream name**, choose the name of the media stream.
 - b. For **Encoding name**, accept the default value.
 - For ancillary data streams, the encoding name is **smpte291**.

- For audio streams, the encoding name is **pcm**.
 - For video, the encoding name is **jxsv**.
- c. For **Inbound port**, specify the port that the flow will listen on for incoming content. This value can be anything from 1024 to 65535, with the exception of 2077 and 2088 (those ports are reserved for other protocols).

14. At the bottom of the page, choose **Create flow**.

Note

The flow doesn't start automatically. You must [start the flow](#) manually.

15. [Add outputs](#) to specify where you want your MediaConnect to send the content.

Create an AWS CDI flow (AWS CLI)

To use the AWS CLI to create a flow, you must use the `create-flow` command. To simplify the flow creation, we suggest you use the `create-flow` command with the `--cli-input-json` option. The `--cli-input-json` option requires you to create a JSON file with the necessary settings for your new flow. Step 1 of this procedure provides an example of one possible way configure this JSON file. For more information about the `create-flow` command and the `--cli-input-json` option, see: [AWS CLI Command Reference create-flow](#)

1. Create a JSON file that contains the details of the flow that you want to create.

The following example shows the structure for the contents of the file. This example uses a JPEG XS source to create a AWS CDI output with the following attributes:

- 2 Amazon VPC interfaces, 1 EFA (Elastic Fabric Adapter) and 1 ENA (Elastic Network Adapter)
- 1 video stream, 1 audio stream, and 1 ancillary data stream

```
{
  "Name": "AwardsShow",
  "MediaStreams": [
    {
      "Attributes": {
        "Fmtp": {
          "Colorimetry": "BT709",
```

```

        "ExactFramerate": "60000/1001",
        "Par": "1:1",
        "Range": "NARROW",
        "ScanMode": "progressive",
        "Tcs": "SDR"
    },
    },
    "ClockRate": 90000,
    "MediaStreamId": 0,
    "MediaStreamName": "video-stream",
    "MediaStreamType": "video",
    "VideoFormat": "1080p"
},
{
    "Attributes": {
        "Fmtp": {
            "ChannelOrder": "SMPTE2110.(ST)"
        }
    },
    "ClockRate": 48000,
    "MediaStreamId": 1,
    "MediaStreamName": "audio-stream",
    "MediaStreamType": "audio"
},
{
    "ClockRate": 90000,
    "MediaStreamId": 2,
    "MediaStreamName": "anc-stream",
    "MediaStreamType": "ancillary-data"
}
],

"Outputs": [
    {
        "Name": "cdi-output",
        "Protocol": "cdi",
        "Description": "cdi-output to medialive",
        "Destination": "198.51.100.5",
        "MediaStreamOutputConfigurations": [
            {
                "EncodingName": "raw",
                "MediaStreamName": "video-stream"
            },
            {

```

```

        "EncodingName": "pcm",
        "MediaStreamName": "audio-stream"
    }
],
"Port": 5000,
"VpcInterfaceAttachment": {
    "VpcInterfaceName": "efa-name"
}
},
],
"Source": {
    "Name": "jxs-input",
    "Protocol": "st2110-jpegxs",
    "Description": "jxs-input to cdi-output",
    "MaxSyncBuffer": 100,
    "MediaStreamSourceConfigurations": [
        {
            "EncodingName": "jxsv",
            "InputConfigurations": [
                {
                    "InputPort": 5011,
                    "Interface": {
                        "Name": "efa-name"
                    }
                },
                {
                    "InputPort": 5011,
                    "Interface": {
                        "Name": "ena-name"
                    }
                }
            ],
            "MediaStreamName": "video-stream"
        },
        {
            "EncodingName": "pcm",
            "InputConfigurations": [
                {
                    "InputPort": 5001,
                    "Interface": {
                        "Name": "efa-name"
                    }
                }
            ],
        },
    ]
}

```

```

        {
            "InputPort": 5001,
            "Interface": {
                "Name": "ena-name"
            }
        }
    ],
    "MediaStreamName": "audio-stream"
}
],
"VpcInterfaces": [
    {
        "Name": "efa-name",
        "NetworkInterfaceType": "efa",
        "RoleArn": "arn:aws:iam::111122223333:role/MediaConnectAccessRole",
        "SecurityGroupIds": [
            "sg-1234567890abcdef0"
        ],
        "SubnetId": "subnet-abcdef01234567890"
    },
    {
        "Name": "ena-name",
        "NetworkInterfaceType": "ena",
        "RoleArn": "arn:aws:iam::111122223333:role/MediaConnectAccessRole",
        "SecurityGroupIds": [
            "sg-1234567890abcdef0"
        ],
        "SubnetId": "subnet-abcdef01234567890"
    }
]
}

```

2. In the AWS CLI, use the `create-flow` command.

```
aws mediaconnect create-flow --cli-input-json file://filename.json --
profile YourProfile
```

The following example shows the return value:

```
{
  "Flow": {
```

```

    "AvailabilityZone": "us-west-2a",
    "Description": "jxs-input to cdi-output",
    "EgressIp": "203.0.113.0",
    "Entitlements": [],
    "FlowArn": "arn:aws:mediaconnect:us-west-2:111122223333:flow:1-DwtfULY0UVABAQNR-c94d84ce4215:AwardsShow",
    "MediaStreams": [
      {
        "Attributes": {
          "Fmtp": {
            "Colorimetry": "BT709",
            "ExactFramerate": "60000/1001",
            "Par": "1:1",
            "Range": "NARROW",
            "ScanMode": "progressive",
            "Tcs": "SDR"
          }
        },
        "ClockRate": 90000,
        "Fmt": 96,
        "MediaStreamId": 0,
        "MediaStreamName": "video-stream",
        "MediaStreamType": "video",
        "VideoFormat": "1080p"
      },
      {
        "Attributes": {
          "Fmtp": {
            "ChannelOrder": "SMPTE2110.(ST)"
          }
        },
        "ClockRate": 48000,
        "Fmt": 97,
        "MediaStreamId": 1,
        "MediaStreamName": "audio-stream",
        "MediaStreamType": "audio"
      },
      {
        "ClockRate": 90000,
        "Fmt": 98,
        "MediaStreamId": 2,
        "MediaStreamName": "anc-stream",
        "MediaStreamType": "ancillary-data"
      }
    ]
  }

```



```

    ],
    "Name": "AwardsShow",
    "Outputs": [
      {
        "Description": "cdi-output to medialive",
        "Destination": "198.51.100.5",
        "MediaStreamOutputConfigurations": [
          {
            "EncodingName": "raw",
            "MediaStreamName": "video-stream"
          },
          {
            "EncodingName": "pcm",
            "MediaStreamName": "audio-stream"
          }
        ],
        "Name": "cdi-output",
        "OutputArn": "arn:aws:mediaconnect:us-west-2:111122223333:output:1-DwtfU1YOUVABAQNR-c94d84ce4215:cdi-output",
        "Port": 5000,
        "Transport": {
          "Protocol": "cdi"
        },
        "VpcInterfaceAttachment": {
          "VpcInterfaceName": "efa-name"
        }
      }
    ],
    "Source": {
      "Description": "jxs-input to cdi-output",
      "MediaStreamSourceConfigurations": [
        {
          "EncodingName": "jxs-input",
          "InputConfigurations": [
            {
              "InputIp": "203.0.113.1",
              "InputPort": 5011,
              "Interface": {
                "Name": "efa-name"
              }
            }
          ],
          {
            "InputIp": "203.0.113.2",
            "InputPort": 5011,

```

```

        "Interface": {
            "Name": "ena-name"
        }
    },
    "MediaStreamName": "video-stream"
},
{
    "EncodingName": "pcm",
    "InputConfigurations": [
        {
            "InputIp": "203.0.113.3",
            "InputPort": 5001,
            "Interface": {
                "Name": "efa-name"
            }
        },
        {
            "InputIp": "203.0.113.4",
            "InputPort": 5001,
            "Interface": {
                "Name": "ena-name"
            }
        }
    ],
    "MediaStreamName": "audio-stream"
}
],
"Name": "jxs-input",
"SourceArn": "arn:aws:mediacconnect:us-west-2:111122223333:source:1-DwtfU1YOUVABAQNR-c94d84ce4215:jxs-input",
"Transport": {
    "MaxSyncBuffer": 100,
    "Protocol": "st2110-jpegxs"
}
},
"Sources": [
    {
        "Description": "jxs-input to cdi-output",
        "MediaStreamSourceConfigurations": [
            {
                "EncodingName": "jxsv",
                "InputConfigurations": [

```

```

        "InputIp": "203.0.113.173",
        "InputPort": 5011,
        "Interface": {
            "Name": "efa-name"
        }
    },
    {
        "InputIp": "203.0.113.114",
        "InputPort": 5011,
        "Interface": {
            "Name": "ena-name"
        }
    }
],
"MediaStreamName": "video-stream"
},
{
    "EncodingName": "pcm",
    "InputConfigurations": [
        {
            "InputIp": "203.0.113.173",
            "InputPort": 5001,
            "Interface": {
                "Name": "efa-name"
            }
        },
        {
            "InputIp": "203.0.113.114",
            "InputPort": 5001,
            "Interface": {
                "Name": "ena-name"
            }
        }
    ],
    "MediaStreamName": "audio-stream"
}
],
"Name": "jxs-input",
"SourceArn": "arn:aws:mediaconnect:us-west-2:111122223333:source:1-DwtfULY0UVABAQNR-c94d84ce4215:jxs-input",
"Transport": {
    "MaxSyncBuffer": 100,
    "Protocol": "st2110-jpegxs"
}
}

```

```

    }
  ],
  "Status": "STANDBY",
  "VpcInterfaces": [
    {
      "Name": "efa-name",
      "NetworkInterfaceIds": [
        "eni-0ae6ca9ea6673a2a7"
      ],
      "NetworkInterfaceType": "efa",
      "RoleArn": "arn:aws:iam::111122223333:role/MediaConnectAccessRole",
      "SecurityGroupIds": [
        "sg-1234567890abcdef0"
      ],
      "SubnetId": "subnet-abcdef01234567890"
    },
    {
      "Name": "ena-name",
      "NetworkInterfaceIds": [
        "eni-0cbabcf978eeb00a2"
      ],
      "NetworkInterfaceType": "ena",
      "RoleArn": "arn:aws:iam::111122223333:role/MediaConnectAccessRole",
      "SecurityGroupIds": [
        "sg-1234567890abcdef0"
      ],
      "SubnetId": "subnet-abcdef01234567890"
    }
  ]
}

```

Next steps

Now that you've created a flow, complete these steps to start delivering your content:

- [Add outputs](#) to specify where you want your MediaConnect flow to send your content
- [Grant entitlements](#) to allow users of other AWS accounts to subscribe to your content
- [Start your flow](#) to begin content delivery

Creating a flow that uses an NDI® source

You can use MediaConnect to create flows that ingest content from NDI® senders within your VPC. This guide explains how to create and configure a flow with an NDI source in MediaConnect.

Prerequisites

Before you begin, make sure you've completed the following steps:

- **Documentation review**

Review the [NDI sources](#) documentation to understand the capabilities of this feature.

- **Infrastructure setup**

Set up your VPC infrastructure with at least one NDI discovery server running, and with NDI senders actively broadcasting content within the VPC.

- For VPC setup: You can use the [AWS CloudFormation VPC template](#) to automatically create a VPC with public and private subnets. For more information about VPCs, see the [Amazon VPC User Guide](#).
- For NDI discovery server deployment: AWS provides guidance on automated setup across multiple Availability Zones using AWS CloudFormation, including best practices for installation and configuration. For instructions, see [Setting Up NDI Discovery Servers for Broadcast Workflows](#).
- For security group configuration: We recommend that you configure your security groups with a self-referencing ingress rule and egress rule. You can then attach this security group to the EC2 instances where your NDI servers are running within the VPC. This approach automatically allows all necessary NDI communication between components in your VPC, and all required network traffic is permitted. For guidance, see [Security Group Referencing](#) in the Amazon VPC User Guide.

Procedure

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose **Create flow**.
3. Configure the basic flow details:
 - For **Name**, enter a name for your flow.

- You can create multiple flows with the same name. However, we encourage you to use unique flow names within an AWS Region to help with organization.
- Keep in mind that you can't change this name after you create the flow.
- For **Availability Zone**, choose an Availability Zone for your flow.
 - If you leave this as **Any**, MediaConnect will assign one based on your VPC subnet.
- For **Flow size**, select **Large**.
 - You can only use NDI sources with large sized flows.
 - For more information about flow sizes, see [Flow sizes and capabilities](#).

4. Configure your flow source:

- For **Source type**, select **NDI Source**.
- For **Flow source name**, enter a unique name for the NDI flow source.
 - Keep in mind that you can't change this name after you create the flow.
- For **Flow source description**, enter a description to help you identify this source and its purpose.
- (Optional) For **NDI source name**, specify the name of the upstream NDI sender that will send to your flow.

You can either:

- Leave this field empty for now, and select from a list of discovered sources after starting the flow.
- Enter the exact name of an existing NDI sender that's registered with your discovery server (for example, **MACHINE (program)**).
- (Optional) For **NDI audio reference level**, choose the standard that the upstream NDI sender follows. The default is -20 decibels relative to full scale (dBFS). You can also enter any whole number from -40 to 0. For more information, see [Considerations and limitations](#).

5. Configure the VPC interfaces for your flow:

- In the **VPC interface** section, choose Add VPC interface.
- For **Name**, enter a unique name for your VPC interface.
- For **Role ARN**, specify the Amazon Resource Name (ARN) of the role that you created when you set up MediaConnect as a trusted service.
- For **VPC**, choose the ID of the VPC that you want to use.

- If your VPC isn't listed, verify that it's set up in Amazon Virtual Private Cloud and that you have IAM permissions to view it.
 - For **Subnet**, choose the VPC subnet that you want MediaConnect to use to set up your VPC configuration. You must choose at least one and can choose as many as you want.
 - For **Security groups**, specify the VPC security groups that you want MediaConnect to use to set up your VPC configuration. You must choose at least one security group.
6. Configure the NDI settings:
- Set **Flow NDI support** to **Enabled** if it's not already.
 - Enter an optional NDI machine name.
 - This name is used as a prefix to help you identify this flow source as an NDI receiver in your network. For example, if you enter **MACHINENAME**, your flow source will appear to your NDI senders as **MACHINENAME (ProgramName)**.
 - If you don't enter a name, MediaConnect generates a unique 12-character ID from the flow's ARN.
 - Add up to three NDI discovery servers. For each discovery server, provide the following information:
 - Enter the discovery server IP address (IPv4 format).
 - Specify a port number if you're not using the default (5959).
 - Select the appropriate VPC interface adapter.
7. Configure the encoder settings:
- For **Encoder profile name**, choose the encoder profile that you want to apply to your flow outputs.
 - (Optional) For **Maximum bitrate**, specify the maximum expected bitrate in bits per second (bps).
 - This setting lets you override the default video bitrate within the profile's supported range (10-50 Mbps).
 - If left blank, MediaConnect uses the default value of 20,000,000 bps.
8. Configure the monitoring options that you want to enable:
- a. Turn on **Thumbnails state** to generate source thumbnails that you can preview in the console.

- b. Turn on **Content quality analysis state** to monitor for the following audio and video quality issues.
 - i. (Optional) Turn on **Black frames** to detect periods of black video frames in the stream.
 - ii. (Optional) Turn on **Frozen frames** to detect periods of unchanging video frames in the stream.
 - iii. (Optional) Turn on **Silent audio** to detect periods of audio silence in the stream.
 - iv. (Optional) Set a duration threshold between 10 and 60 seconds for each metric that you enable. The default is 30 seconds.
9. At the bottom of the page, choose **Create flow**.

Next steps

Now that you've created a flow, complete these steps to start delivering your content:

- [Add outputs](#) to specify where you want your MediaConnect flow to send your content
- [Start your flow](#) to begin content delivery

Selecting NDI senders after you start your flow

When configuring your flow source, you can specify which upstream NDI sender (like a camera or encoder) will provide content to your MediaConnect flow. If you didn't specify this sender during flow creation or want to change it, you can select one after starting your flow.

You must start your flow before you can perform this procedure. MediaConnect can only discover and list available NDI senders when the flow is active.

To select or update upstream NDI sources

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to update.
3. Start the flow if it's not already active.
4. Choose the **Source** tab.
5. Choose the source that you want to update.
6. Choose **Update**.

7. Under **NDI source name**, specify the upstream source that the NDI sender will send to your flow.
 - Start typing a name in the field. As you type, matching NDI sources from your network will appear in a dropdown list.
 - Select the NDI source that you want to use from the list.
 - Choose the refresh button (#) to update the list of available NDI sources as needed.
8. Choose **Update** to save your changes.

Additional resources

For more information about source monitoring options for your flow, see the following pages in this guide:

- [Viewing thumbnails of the source video](#)
- [Monitoring with content quality analysis in AWS Elemental MediaConnect](#)

Viewing a list of MediaConnect flows

You can view a list of your AWS Elemental MediaConnect flows in a specific AWS Region.

To view a list of flows (console)

- Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

The **Flows** page appears, listing all the flows that are associated with your account.

To view a list of flows (AWS CLI)

- In the AWS CLI, use the `list-flows` command:

```
aws mediaconnect list-flows --profile PMprofile
```

The following example shows the return value:

```
{
  "Flows": [
    {
```

```
    "AvailabilityZone": "us-west-2a",
    "Description": "Temporary listed flow description",
    "FlowArn": "arn:aws:mediaconnect:us-
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
    "Name": "BasketballGame",
    "SourceType": "OWNED",
    "Status": "STOPPING"
  },
  {
    "AvailabilityZone": "us-west-2d",
    "Description": "Temporary listed flow description",
    "FlowArn": "arn:aws:mediaconnect:us-
east-1:111122223333:flow:2-3aBC45dEF67hiJ8k-2AbC34DE5fGa6:AwardsShow",
    "Name": "AwardsShow",
    "SourceType": "OWNED",
    "Status": "STANDBY"
  }
]
```

Viewing the details of a flow

You can view a flow's details, such as ARN, Availability Zone, status, source, entitlements, and outputs.

To view the details of a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to view.

The details page for that flow appears. This page is divided into the following tabs:

- The **Source** tab shows details about the source for this flow, including an indication of whether the flow is connected to the source.
- The **Outputs** tab shows details for each output that you created for this flow.
- The **Entitlements** tab shows any entitlements that you have granted on this flow.
- The **VPC interfaces** tab shows a list of connections that this flow has with virtual private clouds (VPCs) based on the Amazon Virtual Private Cloud (Amazon VPC) service.

- The **Media streams** tab shows a list of media streams that have been created on this flow. Each media stream represents a different component of a video such as video, audio, ancillary data.
- The **Alerts** tab shows a log of active alerts on this flow.

To view the details of a flow (AWS CLI)

- In the AWS CLI, use the `describe-flow` command:

```
aws mediaconnect describe-flow --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow
```

The following example shows the return value:

```
{
  "Flow": {
    "EgressIp": "54.201.4.39",
    "AvailabilityZone": "us-east-1b",
    "Status": "ACTIVE",
    "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow",
    "Entitlements": [
      {
        "EntitlementArn": "arn:aws:mediaconnect:us-east-1:111122223333:entitlement:1-AaBb11CcDd22EeFf-34DE5fG12AbC:MyEntitlement",
        "Description": "Assign to this account",
        "Name": "MyEntitlement",
        "Subscribers": [
          "444455556666"
        ]
      }
    ],
    "Description": "NYC awards show",
    "Name": "AwardsShow",
    "Outputs": [
      {
        "Port": 2355,
        "Name": "NYC",
        "Transport": {
          "SmoothingLatency": 0,
          "Protocol": "rtp-fec"
        }
      }
    ]
  }
}
```

```

        },
        "OutputArn": "arn:aws:mediacconnect:us-
east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:NYC",
        "Destination": "192.0.2.0"
    },
    {
        "Port": 3025,
        "Name": "LA",
        "Transport": {
            "SmoothingLatency": 0,
            "Protocol": "rtp-fec"
        },
        "OutputArn": "arn:aws:mediacconnect:us-
east-1:111122223333:output:2-987655dEF67hiJ89-c34de5fG678h:LA",
        "Destination": "192.0.2.0"
    }
],
"Source": {
    "IngestIp": "54.201.4.39",
    "SourceArn": "arn:aws:mediacconnect:us-
east-1:111122223333:source:3-4aBC56dEF78hiJ90-4de5fG6Hi78Jk:ShowSource",
    "Transport": {
        "MaxBitrate": 80000000,
        "Protocol": "rtp"
    },
    "IngestPort": 1069,
    "Description": "Saturday night show",
    "Name": "ShowSource",
    "WhitelistCidr": "10.24.34.0/23"
}
}
}

```

Starting a flow

After you create a flow, you must start the flow. You can also stop and restart a flow at any time.

To start a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediacconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to start.

The details page for that flow appears.

3. Choose **Start**.

To start a flow (AWS CLI)

- In the AWS CLI, use the `start-flow` command:

```
aws mediaconnect start-flow --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame --  
profile PMprofile
```

The following example shows the return value:

```
{  
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",  
  "Status": "STARTING"  
}
```

Stopping a flow

When you stop an active flow, it immediately becomes unavailable to customers who are accessing the output directly from your AWS Elemental MediaConnect flow or through an entitlement. If you want to delete an active flow, you must stop the flow first before you can delete it.

To stop a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to stop.

The details page for that flow appears.

3. Choose **Stop**.

The status of the flow changes to **Standby**. The flow stops immediately and is no longer viewable to customers who are accessing the output directly from your MediaConnect flow or through an entitlement.

To stop a flow (AWS CLI)

- In the AWS CLI, use the stop-flow command:

```
aws mediaconnect stop-flow --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame --  
profile PMprofile
```

The following example shows the return value:

```
{  
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",  
  "Status": "STOPPING"  
}
```

Updating a flow

You can change a flow's size, source, entitlements, outputs and several other settings. You can't change the flow's name, ARN, or Availability Zone. For more information, see the following topics:

- [Updating the flow size](#)
- [Updating the flow NDI® configuration](#)
- [Managing tags on a flow](#)
- [Updating the source](#)
- [Updating outputs](#)
- [Updating media streams](#)
- [Updating entitlements](#)
- [Adding a VPC interface to a flow](#)

Updating the flow size

Updating the flow size allows you to modify the processing capacity and feature set that's available for your MediaConnect flow.

 Important

You can only update **Medium** flows to **Large** or **Large** flows to **Medium**.

Prerequisites

- The following procedure assumes that you've already created a flow.
- The flow must be inactive. If the flow is active, you must [stop the flow first](#).
- If you are updating the flow size from **Large** to **Medium** and the flow has an NDI® source or output, you must [update the source](#) to a standard source, [remove the NDI output](#) (if exists), and [disable the NDI configuration](#) before updating the flow size.

Procedure

To update the flow size of an existing flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to update.

The details page for that flow appears.

3. In the **Details** section, choose **Flow actions** and then choose **Update flow size**.
4. Select the flow size.
5. Choose **Update**.

Updating NDI configuration

Updating the flow NDI® configuration allows you to determine how this flow communicates with the rest of your NDI environment.

 Important

The NDI configuration is available only for **Large** flows.

Prerequisites

- The following procedure assumes that you've already created a **Largeflow**.

Procedure

To update the NDI configuration of an existing flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to update.

The details page for that flow appears.

3. In the **NDI configuration** section, choose **Edit**.
4. Set **Flow NDI support** to **Enabled** to enable NDI, or **Disabled** to disable NDI.
5. Enter or update the NDI machine name.
 - This name is used as a prefix to help you identify this flow source as an NDI receiver in your network. For example, if you enter **MACHINENAME**, your flow source will appear to your NDI senders as **MACHINENAME (ProgramName)**.
 - If you don't enter a name, MediaConnect generates a unique 12-character ID from the flow's ARN.
6. Update the NDI discovery servers. You can add up to three discovery servers. For each discovery server, provide the following information:
 - Enter the discovery server IP address (IPv4 format).
 - Specify a port number if you're not using the default (5959).
 - Select the appropriate VPC interface adapter.
7. Choose **Update**.

Managing tags on a flow

You can use tags to help you track the billing and organization for your AWS Elemental MediaConnect flows, sources, outputs, and entitlements. These are the same tags that AWS Billing and Cost Management provides for organizing your AWS bill. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

Topics

- [Adding tags on a MediaConnect flow](#)
- [Editing tags on a MediaConnect flow](#)
- [Removing tags from a MediaConnect flow](#)

Adding tags on a MediaConnect flow

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect sources. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To add tags to a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to add tags to.

The details page for that flow appears.

3. In the **Details** section, choose **Flow actions** and then choose **Manage tags**.
4. Choose **Edit tags**.
5. For each tag that you want to add, do the following:
 - a. Choose **Add new tag**.
 - b. Enter a key and a value. For example, your key can be **sports** and your value can be **golf**.
6. Choose **Save changes**.

Editing tags on a MediaConnect flow

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect flows. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To edit tags on a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that has the tags you want to edit.

The details page for that flow appears.

3. In the **Details** section, choose **Flow actions** and then choose **Manage tags**.
4. Choose **Edit tags**.
5. Update the tags, as needed.
6. Choose **Save changes**.

Removing tags from a MediaConnect flow

You can remove a tag from a flow if you no longer want to use it to track the billing and organization for it.

To remove tags from a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to add tags to.

The details page for that flow appears.

3. In the **Details** section, choose **Flow actions** and then choose **Manage tags**.
4. Choose **Edit tags**.
5. Choose **Remove** next to each tag that you want to delete.
6. Choose **Save changes**.

Deleting a flow

When you delete an active flow, it immediately becomes unavailable to customers who are accessing the output directly from your AWS Elemental MediaConnect flow or through an entitlement. After you delete a flow, you can't recover it.

Important

Some flows have outputs that are [created and managed by a MediaLive channel](#). When managing this type of flow, keep in mind the following:

- If you **stop** the flow, MediaLive treats this as an input loss and the channel continues to run.

- If you **delete** the flow, MediaLive loses the input configuration, causing the channel to fail—even if the channel isn't currently ingesting the flow outputs.

Recommended action: Before deleting a flow with managed outputs, update the MediaLive channel to remove any references to the flow. This prevents instability or disruption to the channel. For instructions, see [Detaching an input](#) in the MediaLive User Guide.

Prerequisites

- If the flow is active, you must stop the flow before you can delete it. For instructions, see [Stopping a flow](#).

Procedure

Follow these steps to delete a flow in MediaConnect.

To delete a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to delete.

The details page for that flow appears.

3. Review the **Status** field to verify that the flow is in **Standby** mode.
4. If the flow status is **Active**, choose **Stop**.
5. Choose **Delete**.

A confirmation message appears.

6. Choose **Delete flow**.

The flow is no longer viewable to customers who are accessing the output directly from your MediaConnect flow or through an entitlement. It might take up to five minutes for the flow to be deleted entirely.

To delete a flow (AWS CLI)

- In the AWS CLI, use the `delete-flow` command:

```
aws mediaconnect delete-flow --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame --profile PMprofile
```

The following example shows the return value:

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
  "Status": "DELETING"
}
```

Flow sizes and capabilities

A flow size determines how much video throughput your flow can handle and which source and output types it supports. Choosing the right size ensures your flow can accommodate your required number of outputs, handle your desired video quality, and support specific features like NDI® or AWS Cloud Digital Interface (CDI).

Flow size options

MediaConnect currently offers three flow sizes: Medium, Large and Large 4x. Medium is the default option and suitable for most standard streaming requirements. Large flows provide enhanced capabilities for higher throughput and specialized features such as NDI sources and outputs. Large 4x flows support high-quality uncompressed content with AWS Cloud Digital Interface (CDI) or lightly compressed content with JPEG XS via the SMPTE 2110, part 22 transport standard.

Managing flow sizes

- When creating a new flow, you'll select either Medium, Large or Large 4x as the size, with Medium being the default choice.
- After the flow is created, you can update Medium flows to Large or Large flows to Medium.
- You can't update the size of a Large 4x flow after the flow is created.
- Some older flows may display no size designation (-) in the flow details. These flows function at a medium capacity.

Compare flow sizes

Use this table to compare flow sizes and select the one that meets your needs.

Flow Size	Use Case	Transport Streams		NDI		CDI	
		Output limits	Throughput	Output limits	Throughput	Output limits	Throughput
Medium	Standard transport stream distribution	Up to 50 transport stream outputs, or up to four TR-07 outputs	400 Mbps combined for transport streams 1 Gbps combined for TR-07	N/A	N/A	N/A	N/A
Large	Transport stream distribution and NDI	Up to 50 transport stream outputs (may include 1 NDI output), or up to four TR-07 outputs	400 Mbps combined for transport streams 1 Gbps combined for TR-07	- Up to 1 NDI output - The NDI output can support multiple NDI receivers in the same VPC subnet	2 Gbps total aggregate throughput	N/A	N/A

Flow Size	Use Case	Transport Streams		NDI		CDI	
		Output limits	Throughput	Output limits	Throughput	Output limits	Throughput
Large 4x	Production environments requiring CDI or SMPTE 2110 with JPEG XS	N/A	N/A	N/A	N/A	- Up to 10 outputs - For 4Kp60 content, up to 10 SMPTE 2110 JPEG XS outputs, or 4 CDI outputs	50 Gbps total aggregate throughput

For information about flow pricing, see [AWS Elemental MediaConnect Pricing](#).

Flow bandwidth alerts

When the network bandwidth usage for a flow is approaching the maximum supported capacity, MediaConnect publishes an alert on the flow details page. The video output bitrate is typically the primary contributor to the total bandwidth usage, but the bandwidth required for general flow operations also counts towards the threshold.

When you see this alert, you should consider taking action to reduce the load and stay within supported limits. For example, you can do the following:

- Decrease the number of outputs in the flow
- Lower the source bitrate or the quality of the video input

For instructions on how to review the alerts for a flow, see [Viewing the details of a flow](#).

Managing sources in MediaConnect

A source in MediaConnect can be anything that provides a live video feed, such as the following:

- An on-premises encoder
- Another AWS Elemental MediaConnect flow
- An AWS Elemental MediaLive output
- A playout system (cloud-based or on-premises)

For a list of supported protocols that you can use for your source, see [Protocols](#).

From the MediaConnect console, you can view Amazon CloudWatch metrics to [monitor the source health](#) of an active flow.

Topics

- [Using NDI® sources in a MediaConnect flow](#)
- [Adding a second source to an existing MediaConnect flow](#)
- [Updating the source of a MediaConnect flow](#)
- [Source failover on a MediaConnect flow](#)
- [Managing tags on a MediaConnect source](#)
- [Removing a source from a MediaConnect flow](#)
- [Source ports on MediaConnect flows](#)
- [Determining a source's peer IP address](#)

Using NDI® sources in a MediaConnect flow

AWS Elemental MediaConnect can ingest [Network Device Interface \(NDI®\)](#), a protocol for high-quality, low-latency video and audio over IP networks, and convert it into MPEG transport streams. This capability enables direct content ingestion within your network, connecting IP-based video production systems with traditional contribution workflows.

Using NDI sources, you can create streamlined production workflows that take content from your NDI-enabled production systems—such as cameras, vision mixers, and graphics engines—and ingest it directly into a MediaConnect flow from your Virtual Private Cloud (VPC). MediaConnect

then converts this NDI input into transport streams, which can be distributed to traditional broadcast infrastructure using protocols like SRT or Zixi. This integration works with your existing NDI infrastructure, requiring no modifications to your current VPC setup.

Key points

Understanding NDI terminology

In video and audio workflows, the terms **source** and **output** have specific meanings that vary between contexts. Understanding these differences helps you work with NDI sources across your production workflow.

- In MediaConnect flows:
 - A **source** is the entry point of a flow. **NDI sources** ingest NDI content into your flow from an upstream NDI sender.
 - An **output** is the exit point of a flow. **NDI outputs** send NDI content from your flow to a downstream NDI receiver.
- In NDI implementation:
 - An **NDI sender** is a network endpoint that sends video and audio streams over IP networks using the NDI protocol.
 - From the perspective of your MediaConnect flow, the NDI sender is the upstream device that provides content to your flow's NDI source.
 - When you add an NDI source to your MediaConnect flow, MediaConnect acts as an NDI receiver by connecting to an NDI sender in your network. Your flow can then convert this content for distribution through traditional broadcast protocols.

How NDI sources work

At a high level, here's how your content moves through MediaConnect when you use NDI sources in your flows:

1. Set up your VPC infrastructure with at least one NDI discovery server and active NDI senders within the VPC.
2. Create a large-sized flow with an NDI source, configuring your discovery servers and the NDI source settings.
3. Start your flow to discover the NDI senders that are broadcasting content within your VPC.
4. Connect to your selected NDI sender to start receiving content into your flow.

5. Convert and distribute the content through your flow outputs using transport stream protocols such as SRT or Zixi.

This workflow maintains compatibility with NDI-based production systems while adding the flexibility and networking advantages of traditional broadcast distribution.

Considerations and limitations

When planning your NDI source implementation in MediaConnect, keep in mind the following.

Consideration		Description
Basic requirements and configuration	Required flow size	NDI flow sources work only with large flows.
	VPC requirements	At least one NDI discovery server is required for each flow (up to a maximum of three).
		NDI discovery servers must already be provisioned and accessible in your VPC network. MediaConnect connects to these servers, but it doesn't create them for you.
		NDI sources must be accessible through your VPC infrastructure. All NDI traffic remains within your VPCs.
	Encoding requirements	You must configure encoding profiles to convert NDI to transport streams. Each flow uses one encoding profile for all its transport stream outputs. You can customize bitrates within the profile limits.
	Flow source limitations	You can use one NDI source for each large-sized flow. Failover and merge modes aren't supported for NDI sources.
	Flow output compatibility	When using an NDI source in your flow, you can use any supported transport stream protocol for the flow output (RTP, RTP+FEC, SRT, Zixi, and RIST).

Consideration		Description
		You can't use an NDI source and an NDI output in the same flow.
Management and operations	Flow source management	You can switch between an NDI source and a transport stream source while the flow is active or on standby. - Before switching to an NDI source, you must first upgrade your flow size to large. - When switching to a transport stream source, the flow size remains large unless you choose to downgrade the size afterwards.
	Monitoring	You can monitor the NDI source connection status through CloudWatch metrics.
	Cross-Region support	NDI sources are VPC-bound and can't span across different AWS Regions. Each flow can only receive NDI traffic from a source VPC subnet that's in the same AWS Region as your flow.
Technical specifications	Transport protocols	When using NDI as your flow source, the content is transported using TCP.
	NDI protocols	Only NDI high quality (HQ) is supported. NDI HX isn't supported.
	Timecode processing	Timecodes that are embedded in the NDI source will be inserted to the encoded AVC (H.264) video in an SEI message of type pic_timing, in accordance with section D.1.2 of ISO/IEC 14496-10-2005.

Consideration		Description
	Audio reference level	Set the audio reference level, in decibels relative to full scale (dBFS), to match your NDI sender. The default, -20, follows the NDI specification and the Society of Motion Picture and Television Engineers (SMPTE) audio standard. A value of -18 follows the European Broadcasting Union (EBU) convention. You can specify any whole number from -40 to 0.
	Discovery and connection methods	MediaConnect supports connections to NDI sources through NDI discovery servers only. Direct mDNS discovery or manual connection to NDI sources isn't supported.
	NDI feature support	NDI groups aren't supported.
		NDI genlock isn't supported.

Next steps

To get started, [create a flow](#) with an NDI source.

Additional resources

- [Flow sizes and capabilities](#)
- [Best practices](#)

Adding a second source to an existing MediaConnect flow

For transport stream flows, you can add a second source for failover. Both sources on the flow must use the same protocol. (However, you can have one source that uses RTP and the other that uses RTP-FEC.) For more information about source failover, see [Source failover](#).

The method you use to add a second source to a flow is dependent on the type of source that you want to use:

- [Standard source](#) – Uses content from any source that is not a VPC source or an entitled source.

- [VPC source](#) – Uses content that comes from a VPC that you configure.

MediaConnect doesn't support two sources on the following types of flow:

- Flows with an entitled source
- Flows with a CDI source
- Flows with an NDI® source

For redundancy with ST 2110 JPEG XS sources, you can specify two inbound VPC interfaces on an individual media stream. For redundancy with CDI sources, create a second flow.

From the MediaConnect console, you can view Amazon CloudWatch metrics to [monitor the source health](#) of an active flow.

Adding a standard source to an existing MediaConnect flow

You can add a second source to an existing flow for failover. Both sources on the flow must use the same protocol. (However, you can have one source that uses RTP and the other that uses RTP-FEC.) For more information about source failover, see [Source failover](#).

To add a standard source to an existing flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to update.
3. Choose the **Source** tab.
4. In the **Source failover configuration** section, choose **Edit**.
5. In the **Edit source failover configuration** window, make sure that **Failover** is set to **Active**.

Note

If you activate failover on a flow that is running, you might encounter a brief interruption in the flow output.

6. In the **Failover mode** drop-down menu, select the mode to use with your source protocol. For a list of the modes supported by each protocol, see [Failover support for source protocols in MediaConnect](#)

7. For **Recovery window**, specify the size of the buffer (delay) that you want the service to maintain. A larger buffer means a longer delay in transmitting the stream, but more room for error correction. A smaller buffer means a shorter delay, but less room for error correction. You can choose a value from 100–15000 ms. If you keep this field blank, MediaConnect uses the default value of 200 ms.
8. Choose **Update**.
9. In the **Sources** section, choose **Add**.
10. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console.
11. For **Source type**, choose **Standard source**.
12. Determine which protocol your source uses.

 Note

All sources on a flow must use the same protocol. However, you can have one source that uses RTP and the other that uses RTP-FEC.

13. For specific instructions based on your protocol, choose one of the following tabs:

RIST

1. For **Protocol**, choose **RIST**.
2. For **Inbound port**, specify the port that the flow listens on for incoming content.

 Note

The RIST protocol requires one additional port for error correction. To accommodate this requirement, MediaConnect reserves the port that is +1 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000 and 4001.

3. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

4. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.
5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 1–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

RTP or RTP-FEC

1. For **Protocol**, choose **RTP** or **RTP-FEC**.
2. For **Inbound port**, specify the port that the flow listens on for incoming content.

 Note

The RTP-FEC protocol requires two additional ports for error correction. To accommodate this requirement, MediaConnect reserves the ports that are +2 and +4 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000, 4002, and 4004.

3. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

⚠ Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

4. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.

SRT listener

1. For **Protocol**, choose **SRT listener**.
2. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
3. For **Allowlist CIDR block**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

⚠ Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

4. For **Inbound port**, specify the port that the flow listens on for incoming content.
5. For **Source listener address**, enter the address MediaConnect will use for the SRT connection. The address can be an IP address or a domain name.
6. For **Maximum bitrate** (optional), specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.

7. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

8. If the source is encrypted, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

SRT caller

1. For **Protocol**, choose **SRT caller**.
2. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
3. For **Source listener address**, enter the address MediaConnect will use for the SRT connection. The address can be an IP address or a domain name.
4. For **Source listener port**, enter the port MediaConnect will use for the SRT connection.
5. For **Maximum bitrate** (optional), specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.
6. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the

stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

7. For **Stream ID** (optional), enter an identifier for the stream. This identifier can be used to communicate information about the stream.
8. If the source is encrypted, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

Zixi push

1. For **Protocol**, choose **Zixi push**.

AWS Elemental MediaConnect populates the value of the inbound port.

2. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that

is too wide, it allows for the possibility of outside parties sending content to your flow.

3. For **Stream ID**, specify the stream ID that the Zixi sender uses.

 Important

If you leave this field blank, MediaConnect uses the source name as the stream ID. The stream ID must match the value that the Zixi sender uses. If it differs from the source name, specify the stream ID explicitly.

4. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 0–60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms.
5. If the source is encrypted, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Decryption type**, choose **Static key**.
 - b. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - c. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
 - d. For **Decryption algorithm**, choose the type of encryption that was used to encrypt the source.

Zixi push for AWS Elemental Link UHD device

After creating the additional Zixi push source, you must configure the AWS Elemental Link device using MediaLive. See the following MediaLive setup instructions to complete the process after you have created the source: [Using a device in a flow](#) in the *MediaLive User Guide*. Ensure you have access to both MediaConnect and MediaLive to complete these steps.

 Note

Zixi push for AWS Elemental Link UHD devices only supports failover mode. Merge mode is not supported.

1. For **Protocol**, choose **Zixi push**.

AWS Elemental MediaConnect populates the value of the inbound port.

2. For **Allowlist CIDR**, specify a range of IP addresses that are allowed to contribute content to your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

If you know the range of public IP addresses that your Link device uses to connect to the internet, enter that CIDR block. Note that this is not the same as the IP address of the AWS Elemental Link device. If you cannot obtain this information, it is possible to configure the CIDR block to be open to all possible IP addresses by using 0.0.0.0/0. Typically, it is not best practice to assign a CIDR block that is open to the entire internet (0.0.0.0/0). However, if this method must be used, the data being transferred is encrypted using AES-128 encryption.

3. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms. The **Maximum latency** value should match the **Latency** value configured on the AWS Elemental Link device. For information on configuring the Link device's latency, see: [Configuring the device](#) in the *AWS Elemental MediaLive User Guide*
4. For **Decryption**, choose **Activate** and do the following:
 - a. For **Decryption type**, choose **Static key**.
 - b. For **Decryption algorithm**, choose **AES-128**. AWS Elemental Link requires AES-128, do not select another algorithm.

- c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
- d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

14. Choose **Save**.

Adding a VPC source to an existing MediaConnect flow

You can add a second source to an existing transport stream flow for failover. Both sources on the flow must be binary identical (come from the same encoder) and they must use the same protocol. (However, you can have one source that uses RTP and the other that uses RTP-FEC.) For more information about source failover, see [Source failover](#).

Important

Before you start this procedure, make sure that you completed the following steps:

- In Amazon VPC, set up your VPC and associated security groups. For more information about VPCs, see the [Amazon VPC User Guide](#). For information about configuring security groups to work with your VPC interface, see [Security group considerations](#).
- In IAM, [set up MediaConnect as a trusted service](#).
- If the source of your flow requires encryption, [set up encryption](#).
- [Stop your flow](#) or make sure that it's in a standby state. You can't add VPC interfaces to an active flow.

MediaConnect doesn't support two sources on CDI flows. For redundancy with ST 2110 JPEG XS sources, you can specify two inbound VPC interfaces on an individual media stream. For redundancy with CDI sources, create a second flow.

To add a VPC source to an existing flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to update.
3. Choose the **Source** tab.
4. In the **Source failover configuration** section, choose **Edit**.

5. In the **Edit source failover configuration** window, make sure that **Failover** is set to **Enabled**.

 Note

If you enable failover on a flow that is running, you might encounter a brief interruption in the flow output.

6. For **Recovery window**, specify the size of the buffer (delay) that you want the service to maintain. A larger buffer means a longer delay in transmitting the stream, but more room for error correction. A smaller buffer means a shorter delay, but less room for error correction. You can choose a value from 100–15000 ms. If you keep this field blank, MediaConnect uses the default value of 200 ms.
7. Choose **Update**.
8. In the **Sources** section, choose **Add source**.
9. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console.
10. For **Source type**, choose **VPC source**.
11. Determine which protocol your source uses.

 Note

All sources on a flow must use the same protocol. However, you can have one source that uses RTP and the other that uses RTP-FEC.

12. For specific instructions based on your protocol, choose one of the following tabs:

RIST

1. For **Protocol**, **RIST** will automatically be selected.
2. For **Inbound port**, specify the port that the flow listens on for incoming content.

 Note

The RIST protocol requires one additional port for error correction. To accommodate this requirement, MediaConnect reserves the port that is +1 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000 and 4001.

3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
4. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.
5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 1–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

RTP or RTP-FEC

1. For **Protocol**, choose **RTP** or **RTP-FEC**.
2. For **Inbound port**, specify the port that the flow listens on for incoming content.

Note

The RTP-FEC protocol requires two additional ports for error correction. To accommodate this requirement, MediaConnect reserves the ports that are +2 and +4 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000, 4002, and 4004.

3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
4. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.

SRT listener

1. For **Protocol**, **SRT listener** will automatically be selected.
2. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.

4. For **Inbound port**, specify the port that the flow listens on for incoming content.
5. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.
6. For **Minimum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10 -15,000 ms. If you keep this field blank, the service uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

7. If the source is encrypted, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

SRT caller

1. For **Protocol**, **SRT caller** will automatically be selected.
2. For **Source description**, enter a description that will remind you later where this source is from. This might be the company name or notes about the setup.
3. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.
4. For **Source listener port**, enter the port MediaConnect will use for the SRT connection.

5. For **Source listener address**, enter the address MediaConnect will use for the SRT connection. The address can be an IP address or a domain name.
6. For **Maximum bitrate**, specify the maximum expected bitrate (in bits per second) for the flow. We recommend that you specify a value that is twice the actual bitrate. The lowest value that you can enter in this field is 100 Kbps.
7. For **Minimum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10 -15,000 ms. If you keep this field blank, the service uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRT0_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRT0_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

8. For **Stream ID** (optional), enter an identifier for the stream. This identifier can be used to communicate information about the stream.
9. If the source is encrypted, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - b. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).

Zixi push

1. For **Protocol**, **Zixi push** will automatically be selected.

AWS Elemental MediaConnect populates the value of the inbound port.

2. For **VPC interface name**, choose the name of the VPC interface that you want to use as the source.

3. For **Stream ID**, specify the stream ID that the Zixi sender uses.

 Important

If you leave this field blank, MediaConnect uses the source name as the stream ID. The stream ID must match the value that the Zixi sender uses. If it differs from the source name, specify the stream ID explicitly.

4. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 0–60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms.
5. If the source is encrypted, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Decryption type**, choose **Static key**.
 - b. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - c. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
 - d. For **Decryption algorithm**, choose the type of encryption that was used to encrypt the source.

13. Choose **Save**.

Updating the source of a MediaConnect flow

Updating the source of a flow allows you to modify where your content comes from without having to create a new flow. For most flows, you can make these updates even while the flow is running.

Prerequisites

Depending on the type of update you want to make, there are some steps to complete before you get started.

If you're updating a flow with an entitled source

You can't update an entitled flow while it's active. Before you update the flow source, you must [stop the flow first](#). After you make your updates, you can then restart the flow.

If you're switching between an NDI® source and a transport stream source

You can update the flow source while it's either active or on standby.

- **When changing to an NDI source**

Before you update the flow source, you must edit the flow first and change the flow size from medium to large.

- **When changing to a transport stream source**

Your flow size will remain as large after you update the source type. If you want to downgrade the flow size, you'll need to edit the flow afterwards as a separate step.

Procedure

The following procedure guides you through the process of updating a flow source.

To update the source of an existing flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to update.
3. Choose the **Source** tab.
4. Choose the source that you want to update.
5. Choose **Update**.
6. Make the appropriate changes, and then choose **Update source**.

To update the source of an existing flow (AWS CLI)

- In the AWS CLI, use the **update-flow-source** command:

```
aws mediaconnect update-flow-source --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow --source-arn arn:aws:mediaconnect:us-east-1:111122223333:source:2-3aBC45dEF67hiJ89-c34de5fG678h:AwardsShowSource --allowlist-cidr 10.24.34.0/24 --profile PMprofile
```

Source failover on a MediaConnect flow

Source failover is a setup that involves two redundant sources for a transport stream flow. This redundancy helps to minimize disruption to your video stream. To use source failover, you specify two sources for the flow, then choose one of two options for the failover mode: *Merge* or *Failover*.

- Merge mode combines the sources into a single stream, allowing a graceful recovery from any single-source loss. If you set the failover mode to *Merge*, you can set the recovery window, which is the size of the buffer (delay) that you want MediaConnect to maintain. A larger recovery window means a longer delay in transmitting the stream, but more room for error correction. A smaller recovery window means a shorter delay, but less room for error correction. Sources used this way need to be *binary identical*, which means that they need to have originated from the same encoder. MediaConnect must also receive content from the two sources at the same time. Additionally, if the sources use RTP protocol, they must have RTP headers with aligned sequence numbers and they must also comply with the SMPTE ST 2022-7 standard.

Note

SMPTE ST 2022-7 is a standard developed by the Society of Motion Picture and Television Engineers (SMPTE) group. The ST 2022-7 standard defines a method that replaces missing packets with packets in an identical, redundant stream. This type of failover requires a small latency buffer in your workflow to allow time for MediaConnect to recover packets from the two streams.

- Failover mode allows switching between a primary and a backup stream. This switching facilitates an easy transition to a more reliable stream. If you set the failover mode to *Failover*, you can specify a source as the primary source. The second source serves as the backup. If you don't specify a primary source, MediaConnect treats both sources with equal priority, and switches to the available source as needed.

MediaConnect uses the two modes of failover in the following ways:

- In the *Merge* mode, MediaConnect uses content from both sources. The flow randomly selects one of the sources to start with. If that source is missing a packet, the flow pulls the missing packet from the other source. For example, if the flow is using source A and packet 123 is missing, MediaConnect pulls in packet 123 from source B and continues using source A. In this mode, the two sources are binary identical/ST 2022-7 compliant.

- In the *Failover* mode, if you don't specify a primary source, MediaConnect randomly uses one of the sources to provide content for the flow. If MediaConnect does not receive data from the source for 500 milliseconds, the flow switches to the other source, and can continue switching back and forth between sources as needed. If you do specify a primary source, MediaConnect uses that source to provide content for the flow. The flow switches to the other source if the primary source does not send data for 500 milliseconds, and switches back to the primary source as soon as data returns.

Note

MediaConnect doesn't support source failover on CDI flows, on NDI® flows, or on entitlement flows. For more information about creating redundancy with CDI flows, visit: [Creating a flow that uses a CDI source](#). Additionally, you cannot add a second source to an existing flow for failover if you are using the Zixi pull protocol.

Failover support for source protocols in MediaConnect

The following table describes which source protocols support failover.

Protocol	Does this protocol support source failover?	How many sources can be added?	Supported failover modes
RIST	Yes	2	Merge or failover
RTP	Yes	2	Merge or failover
RTP-FEC	Yes	2	Merge or failover
SRT listener	Yes	2	Failover only
SRT caller	Yes	2	Failover only
Zixi pull	No	None - Zixi pull cannot be used as a source.	Source failover is not supported

Protocol	Does this protocol support source failover?	How many sources can be added?	Supported failover modes
Zixi push	Yes	2	Merge or failover
Zixi push for AWS Elemental Link UHD	Yes	2	Failover only
CDI	No	1	Source failover is not supported
ST 2110 JPEG XS	No	1	Source failover is not supported
Entitlement flows	No	1	Source failover is not supported
NDI® Speed HQ	No	1	Source failover is not supported

Managing tags on a MediaConnect source

You can use tags to help you track the billing and organization for your AWS Elemental MediaConnect flows, sources, outputs, and entitlements. These are the same tags that AWS Billing and Cost Management provides for organizing your AWS bill. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

Topics

- [Adding tags on a MediaConnect source](#)
- [Editing tags on a MediaConnect source](#)
- [Removing tags from a MediaConnect source](#)

Adding tags on a MediaConnect source

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect sources. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To add tags to a source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the source that you want to add tags to.
3. Choose the **Sources** tab.

A list of sources for that flow appears.

4. Choose the source that you want to add tags to.
5. Choose **Manage tags**.
6. Choose **Manage tags** again, and then choose **Add tag**.
7. For each tag that you want to add, do the following:
 - a. Enter a key and a value. For example, your key can be **sports** and your value can be **golf**.
 - b. Choose **Add tag**.
8. Choose **Update**.

Editing tags on a MediaConnect source

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect sources. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To edit tags on a source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the source that you want to edit tags for.
3. Choose the **Sources** tab.

A list of sources for that flow appears.

4. Choose the source that you want to edit tags for.
5. Choose **Manage tags**.
6. Choose **Manage tags** again.
7. Update the tags, as needed.
8. Choose **Update**.

Removing tags from a MediaConnect source

You can remove a tag from a source if you no longer want to use it to track the billing and organization for it.

To remove tags from a source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the source that you want to remove tags from.
3. Choose the **Sources** tab.

A list of sources for that flow appears.

4. Choose the source that you want to remove tags from.
5. Choose **Manage tags**.
6. Choose **Manage tags** again.
7. Choose **Remove tag** next to each tag that you want to delete.
8. Choose **Update**.

Removing a source from a MediaConnect flow

If a flow has more than one source, you can remove one of the sources even when the flow is currently running.

To remove a source from a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

2. On the **Flows** page, choose the name of the flow.
3. Choose the **Source** tab.
4. Choose the source that you want to remove.
5. Choose **Remove**.

Source ports on MediaConnect flows

Each source on a flow must use a different port (for exceptions to this, see the note). Some protocols require additional ports for error correction. For sources that use these protocols, AWS Elemental MediaConnect automatically reserves the additional ports that are needed. All MediaConnect protocols use UDP ports. The following table lists which additional ports, if any, the service reserves.

Important

There is an exception to the port requirements for sources that use the Zixi protocol. For standard Zixi sources, all sources use port 2088. For VPC Zixi sources, the sources will use an inbound port range of 2090-2099. The 2090-2099 port range is reserved exclusively for Zixi VPC sources and cannot be used by another source protocol. The VPC Zixi source port is assigned by MediaConnect when the source is created.

Protocol	Ports needed	Ports required
CDI	Port	The port that you specify. This is the only port needed for the source.
RIST	Port and port+1	The port that you specify, plus one additional port. MediaConnect automatically reserves a port that is +1 from the port that you specified. For example, if you specify port 3000 for this output,

Protocol	Ports needed	Ports required
		the service also reserves port 3001.
RTP	Port	The port that you specify. This is the only port needed for the output.
RTP-FEC	Port, port+2, and port+4	The port that you specify, plus two additional ports. MediaConnect automatically reserves ports that are +2 and +4 from the port that you specified. For example, if you specify port 2000 for this output, the service also reserves ports 2002 and 2004 for error correction.
SRT listener	Port	The port that you specify. This is the only port needed for the source.
SRT caller	Port	The port that you specify. This is the only port needed for the source.
ST 2110 JPEG XS	Port	The port that you specify. This is the only port needed for the source.

Protocol	Ports needed	Ports required
Zixi push	Port	For standard sources: MediaConnect automatically uses port 2088. For VPC sources: MediaConnect automatically assigns a port in the range of 2090-2099 when the source is created. The 2090-2099 port range is reserved exclusively for Zixi VPC sources and cannot be used by another source protocol.
NDI®	Port	The ports that you specify for each media stream. If you don't specify a custom port, MediaConnect uses the default NDI discovery protocol (TCP-5959) to announce NDI sources on your network.

Determining a source's peer IP address

A source peer IP address shows which device is currently sending content to your flow. This information is valuable for troubleshooting and monitoring, as it helps you to diagnose connectivity issues on your own without having to contact AWS support.

For example, you can use the source peer IP address to do the following:

- Verify that the expected source is connected
- Troubleshoot connection issues
- Monitor security by ensuring content is coming from expected IPs

Finding a source's peer IP address

You can view the current peer IP address for each of your flow sources in the MediaConnect console, or by using the [DescribeFlow](#) API operation.

To determine a source's peer IP address

1. On the **Flows** page, choose the name of the flow that you want to view.
2. Choose the **Sources** tab.
3. Select the source that you want to view, and then choose **Details**.
4. Under **Peer IP Address**, note the peer IP address.

Note

For SRT caller sources, the peer IP address matches the IP address that you configured during setup. This is because MediaConnect initiates the connection to this pre-defined IP address. MediaConnect reports this address to provide a complete picture of your flow's configuration.

For protocols with dynamic peers (like RTP sources, RIST sources, and SRT listener sources), the peer IP address reflects the current state of the flow, showing the address of the device currently sending traffic to your source.

Important information about peer IP addresses

Peer IP display and updates

- For troubleshooting purposes, MediaConnect shows the latest IP address information in near real-time.
- Although most updates happen quickly, it might take up to 20 seconds for peer IP address changes to be reflected in the console and API responses.
- Only the current peer IP address is displayed. Historical records aren't currently available.
- The peer IP address might not be visible for flows that haven't been started yet, or flows that were started before May 2025. In these cases, you might need to restart your flow to see the peer IP information.

Supported protocols and source types

- Peer IP addresses are shown for most protocols, including both pre-configured and dynamic connections
- Peer IP addresses aren't available for:
 - Entitlements
 - CDI/ST2110 sources

Managing outputs in MediaConnect

Outputs are the different destinations where you want MediaConnect to send the content of your flow. You can add, remove, and disable outputs at any time, even when the flow is active. A disabled output will stop steaming content to its destination and won't incur data transfer costs. These outputs are sent to the IP address that you specify. This option is useful if you intend to send your content to an on-premises encoder.

For transport stream flows, you can [grant an entitlement](#) to share your content with another AWS account (subscriber account). When the subscriber creates a flow using your content as the source, AWS Elemental MediaConnect generates an output on your flow.

Note

If you [disable](#) an entitlement after the subscriber creates a flow based on that entitlement, the associated output remains on your flow. This output continues to counts toward your maximum number of outputs. To delete an output that's associated with an entitlement, [revoke](#) the entitlement.

Topics

- [Using NDI® outputs in a MediaConnect flow](#)
- [Adding outputs to a MediaConnect flow](#)
- [Viewing the list of outputs for a MediaConnect flow](#)
- [Updating outputs on a MediaConnect flow](#)
- [Managing tags on a MediaConnect output](#)
- [Disabling or removing outputs from a MediaConnect flow](#)
- [Output destinations](#)

- [Determining an output's IP address](#)

Using NDI® outputs in a MediaConnect flow

AWS Elemental MediaConnect can convert MPEG transport streams into [Network Device Interface \(NDI®\)](#), a protocol for high-quality, low-latency video and audio over IP networks. This capability enables direct content delivery within your network, connecting traditional contribution workflows with IP-based video production systems.

Using NDI outputs, you can create streamlined production workflows that take content from your AVC or HEVC-based encoder, process it through a MediaConnect flow as a transport stream, and output it directly into your Virtual Private Cloud (VPC) as NDI. Your production systems—including vision mixers, audio mixers, replay systems, and graphics engines—can immediately access these NDI streams through standard NDI discovery. This integration works with your existing NDI infrastructure, requiring no modifications to your current VPC setup.

Key points

Understanding NDI terminology

In video and audio workflows, the terms *source* and *output* have specific meanings that vary between contexts. Understanding these differences helps you work with NDI outputs across your production workflow.

- In MediaConnect flows:
 - A *source* is the incoming video and audio feed to the flow. NDI is supported as a source type.
 - An *output* determines where and how your content is delivered. NDI is supported as an output type.
- In NDI implementation:
 - An NDI source is a network endpoint that sends video and audio streams over IP networks using the NDI protocol.
 - When you add an NDI output to your MediaConnect flow, MediaConnect acts as an NDI sender by creating an NDI source. Your production systems can then connect to this source as NDI receivers to get the video and audio stream.

In summary: Your MediaConnect flow takes video and audio from a flow source and, with an NDI flow output enabled, it creates an NDI source that your production systems can receive from.

How NDI outputs work

At a high level, here's how your content moves through MediaConnect when you use NDI outputs:

1. You create a large sized flow with NDI enabled, configuring your discovery servers and NDI output settings.
2. You send content to the flow source, using supported transport stream protocols such as SRT or Zixi.
3. MediaConnect processes the content to the flow output, creating a discoverable NDI source in your VPC.
4. The production systems in your network can now discover and connect to these endpoints and receive your content.

This workflow maintains compatibility with existing broadcast infrastructure while adding the flexibility and networking advantages of NDI distribution.

White screen generation for NDI outputs

When you configure a transport stream flow with NDI outputs, MediaConnect automatically generates white video frames to provide a valid source signal for downstream NDI devices. This helps you confirm that your NDI output is properly configured and functioning, even when your source isn't actively sending content.

The white frame generation operates as follows:

- **On initial flow startup** - If no source content is received within 10 seconds, MediaConnect generates white frames with silent audio on your NDI output.
- **After a source has connected and started sending content** - If a source disconnects for more than 60 seconds, MediaConnect generates white frames with silent audio.

This feature is particularly useful when you're setting up flows in advance of live events, or in situations where your source content isn't immediately available. The white frames serve as a visual indicator that your NDI output is working correctly and is ready to receive source content. This is more informative than seeing a black screen, which could either indicate a loss of signal or intentional black video content from your source.

This feature is available exclusively for NDI outputs. You don't need to configure or enable white screen generation - it works automatically whenever your flow is in a running state but isn't

receiving source content. When your source starts sending content to your flow, the source content automatically replaces the white frames. MediaConnect stops generating silent audio frames, and the audio passes through from the source.

Considerations and limitations

When planning your NDI output implementation in MediaConnect, keep in mind the following.

Consideration	Description
Flow type	NDI outputs are only supported for standard transport stream flows. You can use them with all types of transport stream sources (standard source, entitled source, or VPC source).
Flow size	The NDI output feature can only be used on large-sized flows. You can specify the flow size as large when you create a new flow.
Passthrough support	Flows cannot have both an NDI source and NDI outputs simultaneously.
Supported source protocols	NDI outputs are compatible with all supported source protocols (RTP, RTP+FEC, SRT, Zixi, and RIST).
Transport protocols	MediaConnect uses TCP as the transport protocol for NDI.
Multi-program source handling	NDI outputs can only be created using single program transport stream sources. For multi-program transport stream sources, the NDI output only transmits the first program available to downstream receivers.
Timecode processing	You can choose how MediaConnect generates timecodes for NDI output frames: • Embedded Timecode (default) – Preserves timecodes from the input transport stream. The timecodes must be embedded in the video stream as SEI timing messages. If no embedded timecode is detected, MediaConnect uses the UTC system time instead.

Consideration	Description
	• UTC System Time – Generates timecodes based on the system clock time when each frame is sent. You can check whether timecodes are present in your source content by using the <code>TimecodePresent</code> CloudWatch metric.  Note NDI timecodes generated from SMPTE timecodes don't include a date component.
Audio reference level	Set the audio reference level, in decibels relative to full scale (dBFS), to match your NDI receiver. The default, -20, follows the NDI specification and the Society of Motion Picture and Television Engineers (SMPTE) audio standard. A value of -18 follows the European Broadcasting Union (EBU) convention. You can specify any whole number from -40 to 0.
Output configuration	You can add one NDI output to each large-sized flow. At least one NDI discovery server is required for each flow (up to a maximum of three). You can combine an NDI output with transport stream outputs in the same flow.  Note Keep in mind that NDI outputs are resource intensive, and adding an NDI output will reduce the number of transport stream outputs you can run simultaneously. For more information about best practices for using NDI outputs, see Best practices.

Consideration	Description
Network architecture	NDI discovery servers must already be provisioned and accessible in your VPC network. MediaConnect connects to these servers, but it doesn't create them for you.
	NDI outputs must be delivered through your VPC infrastructure. All NDI traffic remains within your VPCs.
	You can use two discovery servers in the same subnet. However, you can't use two discovery servers with the same IP address in different subnets.
Receiver capacity	One NDI output can support multiple NDI receivers in the same VPC subnet.
	We recommend that you monitor flow performance when multiple receivers connect to a single output, as this can impact CPU and memory usage.
	You can monitor the number of NDI receiver connections through the <code>ConnectedReceivers</code> metric in CloudWatch.
NDI feature support	NDI groups aren't supported.
	NDI failsafe sources/senders aren't supported.
	NDI genlock isn't supported.
Discovery and connection methods	MediaConnect supports connections to NDI outputs through NDI discovery servers only. Direct mDNS discovery or manual connection to NDI outputs isn't supported.

Consideration	Description
Cross-Region support	NDI outputs are VPC-bound and can't span across different AWS Regions. Each flow can only transmit NDI traffic to the target VPC subnet that's in the same AWS Region as your flow. For NDI outputs across multiple AWS Regions, we recommend using separate flows with dedicated NDI ecosystems in each Region/VPC. Alternatively, if you need to send NDI traffic to different AWS Regions, you can set up a downstream solution that uses networking services to route the NDI traffic where you need it.

Supported decoding parameters

The following table outlines the supported decoding parameters for NDI outputs in MediaConnect.

For video decoder parameters: the supported bit depth/codecs for AVC should be the same as HEVC.

Decoding parameter	Description
Video codec and chroma sampling profiles	• AVC (H.264): 8-bit 4:2:0, 8-bit 4:2:2, 10-bit 4:2:0, 10-bit 4:2:2 • HEVC (H.265): 8-bit 4:2:0, 8-bit 4:2:2, 10-bit 4:2:0, 10-bit 4:2:2 • MPEG-2: 8-bit 4:2:0, 8-bit 4:2:2
Audio codec support	• MPEG-1 Layer 2 • MPEG-2 Part 3 • MP3 • AAC (HE, LC) • AC3 • SMPTE 302M • Multiple audio channels supported (up to the NDI limit of 16 audio channels).

Decoding parameter	Description
	 Note If the source contains multiple audio PIDs, MediaConnect combines all the audio streams. However, this is only possible if the sample rates are the same across all of the PIDs.
Supported resolutions	Supports resolutions from 480p up to 1080p
Scan type	Supports both interlaced and progressive formats
Frame rates	Supports the following frame rates : 23.98, 24, 25, 29.97, 30, 50, 59.94, 60 fps

Next steps

To get started with NDI outputs, first [create a flow](#) with NDI enabled, then [add an NDI output](#) to your flow.

Additional resources

- [Flow sizes and capabilities](#)
- [Best practices](#)

Adding outputs to a MediaConnect flow

For transport stream flows, you can add up to 50 outputs. However, for optimal performance, follow the guidance offered in [Best practices](#). Every output must have a name, a [protocol](#), an IP address, and a port.

Note

If you intend to set up an entitlement for an output, don't create the output. Instead, [grant an entitlement](#). When the subscriber creates a flow using your content as the source, the service creates an output on your flow.

The method you use to add an output to a flow is dependent on the type of output that you want to add:

- [Standard output \(transport stream flow\)](#) – Sends compressed content to any destination that is not a virtual private cloud (VPC) that you configured using Amazon Virtual Private Cloud.
- [VPC output \(transport stream flow\)](#) – Sends compressed content to a VPC that you configured using Amazon Virtual Private Cloud.
- [NDI® output \(transport stream flow\)](#) – Sends high-quality, low-latency content over IP networks so that it can be received by the production systems within your VPC network.
- [VPC output \(CDI flow\)](#) – Sends uncompressed content to a VPC that you configured using Amazon Virtual Private Cloud.

Adding standard outputs to a MediaConnect flow

For transport stream flows, you can add up to 50 outputs. However, for optimal performance, follow the guidance offered in [Best practices](#). A standard output goes to any destination that is not part of a virtual private cloud (VPC) that you created using Amazon Virtual Private Cloud.

Note

CDI flows don't support standard outputs.

To add a standard output to a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to add an output to.

The details page for that flow appears.

3. Choose the **Outputs** tab.
4. Choose **Add output**.
5. For **Name**, specify a name for your output. This value is an identifier that is visible only on the AWS Elemental MediaConnect console and is not visible to the end user.
6. For **Output type**, choose **Standard output**.
7. For **Description**, enter a description that will remind you later where this output is going. This might be the company name or notes about the setup.

8. Determine which protocol you want to use for the output.
9. For specific instructions based on the protocol that you want to use, choose one of the following tabs:

RIST

1. For **Protocol**, choose **RIST**.
2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).

Note

The RIST protocol requires one additional port for error correction. To accommodate this requirement, AWS Elemental MediaConnect reserves the port that is +1 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000 and 4001.

4. For **Smoothing latency**, specify the additional delay that you want to use with output smoothing. We recommend that you specify a value of 0 ms to disable smoothing. However, if the receiver can't process the stream properly, specify a value between 100 and 1,000 ms. This way, AWS Elemental MediaConnect attempts to correct jitter from the flow source. If you keep this field blank, the service uses the default value of 0 ms.

RTP or RTP-FEC

1. For **Protocol**, choose **RTP** or **RTP-FEC**.
2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).

Note

The RTP-FEC protocol requires two additional ports for error correction. To accommodate this requirement, AWS Elemental MediaConnect reserves the ports

that are +2 and +4 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000, 4002, and 4004.

4. For **Smoothing latency**, specify the additional delay that you want to use with output smoothing. We recommend that you specify a value of 0 ms to disable smoothing. However, if the receiver can't process the stream properly, specify a value between 100 and 1,000 ms. This way, AWS Elemental MediaConnect attempts to correct jitter from the flow source. If you keep this field blank, the service uses the default value of 0 ms.

SRT listener

1. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
2. For **Protocol**, choose **SRT listener**.
3. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

4. For **CIDR allow list**, specify a range of IP addresses that are allowed to view content from your output. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Important

Specify a CIDR block that is as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If you specify a CIDR block that is too wide, it allows for the possibility of outside parties sending content to your flow.

 Tip

To specify an additional CIDR block, choose **Add**. You can specify up to three CIDR blocks.

5. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
6. If you want to encrypt the video as it is sent to this output, do the following:
 - a. In the **Encryption** section, choose **Enable**.
 - b. **Encryption type** will not be selectable. **srt-password** is the only available encryption for this protocol.
 - c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the SRT password](#).

SRT caller

1. For **Protocol**, choose **SRT-caller**.
2. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate,

multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

3. For **Destination IP address**, enter the IP address or domain of the output's destination.
4. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
5. If you want to encrypt the video as it is sent to this output, do the following:
 - a. In the **Encryption** section, choose **Enable**.
 - b. **Encryption type** will not be selectable. **Srt-password** is the only available encryption for this protocol.
 - c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the SRT password](#).

Zixi pull

1. For **Protocol**, choose **Zixi pull**.
2. For **Stream ID**, enter the **Stream** value that was configured when you added the input on the Zixi receiver. In the Zixi receiver, this value is found in the **Stream parameters** section.

Important

If you keep this field blank, the service uses the output name as the stream ID. Because the stream ID must match the value that is set in the Zixi receiver, you must specify the stream ID if it is not exactly the same as the output name.

3. For **Remote ID**, enter the **ID** value that is assigned to the Zixi receiver. In the Zixi receiver, this value is located in the **General** settings menu and is labelled **ID**. The **ID** value can also be found on the Zixi receiver **Status** page.

4. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the latency that is set in the receiver.
5. For **CIDR allow list**, specify a range of IP addresses that are allowed to retrieve content from your source. Format the IP addresses as a Classless Inter-Domain Routing (CIDR) block, for example, 10.24.34.0/23. For more information about CIDR notation, see [RFC 4632](#).

 Tip

To specify an additional CIDR block, choose **Add**. You can specify up to three CIDR blocks.

6. If you want to encrypt the video as it is sent to this output, do the following:
 - a. In the **Encryption** section, choose **Enable**.
 - b. For **Encryption type**, choose **Static key**.
 - c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
 - e. For **Encryption algorithm**, choose the type of encryption that you want to use to encrypt the source.

Zixi push

1. For **Protocol**, choose **Zixi push**.
2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
4. For **Stream ID**, enter the stream ID that is set in the Zixi receiver.

⚠ Important

If you keep this field blank, the service uses the output name as the stream ID. Because the stream ID must match the value set in the Zixi receiver, you must specify the stream ID if it is not exactly the same as the output name.

5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms.
6. If you want to encrypt the video as it is sent to this output, do the following:
 - a. In the **Encryption** section, choose **Enable**.
 - b. For **Encryption type**, choose **Static key**.
 - c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
 - e. For **Encryption algorithm**, choose the type of encryption that you want to use to encrypt the source.
10. Choose **Add output**.

To add an output to a flow (AWS CLI)

1. Create a JSON file that contains the details of the output that you want to add to the flow.

The following example shows the structure for the contents of the file:

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
  "Outputs": [
    {
      "Description": "RTP-FEC Output",
      "Destination": "192.0.2.12",
      "Name": "RTPOutput",
```

```

        "Port": 5020,
        "Protocol": "rtp-fec",
        "SmoothingLatency": 100
    }
]
}

```

2. In the AWS CLI, use the `add-flow-output` command:

```

aws mediaconnect add-flow-outputs --flow-arn "arn:aws:mediaconnect:us-
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame" --cli-
input-json file://addFlowOutput.txt --region us-west-2

```

The following example shows the return value:

```

{
  "FlowArn": "arn:aws:mediaconnect:us-
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
  "Outputs": [
    {
      "Name": "RTPOutput",
      "Port": 5020,
      "Transport": {
        "SmoothingLatency": 100,
        "Protocol": "rtp-fec"
      },
      "Destination": "192.0.2.12",
      "OutputArn": "arn:aws:mediaconnect:us-
east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:RTPOutput",
      "Description": "RTP-FEC Output"
    }
  ]
}

```

Adding VPC outputs to a flow

A VPC output goes to a virtual private cloud (VPC) that you created using Amazon Virtual Private Cloud.

For transport stream flows, you can add outputs (up to 50) even if the flow is active. For CDI flows, you can add outputs (up to 10) only if the flow is in standby mode. For optimal performance, follow the guidance offered in [Best practices](#).

To add a VPC output to a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to add an output to.

The details page for that flow appears.

3. Choose the **Outputs** tab.
4. Choose **Add output**.
5. For **Name**, specify a name for your output. This value is an identifier that is visible only on the AWS Elemental MediaConnect console and is not visible to the end user.
6. For **Output type**, choose **VPC output**.
7. For **Protocol**, choose the appropriate protocol.
8. For **Description**, enter a description that will remind you later where this output is going. This might be the company name or notes about the setup.
9. Determine which protocol you want to use for the output. The protocol options are dependent on the flow type.
 - For transport stream flows, the protocol options are: RTP, RTP-FEC, RIST, SRT, and Zixi.
 - For CDI flows, the protocol options are: CDI and ST 2110 JPEG XS.
10. For specific instructions based on the protocol that you want to use, choose one of the following tabs:

RIST

1. For **Protocol**, choose **RIST**.
2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).

 Note

The RIST protocol requires one additional port for error correction. To accommodate this requirement, AWS Elemental MediaConnect reserves the port that is +1 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000 and 4001.

4. For **Smoothing latency**, specify the additional delay that you want to use with output smoothing. We recommend that you specify a value of 0 ms to disable smoothing. However, if the receiver can't process the stream properly, specify a value between 100 and 1,000 ms. This way, AWS Elemental MediaConnect attempts to correct jitter from the flow source. If you keep this field blank, the service uses the default value of 0 ms.
5. For **Output to VPC**, choose the name of the VPC interface that you want to send your output to.

RTP or RTP-FEC

1. For **Protocol**, choose **RTP** or **RTP-FEC**.

 Note

RTP and RTP-FEC outputs are compliant with the SMPTE 2022-7 standard. If your downstream receiver supports 2022-7 source merging, RTP and RTP-FEC outputs will be compatible.

2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).

 Note

The RTP-FEC protocol requires two additional ports for error correction. To accommodate this requirement, AWS Elemental MediaConnect reserves the ports that are +2 and +4 from the port that you specify. For example, if you specify port 4000 for the output, the service assigns ports 4000, 4002, and 4004.

4. For **Smoothing latency**, specify the additional delay that you want to use with output smoothing. We recommend that you specify a value of 0 ms to disable smoothing. However, if the receiver can't process the stream properly, specify a value between 100 and 1,000 ms. This way, AWS Elemental MediaConnect attempts to correct jitter from the flow source. If you keep this field blank, the service uses the default value of 0 ms.
5. For **Output to VPC**, choose the name of the VPC interface that you want to send your output to.

SRT listener

1. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
2. For **Output type**, select **VPC output**.
3. For **Protocol**, choose **SRT listener**.
4. For **Description**, enter a description that can help you distinguish one output from another. This might be the company name or notes about the setup.
5. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRT0_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRT0_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

6. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).

7. For **Output to VPC**, choose the name of the VPC interface that you want to send your output to.
8. If you want to encrypt the video as it is sent to this output, do the following:
 - a. In the **Encryption** section, choose **Enable**.
 - b. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - c. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the SRT password](#).

SRT caller

1. For **Name**, specify a name for your source. This value is an identifier that is visible only on the MediaConnect console. It is not visible to anyone outside of the current AWS account.
2. For **Output type**, select **VPC output**.
3. For **Protocol**, choose **SRT caller**.
4. For **Description**, enter a description that can help you distinguish one output from another. This might be the company name or notes about the setup.
5. For **Minimum latency**, specify the minimum size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value from 10–15,000 ms. If you keep this field blank, MediaConnect uses the default value of 2,000 ms.

The SRT protocol uses a **minimum latency** configuration on each side of the connection. The larger of these two values is used as the *recovery latency*. If the transmitted bitrate, multiplied by the recovery latency, is higher than the *receiver buffer*, the buffer will overflow and the stream can fail with a `Buffer Overflow Error`. On the SRT receiver side, the receiver buffer is configured by the `SRTO_RCVBUF` value. The size of the receiver buffer is limited by the *flow control window size* (`SRTO_FC`) value. On the MediaConnect side, the receiver buffer is calculated as the **maximum bitrate** value multiplied by the **minimum latency** value. For more information about the SRT buffer, see [the SRT Configuration Guidelines](#).

6. For **Destination IP address**, enter the IP address or domain of the output's destination.

7. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
8. For **Output to VPC**, choose the name of the VPC interface that you want to send your output to.
9. If you want to encrypt the video as it is sent to this output, do the following:
 - a. In the **Encryption** section, choose **Enable**.
 - b. **Encryption type** will not be selectable. **Srt-password** is the only available encryption for this protocol.
 - c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the SRT password](#).

Zixi push

1. For **Protocol**, choose **Zixi push**.
2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
4. For **Stream ID**, enter the stream ID that is set in the Zixi receiver.

Important

If you keep this field blank, the service uses the output name as the stream ID. Because the stream ID must match the value set in the Zixi receiver, you must specify the stream ID if it is not exactly the same as the output name.

5. For **Maximum latency**, specify the size of the buffer (delay) that you want the service to maintain. A higher latency value means a longer delay in transmitting the stream, but more room for error correction. A lower latency value means a shorter delay, but less room for error correction. You can choose a value between 0 and 60,000 ms. If you keep this field blank, the service uses the default value of 6,000 ms.
6. For **Output to VPC**, choose the name of the VPC interface that you want to send your output to.
7. If you want to encrypt the video as it is sent to this output, do the following:

- a. In the **Encryption** section, choose **Enable**.
- b. For **Encryption type**, choose **Static key**.
- c. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
- d. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
- e. For **Encryption algorithm**, choose the type of encryption that you want to use to encrypt the source.

CDI

1. For **Protocol**, choose **CDI**.
2. For **IP address**, choose the IP address where you want to send the output.
3. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
4. For **VPC interface**, choose the name of the VPC interface that you want to send your output to.
5. For each media stream that you want to send as part of the output, do the following:
 - a. For **Media stream name**, choose the name of the media stream. You can only add the media streams that the source on your flow uses.
 - b. For **Encoding name**, confirm the default value, which is pre-selected based on the media stream type.
 - c. For **FMT**, specify the format type number (sometimes referred to as *RTP payload type*) of the media stream. This value should be in a format that the receiver recognizes.

ST 2110 JPEG XS

1. For **Protocol**, choose **ST 2110 JPEG XS**.
2. For **VPC interface 1**, choose one of the VPC interfaces that you want to send content to and then choose the specific IP address where you want to send the output.
3. For **VPC interface 2**, choose a second VPC interface that you want to send content to and then choose the specific IP address where you want to send the output. There is no priority between VPC interfaces 1 and 2.

4. For each media stream that you want to send as part of the output, do the following:
 - a. For **Media stream name**, choose the name of the media stream. You can only add the media streams that the source on your flow uses.
 - b. For **Encoding name**, choose the format that was used to encode the data.
 - For ancillary data streams, set the encoding name to **smpte291**.
 - For audio streams, set the encoding name to **pcm**.
 - For video, set the encoding name to **jxsv**.
 - c. For **Port**, choose the port that you want to use when the content is distributed to this output. For more information about ports, see [Output destinations](#).
 - d. For **Encoder profile**, choose a setting for the compression. This property only applies if the source uses the CDI protocol.
 - e. For **Compression factor**, specify a value that you want the service to use when calculating the compression for the output. Valid values are floating point numbers in the range of 3.0 to 10.0, inclusive. The bitrate of the output is calculated as follows:

$$\text{Output bitrate} = (1 / \text{compressionFactor}) * (\text{source bitrate})$$

This property only applies if the source uses the CDI protocol.

5. Choose **Add output**.

Adding an NDI® output to a MediaConnect flow

This procedure walks you through the process of setting up an NDI® output and configuring how your NDI video streams appear to other devices in your VPC network. After you have the necessary prerequisites in place, you can add an NDI output to your MediaConnect flow, allowing you to distribute your video and audio streams over the NDI protocol within your VPC.

Note

CDI flows don't support NDI outputs.

Prerequisites

We recommend reviewing the [NDI outputs](#) documentation to familiarize yourself with this feature before getting started.

Before you can add NDI outputs to a flow, make sure you have the following resources in place:

Large MediaConnect flow with NDI configuration enabled

- If you haven't created a flow yet, you'll need to [create a transport stream flow](#). When you create the flow, you must set the size to large and make sure that NDI support is enabled.
- The flow can be in ACTIVE or STANDBY status before you add an NDI output.

Network infrastructure

- **VPC** - You'll need a Virtual Private Cloud (VPC). For a quick start, you can use the [AWS CloudFormation VPC template](#) to automatically create a VPC with public and private subnets. For more information about VPCs, see the [Amazon VPC User Guide](#).
- **Discovery servers** - NDI discovery servers must already be provisioned in your VPC network. MediaConnect connects to these servers, but it doesn't create them for you. AWS provides guidance for automatically deploying NDI discovery servers using AWS CloudFormation, including best practices for installation and configuration. For instructions, see [Setting Up NDI Discovery Servers for Broadcast Workflows](#).
- **Security groups** - To enable NDI functionality, we recommend that you configure your security groups with a self-referencing ingress rule and egress rule. You can then attach this security group to the EC2 instances where your NDI servers are running within the VPC. This approach automatically allows all necessary NDI communication between components in your VPC, and all required network traffic is permitted. For guidance on setting up self-referencing security group rules, see [Security Group Referencing](#) in the Amazon VPC User Guide.
- In the following procedure, you'll need to know your NDI server private IP address and your VPC subnet ID.

Procedure

Follow these steps to set up an NDI output and configure how your NDI video and audio streams appear to other devices in your VPC network.

To add an NDI output to a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to add an output to.
3. On the flow details page under **Flow size**, make sure the size is set to **Large**.
4. On the flow details page under **NDI configuration**, configure your settings as follows:

1. Set **Flow NDI support** to **Enabled** if it's not already.
2. (Optional) Enter an **NDI machine name**.
 - This name is used as a prefix to help you identify the NDI sources that your flow creates. For example, if you enter **MACHINENAME**, your NDI sources will appear as **MACHINENAME (ProgramName)**.
 - If you leave this blank, MediaConnect generates a unique 12-character ID as the prefix. This ID is derived from the flow's Amazon Resource Name (ARN), so the machine name references the flow resource.

 Tip

Thoughtful naming is especially important when you have multiple flows creating NDI sources. For example, a production environment with 100 NDI sources would benefit from clear, descriptive machine name prefixes like STUDIO-A, STUDIO-B, NEWSROOM, and so on.

- c. Add up to three **NDI discovery servers**. For each server, provide the following information:
 - Enter the private IP address that's resolvable within the VPC subnet where the VPC adapter is pointed. This should be a private IP, not a public IP address.
 - Select the VPC interface adapter to control network access.
 - (Optional) Specify a port number. If you leave this blank, MediaConnect uses the NDI discovery server default of TCP-5959.

 Note

DNS names aren't currently supported for discovery servers.

Tip

You can add up to three discovery servers. Having multiple discovery servers improves reliability and helps ensure your NDI sources are discoverable across your network.

5. Choose the **Outputs** tab.
6. Choose **Add output**.
7. For **Name**, specify a name for your output. This value is an identifier that is visible only on the AWS Elemental MediaConnect console and is not visible to the end user.
8. For **Output type**, choose **NDI output**.
9. For **NDI codec**, choose **SpeedHQ**.
10. For **NDI SpeedHQ quality**, enter a value between 100-200.
 - This setting adjusts the NDI encoder's target bitrate as a percentage of the default.
 - The default value is 100, which uses the standard NDI bitrate. Values up to 200 increase the target bitrate proportionally (for example, 200 doubles it).

Note

Some kinds of content (such as high-motion sports) will benefit from a higher quality setting. However, keep in mind that using higher quality settings limits the total number of outputs that a flow can generate (up to 2.5 Gbps).

11. For **NDI timecode source**, choose how MediaConnect generates timecodes for the NDI output. The default is **Embedded Timecode**, which preserves timecodes from the source transport stream. Choose **UTC System Time** to use the system clock instead. For more information, see [Considerations and limitations](#).
12. (Optional) For **NDI audio reference level**, choose the standard that the downstream NDI receiver follows. The default is -20 decibels relative to full scale (dBFS). You can also enter any whole number from -40 to 0. For more information, see [Considerations and limitations](#).
13. (Optional) Enter an **NDI program name**.

- This name is used as a suffix to help you identify the NDI sources that your flow creates. For example, if you enter **MyNDIProgram**, your NDI sources will appear as MACHINENAME (**MyNDIProgram**).
- If you leave this blank, MediaConnect uses the name of the output.

Tip

Thoughtful naming is especially important when you have multiple flows creating NDI sources. For example, in a production environment, you might use names like MainCam, BackupCam, GraphicsOutput, and so on to clearly identify different video feeds from the same machine.

14. Choose **Add output**.

Next steps

After you [start your flow](#), you should be able to see the MediaConnect NDI flow output as an available NDI source in your discovery server. You can then subscribe to it to receive NDI traffic. For more information, see the [NDI documentation](#).

Viewing the list of outputs for a MediaConnect flow

You can view a list of a flow's outputs, along with the setup that is associated with each output. This list includes outputs that you added, as well as outputs that AWS Elemental MediaConnect added when subscribers create flows based on entitlements that you granted.

To view a list of outputs on an existing flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to view.

The details page for that flow appears.

3. Choose the **Outputs** tab.

A list of outputs for that flow appears.

To view a list of outputs on an existing flow (AWS CLI)

- In the AWS CLI, use the `describe-flow` command:

```
aws mediaconnect describe-flow --flow-arn "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame" --region us-east-1 --profile PMprofile
```

The return value shows the details of the entire flow, including all the outputs. The following example shows the return value:

```
{
  "Flow": {
    "AvailabilityZone": "us-east-1d",
    "Entitlements": [],
    "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
    "Name": "BasketballGame",
    "Outputs": [
      {
        "Address": "192.0.2.12",
        "Description": "RTP-FEC Output",
        "Name": "NYCOutput",
        "OutputArn": "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:NYCOutput",
        "Port": 5020,
        "Protocol": "rtp-fec"
      },
      {
        "Address": "198.51.100.8",
        "Description": "RTP Output",
        "Name": "DCOutput",
        "OutputArn": "arn:aws:mediaconnect:us-east-1:111122223333:output:2-987655dEF67hiJ89-c34de5fG678h:DCOutput",
        "Port": 5110,
        "Protocol": "rtp"
      }
    ],
    "Source": {
      "IngestIp": "195.51.100.21",
      "IngestPort": 5010,
      "Name": "BasketballGameSource",
```

```
    "Protocol": "rtp-fec",
    "SourceArn": "arn:aws:mediaconnect:us-
east-1:111122223333:source:3-4aBC56dEF78hiJ90-4de5fG6Hi78Jk:BasketballGameSource",
    "AllowlistCidr": "10.24.34.0/23"
  },
  "Status": "STANDBY"
}
```

Updating outputs on a MediaConnect flow

You can update outputs on a flow, even when the flow is active.

Important

For NDI® outputs, avoid changing the machine name or program name for an active NDI output, as your downstream receivers rely on these details to maintain their connections. When you change the machine or program name, your downstream receivers must re-establish connections with the new machine and program names.

To update an output on a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the output that you want to update.
3. Choose the **Outputs** tab.

A list of outputs for that flow appears.

4. Choose the output that you want to update.
5. Choose **Update**.
6. Make the appropriate changes, and then choose **Save**.

To update a flow output (AWS CLI)

- In the AWS CLI, use the `update-flow-output` command:


```
aws mediaconnect update-flow-output --flow-arn "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame" --
output-arn "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-
c34de5fG678h:NYCfeed" --port 5040 --region us-east-1 --profile PMprofile
```

The following example shows the return value:

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
  "Output": {
    "Address": "192.0.2.12",
    "Encryption": {
      "Algorithm": "aes256",
      "KeyType": "static-key",
      "RoleArn": "arn:aws:iam::111122223333:role/AllowMediaConnect",
      "SecretArn": "arn:aws:secretsmanager:us-west-2:111122223333:secret:SECRETID"
    },
    "Name": "Output1",
    "OutputArn": "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:Output1",
    "Port": 5040,
    "Protocol": "rtp-fec"
  }
}
```

Managing tags on a MediaConnect output

You can use tags to help you track the billing and organization for your AWS Elemental MediaConnect outputs. These are the same tags that AWS Billing and Cost Management provides for organizing your AWS bill. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

Topics

- [Adding tags on a MediaConnect output](#)
- [Editing tags on a MediaConnect output](#)
- [Removing tags from a MediaConnect output](#)

Adding tags on a MediaConnect output

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect outputs. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To add tags to an output (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the output that you want to add tags to.
3. Choose the **Outputs** tab.

A list of outputs for that flow appears.

4. Choose the output that you want to add tags to.
5. Choose **Manage tags**.
6. Choose **Manage tags** again, and then choose **Add tag**.
7. For each tag that you want to add, do the following:
 - a. Enter a key and a value. For example, your key can be **sports** and your value can be **golf**.
 - b. Choose **Add tag**.
8. Choose **Update**.

Editing tags on a MediaConnect output

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect outputs. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To edit tags on an output (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the output that you want to edit tags for.
3. Choose the **Outputs** tab.

A list of outputs for that flow appears.

4. Choose the output that you want to edit tags for.
5. In the **Details** section, choose **Manage tags**.
6. Choose **Manage tags** again.
7. Update the tags, as needed.
8. Choose **Update**.

Removing tags from a MediaConnect output

You can remove a tag from an output if you no longer want to use it to track the billing and organization for it.

To remove tags from an output (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the output that you want to remove tags from.
3. Choose the **Outputs** tab.

A list of outputs for that flow appears.

4. Choose the output that you want to remove tags from.
5. In the **Details** section, choose **Manage tags**.
6. Choose **Manage tags** again.
7. Choose **Remove tag** next to each tag that you want to delete.
8. Choose **Update**.

Disabling or removing outputs from a MediaConnect flow

You can disable or remove outputs that you added to the flow. If AWS Elemental MediaConnect generated the output as the result of an entitlement, you must [revoke the entitlement](#).

Disabling an output stops the streaming of content to the output destination, but remains attached to the flow. A disabled output does not incur data transfer costs.

To disable an output (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the output that you want to disable.

The details page for that flow appears.

3. Choose the **Outputs** tab.
4. Choose the output, and then choose **Update**.
5. In the **Update output** window, use the **Output status** toggle to disable or enable the selected output.
6. Choose **Save** to save your changes.

To disable an output (AWS CLI)

- In the AWS CLI, use the `update-flow-output` command with the `--output-status DISABLED` option to disable the output. Alternately, you can use `--output-status ENABLED` to enable a disabled output.

```
aws mediaconnect update-flow-output --flow-arn "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame" --output-arn "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:Output1" --output-status DISABLED
```

The following example shows the return value:

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
  "Output": {
    "Destination": "192.0.2.12",
    "Name": "NYCOutput",
    "OutputArn": "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:NYCOutput",
    "OutputStatus": "DISABLED",
    "Port": 5020,
    "Transport": {
      "MinLatency": 1000,
      "Protocol": "rtp-fec"
    }
  }
}
```

```

    }
  }
}
```

To remove an output from a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the output that you want to remove.

The details page for that flow appears.

3. Choose the **Outputs** tab.
4. Choose the output, and then choose **Remove**.

To remove an output from a flow (AWS CLI)

- In the AWS CLI, use the `remove-flow-output` command:

```
aws mediaconnect remove-flow-output --flow-arn "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame" --
output-arn "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:Output1" --region us-west-2
```

The following example shows the return value:

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
  "OutputArn": "arn:aws:mediaconnect:us-east-1:111122223333:output:2-3aBC45dEF67hiJ89-c34de5fG678h:Output1"
}
```

Output destinations

Each output on a flow must be sent to a different destination. The parameters that define the destination depend on the protocol, but every protocol uses a compound identifier for the destination. For example, multiple outputs can point to the same destination IP address, as long as

none of their ports overlap. Likewise, multiple outputs can point to the same stream ID as long as their remote IDs are different. The following table lists how each protocol defines the destination.

 Note

Some protocols require additional ports for error correction. For outputs that use these protocols, AWS Elemental MediaConnect automatically reserves the additional ports. The protocol defines specifically which ports must be reserved. For example, some protocols require port+2 and port+4 for error correction. If you specify port 5000 for the output, the service assigns ports 5000, 5002, and 5004.

Protocol	Destination definition	Ports required
CDI	Ports for each media stream	The ports that you specify for each media stream. These are the only ports needed for the output.
NDI®	VPC and discovery server configuration	The ports that you specify for each media stream. If you don't specify a custom port, MediaConnect uses the default NDI discovery protocol (TCP-5959) to announce NDI sources on your network.
RIST	IP address, port, and port+1	The port that you specify, plus one additional port. The service automatically reserves a port that is +1 from the port that you specified. For example, if you specify port 3000 for this output,

Protocol	Destination definition	Ports required
		the service also reserves port 3001.
RTP	IP address and port	The port that you specify. This is the only port needed for the output.
RTP-FEC	IP address, port, port+2, and port+4	The port that you specify, plus two additional ports. The service automatically reserves ports that are +2 and +4 from the port that you specified. For example, if you specify port 2000 for this output, the service also reserves ports 2002 and 2004 for error correction.
SRT listener	CIDR allow list and port	The port that you specify. This is the only port needed for the output.
SRT caller	IP address and port	The port that you specify. This is the only port needed for the output.
ST 2110 JPEG XS	Ports for each media stream	The ports that you specify for each media stream. These are the only ports needed for the output.
Zixi pull	Stream ID, remote ID, and CIDR allow list	The service automatically uses port 2077 for these outputs.

Protocol	Destination definition	Ports required
Zixi push	IP address, stream ID, and port	The port that you specify is the only port needed for the output.

Determining an output's IP address

When you're working with outputs on standard flows, there are two important IP addresses to understand:

- **Output IP address** - This is the MediaConnect endpoint address where your downstream receivers connect to. You'll need this address when you configure your receivers to connect to your flow and start receiving its content.
- **Output peer IP address** - This is the IP address of the device that's currently receiving content from your output. This address is useful for troubleshooting connectivity issues and monitoring which devices are actively connected to your output.

The following sections explain how to find the IP address and the peer IP address for your flow outputs.

Finding an output's IP address

You can view the IP address for each of your flow outputs in the MediaConnect console, or by using the [DescribeFlow](#) API operation.

To determine an output's IP address

1. On the **Flows** page, choose the name of the flow that you want to view.
2. For specific instructions based on how content is sent to your output, choose one of the following tabs:

Public internet

1. In the **Details** section, note the **Public Outbound IP address**. This is the IP address that the receiver needs.

Private internet

1. Choose the **Outputs** tab, and then find the output that you want to view.
2. Under **Listener address** for that output, note the IP address. This is the IP address that the receiver needs.

Finding an output's peer IP address

You can view the current peer IP address for each of your flow outputs in the MediaConnect console, or by using the [DescribeFlow](#) API operation.

To determine an output's peer IP address

1. On the **Flows** page, choose the name of the flow that you want to view.
2. Choose the **Outputs** tab.
3. Select the output that you want to view, and then choose **Details**.
4. Under **Peer IP Address**, note the peer IP address.

Note

For certain types of outputs, the peer IP address matches the IP address that you configured during setup.

These include:

- SRT Caller outputs
- RTP/FEC outputs
- Zixi Push outputs

For these output types, the peer IP is effectively static because you pre-configure the destination IP address. However, MediaConnect still reports these addresses for consistency and to provide a complete picture of your flow's configuration.

For other protocols (like RIST outputs and SRT Listener outputs), the peer IP address is dynamic and shows the current address of the device that's receiving traffic from your output.

Important information about peer IP addresses

Peer IP display and updates

- For troubleshooting purposes, MediaConnect shows the latest IP address information in near real-time.
- Although most updates happen quickly, it might take up to 20 seconds for peer IP address changes to be reflected in the console and API responses.
- Only the current peer IP address is displayed. Historical records aren't currently available.
- The peer IP address might not be visible for flows that haven't been started yet, or flows that were started before May 2025. In these cases, you might need to restart your flow to see the peer IP information.

Supported protocols and output types


- Peer IP addresses are shown for most protocols, including:
 - Pre-configured connections (like SRT Caller or Zixi Push outputs)
 - Dynamic connections (like RTP sources or SRT Listener)
- Peer IP addresses aren't available for:
 - Entitlements
 - Managed (MediaLive) outputs
 - CDI/ST2110 outputs
 - NDI outputs

Managing entitlements in MediaConnect

Content originators can grant entitlements to share their content with other AWS accounts (subscriber accounts). Subscribers can then set up their own AWS Elemental MediaConnect flows using the originator's flow as their source. The following illustration shows this process.

Note

MediaConnect doesn't support entitlements on CDI flows. You can only grant entitlements on transport stream flows, with the exception of TR-07 sources.

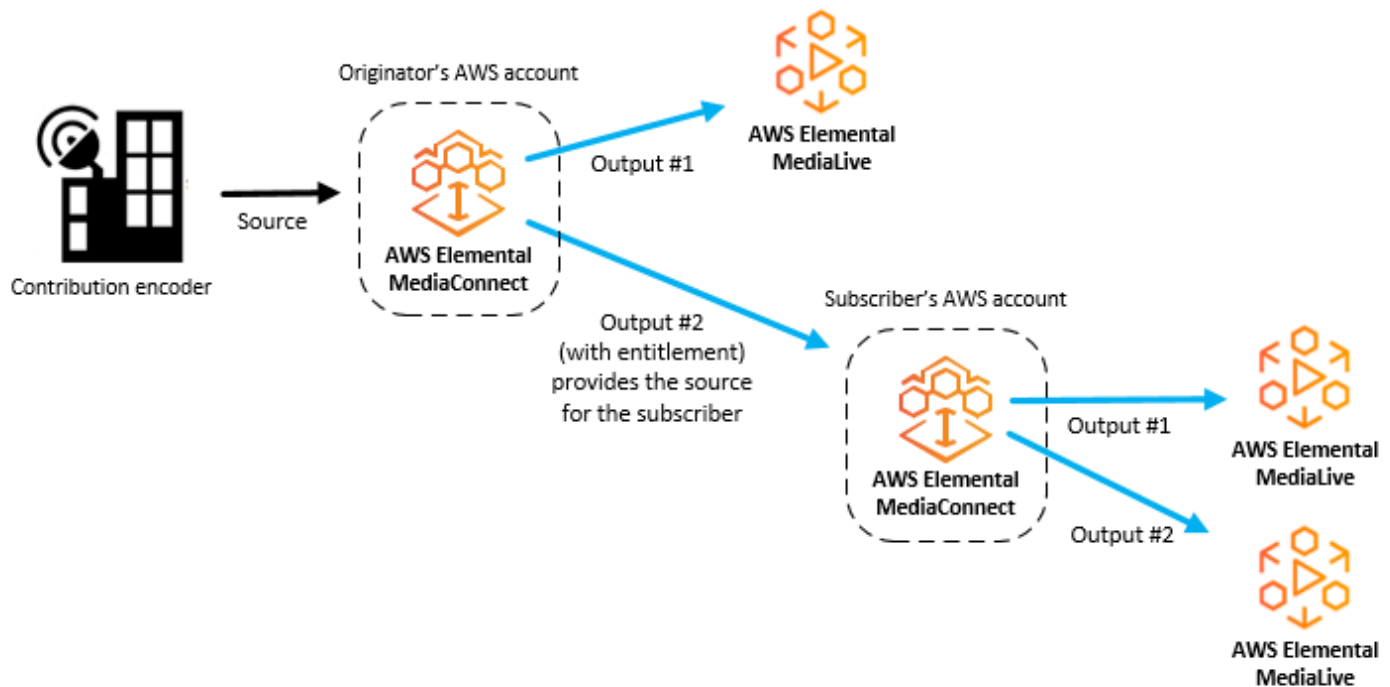

Topics

- [Sharing content in your AWS Elemental MediaConnect flow with other AWS accounts](#)
- [Subscribing to streaming media content provided by another AWS account using MediaConnect](#)

Sharing content in your AWS Elemental MediaConnect flow with other AWS accounts


You can grant an entitlement to share the content in your AWS Elemental MediaConnect flow with another AWS account (subscriber account). When the subscriber sets up a flow based on the entitlement, the service generates an output on your flow to represent the stream from your flow to the subscriber's flow. This output is counted as part of the 50 maximum outputs that you can have on your flow.

You can grant, update, and revoke entitlements at any time, even on an active flow. If you want to stop streaming content to the subscriber's flow on a temporary basis, you can disable the entitlement. Later, you can enable the entitlement when you're ready to allow content to stream to the subscriber's flow again. You can also specify the percentage of the entitlement data transfer fee that you want the subscriber to be responsible for.

Note

If you grant an entitlement and later [disable](#) it (to temporarily stop streaming content to the subscriber's flow), the entitlement remains associated with your flow and counts toward your maximum number of entitlements. However, if you [revoke](#) the entitlement (to permanently stop streaming content to the subscriber's flow), the entitlement is removed from your flow and no longer counts toward the maximum number of entitlements.

After you grant an entitlement, you provide information about the entitlement (name, AWS Region, and encryption details) to the subscriber. The subscriber uses this information to create a MediaConnect flow that uses your flow as the source. The subscriber's flow must be in the same AWS Region as your flow. If the subscriber wants a flow in a different Region, they must create a second flow in the new Region. The following illustration shows this process.

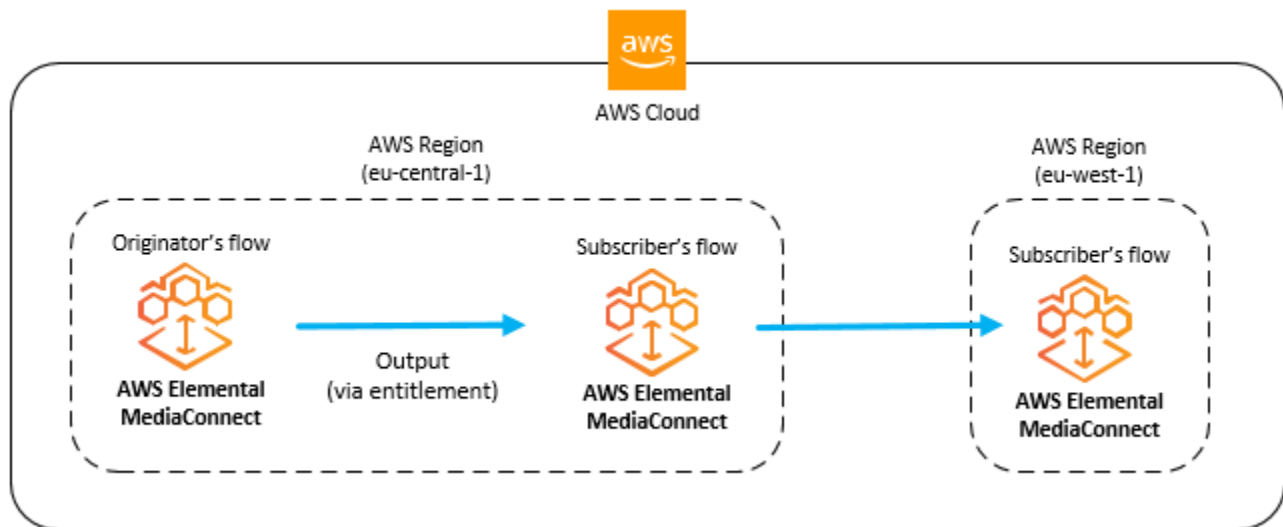**Note**

MediaConnect doesn't support entitlements on CDI flows. You can only grant entitlements on transport stream flows, with the exception of TR-07 sources.

Topics

- [Granting an entitlement on a flow](#)
- [Updating an entitlement](#)

- [Managing tags on an entitlement](#)
- [Revoking an entitlement](#)
- [Disabling an entitlement temporarily](#)
- [Enabling an entitlement that has been temporarily disabled](#)

Granting an entitlement on a flow

You can grant an entitlement to an existing flow to share your content with another AWS account (the subscriber account). The subscriber creates an AWS Elemental MediaConnect flow in the same AWS Region, using your flow as the source. When this happens, the service generates an output on your flow to represent the video stream from your flow to the subscriber's flow.

The subscriber can use an entitlement only once.

Prerequisites

Before you can grant an entitlement, you must do the following:

- Obtain the subscriber's AWS account number.
- If you want to encrypt the video as it is sent from your flow to the subscriber's flow, set up encryption using [static key encryption](#) or [Secure Packager and Encoder Key Exchange \(SPEKE\)](#).

To grant an entitlement on a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to grant an entitlement on.

The details page for that flow appears.

3. Choose the **Entitlements** tab.
4. Choose **Grant entitlement**.

The **Grant entitlement** page appears.

5. For **Name**, specify a name for the entitlement that will help you and the subscriber differentiate this flow from other flows. The name also becomes part of the entitlement ARN, which is visible to the subscriber.
6. For **Subscriber account ID**, specify the subscriber's 12-digit AWS account ID. Don't include hyphens in the ID.

7. For **Description**, specify a description that will help you identify this entitlement later. The description is visible only on the MediaConnect console for your account.
8. For **Data transfer subscriber fee percent**, specify the percentage of the entitlement data transfer fee that you want the subscriber to be responsible for. AWS bills your account for the remainder. For example, if you specify **15**, AWS bills the subscriber's account for 15% of the entitlement data transfer fee and your account for the remaining 85%.

 Note

Even if you specify that the subscriber is responsible for a portion or all of the entitlement data transfer fee, the subscriber will not incur fees until they create and start a flow that is based on this entitlement.

9. For **Entitlement status**, specify whether you want the entitlement enabled or disabled. If the entitlement is enabled, the subscriber can create a flow based on the entitlement and start streaming content right away. If the entitlement is disabled, the subscriber must wait for you to enable it before content can stream from your flow to their flow.
10. If you want to encrypt the video as it is sent from your flow to the subscriber's flow, choose one of the following tabs:

Static key encryption

1. In the **Encryption** section, choose **Enable**.
2. For **Encryption type**, choose **Static key**.
3. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
4. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
5. For **Encryption algorithm**, choose the type of encryption that you want to use to encrypt the source.

SPEKE encryption

1. In the **Encryption** section, choose **Enable**.
2. For **Encryption type**, choose **SPEKE**.
3. For **Encryption algorithm**, choose the type of encryption that you want to use to encrypt the source.

4. For **Role ARN**, enter the Amazon Resource Name (ARN) of the IAM role that provides you access to send your requests through API Gateway. You created this role when you [set up encryption](#).

The following example shows a role ARN:

```
arn:aws:iam::111122223333:role/SpekeAccess
```

5. For **Resource ID**, enter an identifier for the content. The service sends this to the key server to identify the current endpoint. How unique you make this depends on how fine-grained you want access controls to be. The resource ID is also known as the content ID.

The following example shows a resource ID:

```
MovieNight20171126093045
```

6. For **Device ID**, enter the value of one of the devices that you configured with your conditional access (CA) platform key provider.
7. For **URL**, enter the URL of the API Gateway proxy that you set up to talk to your key server. The API Gateway proxy must reside in the same AWS Region as MediaConnect.

The following example shows a URL.

```
https://1wm2dx1f33.execute-api.us-west-2.amazonaws.com/SpekeSample/copyProtection
```

8. (Optional) For **Constant initialization vector** enter a 128-bit, 16-byte hex value represented by a 32-character string, to be used with the key for encrypting content.
11. At the bottom of the page, choose **Grant entitlement**.
12. On the **Entitlements** tab, locate the new entitlement in the list.
13. Make a note of the entitlement ARN.
14. Provide the following information to the subscriber:
 - The entitlement ARN
 - The AWS Region that you created the flow in
 - The encryption key and algorithm if you set up encryption on the entitlement
 - The percentage of the entitlement data transfer fee that the subscriber is responsible for

Note

MediaConnect suppresses null packets in an effort to optimize the data connection between the content originator's flow and the subscriber's flow. This can result in a fluctuating bitrate on the subscriber's flow, or a difference between the bitrate of the content originator's flow and the subscriber's flow. We recommend that you monitor source health as a combination of `SourceBitRate` and other metrics such as `SourceContinuityCounter` and `SourceNotRecoveredPackets`.

To grant an entitlement on a flow (AWS CLI)

1. Create a JSON file that contains the details of the entitlements that you want to grant.

The following example shows the structure for the contents of the file:

```
[
  {
    "Description": "For AnyCompany",
    "Encryption": [
      {
        "Algorithm": "aes128",
        "KeyType": "static-key",
        "RoleArn": "arn:aws:iam::111122223333:role/MediaConnect-ASM",
        "SecretArn": "arn:aws:secretsmanager:us-
west-2:111122223333:secret:mySecret1"
      }
    ],
    "Name": "AnyCompany_Entitlement",
    "Subscribers": [
      "444455556666",
      "123456789012"
    ]
  },
  {
    "Description": "For Example Corp",
    "Name": "ExampleCorp",
    "Subscribers": [
      "777788889999"
    ]
  }
]
```



```
}
]
```

2. In the AWS CLI, use the `grant-flow-entitlements` command:

```
aws mediaconnect grant-flow-entitlements --entitlements --flow-
arn arn:aws:mediaconnect:us-
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BaseballGame --cli-input-
json file://entitlements.json
```

The following example shows the return value:

```
{
  "Entitlements": [
    {
      "Name": "AnyCompany_Entitlement",
      "EntitlementArn": "arn:aws:mediaconnect:us-
west-2:111122223333:entitlement:1-11aa22bb11aa22bb-3333cccc4444:AnyCompany_Entitlement",
      "Subscribers": [
        "444455556666", "123456789012"
      ],
      "Description": "For AnyCompany",
      "Encryption": {
        "SecretArn": "arn:aws:secretsmanager:us-
west-2:111122223333:secret:mySecret1",
        "Algorithm": "aes128",
        "RoleArn": "arn:aws:iam::111122223333:role/MediaConnect-ASM",
        "KeyType": "static-key"
      }
    },
    {
      "Name": "ExampleCorp",
      "EntitlementArn": "arn:aws:mediaconnect:us-
west-2:111122223333:entitlement:1-3333cccc4444dddd-1111aaaa2222:ExampleCorp",
      "Subscribers": [
        "777788889999"
      ],
      "Description": "For Example Corp"
    }
  ],
  "FlowArn": "arn:aws:mediaconnect:us-
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BaseballGame"
```

```
}
```

Updating an entitlement

After an entitlement has been created, you can still update the description, status, and subscribers. If you change the subscriber account ID, the content becomes unavailable to the original subscriber account. If the original subscriber already created a flow that used the entitlement as a source, the associated output is removed from your flow.

To update an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to update.

The details page for that flow appears.

3. Choose the **Entitlements** tab.
4. Choose the entitlement that you want to update.
5. Choose **Update**.
6. Make the appropriate changes, and then choose **Save**.

To update an entitlement on a flow (AWS CLI)

- In the AWS CLI, use the `update-flow-entitlement` command:

```
aws mediaconnect update-flow-entitlement --flow-arn arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BaseballGame --  
entitlement-arn arn:aws:mediaconnect:us-  
west-2:111122223333:entitlement:1-11aa22bb11aa22bb-3333cccc4444:AnyCompany_Entitlement  
--description 'For AnyCompany Affiliate' --subscribers 444455556666",  
"123456789012"
```

The following example shows the return value:

```
{  
  "FlowArn": "arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BaseballGame",  
  "Entitlement": {
```

```

    "Name": "AnyCompany_Entitlement",
    "Description": "For AnyCompany Affiliate",
    "EntitlementArn": "arn:aws:mediaconnect:us-
west-2:111122223333:entitlement:1-11aa22bb11aa22bb-3333cccc4444:AnyCompany_Entitlement",
    "Encryption": {
        "KeyType": "static-key",
        "Algorithm": "aes128",
        "RoleArn": "arn:aws:iam::111122223333:role/MediaConnect-ASM",
        "SecretArn": "arn:aws:secretsmanager:us-
west-2:111122223333:secret:mySecret1"
    },
    "Subscribers": [
        "444455556666", "123456789012"
    ]
}
}

```

Managing tags on an entitlement

You can use tags to help you track the billing and organization for your AWS Elemental MediaConnect flows, sources, outputs, and entitlements. These are the same tags that AWS Billing and Cost Management provides for organizing your AWS bill. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

Topics

- [Adding tags on a MediaConnect entitlement](#)
- [Editing tags on a MediaConnect entitlement](#)
- [Removing tags from a MediaConnect entitlement](#)

Adding tags on a MediaConnect entitlement

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect entitlements. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To add tags to an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to add tags to.
3. Choose the **Entitlements** tab.

A list of entitlements for that flow appears.

4. Choose the entitlement that you want to add tags to.
5. Choose **Manage tags**.
6. Choose **Manage tags**, and then choose **Add tag**.
7. For each tag that you want to add, do the following:
 - a. Enter a key and a value. For example, your key can be **sports** and your value can be **golf**.
 - b. Choose **Add tag**.
8. Choose **Update**.

Editing tags on a MediaConnect entitlement

Use tags to help you track the billing and organization for your AWS Elemental MediaConnect entitlements. For more information about using tags for cost allocation, see [Use Cost Allocation Tags for Custom Billing Reports](#) in the *AWS Billing User Guide*.

To edit tags on an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to edit tags for.
3. Choose the **Entitlements** tab.

A list of entitlements for that flow appears.

4. Choose the entitlement that you want to edit tags for.
5. In the **Details** section, choose **Manage tags**.
6. Choose **Manage tags**.
7. Update the tags, as needed.
8. Choose **Update**.

Removing tags from a MediaConnect entitlement

You can remove a tag from an entitlement if you no longer want to use it to track the billing and organization for it.

To remove tags from an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to remove tags from.
3. Choose the **Entitlements** tab.

A list of entitlements for that flow appears.
4. Choose the entitlement that you want to remove tags from.
5. In the **Details** section, choose **Manage tags**.
6. Choose **Manage tags**.
7. Choose **Remove tag** next to each tag that you want to delete.
8. Choose **Update**.

Revoking an entitlement

After you revoke an entitlement, the content becomes unavailable to the subscriber account permanently. The entitlement and the associated output are removed from your flow. If you revoke an entitlement and later decide you need to grant that entitlement again, the subscriber's flow must be manually restarted. The subscriber's flow will not start automatically after the entitlement has been granted.

If you want to stop streaming content to the subscriber's flow temporarily, [disable](#) the entitlement instead.

To revoke an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to revoke.

The details page for that flow appears.
3. Choose the **Entitlements** tab.

4. Choose the entitlement that you want to revoke.
5. Choose **Revoke**.

To revoke an entitlement on a flow (AWS CLI)

- In the AWS CLI, use the `revoke-flow-entitlement` command:

```
aws mediaconnect revoke-flow-entitlement --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BaseballGame --entitlement-arn arn:aws:mediaconnect:us-west-2:111122223333:entitlement:1-11aa22bb11aa22bb-3333cccc4444:AnyCompany_Entitlement
```

The following example shows the return value:

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BaseballGame",
  "EntitlementArn": "arn:aws:mediaconnect:us-west-2:111122223333:entitlement:1-11aa22bb11aa22bb-3333cccc4444:AnyCompany_Entitlement"
}
```

Disabling an entitlement temporarily

When you disable an entitlement, the content becomes unavailable to the subscriber account immediately. However, the entitlement and the associated output remain on your flow. These resources continue to count toward your quota for outputs and entitlements. Later, you can [enable the entitlement](#) to re-instate access.

If you want to stop streaming content to the subscriber's flow permanently, [revoke](#) the entitlement instead. That action removes the entitlement and the associated output from your flow.

To disable an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to disable.

The details page for that flow appears.

3. Choose the **Entitlements** tab.
4. Choose the entitlement that you want to disable.
5. Choose **Disable**.

Enabling an entitlement that has been temporarily disabled

If an entitlement has been [disabled](#), you can enable it to start streaming content to the subscriber's flow again.

Note

If the entitlement was [revoked](#), you can't enable it. You must [grant](#) a new entitlement.

To enable an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the entitlement that you want to enable.

The details page for that flow appears.

3. Choose the **Entitlements** tab.
4. Choose the entitlement that you want to enable.
5. Choose **Enable**.

Subscribing to streaming media content provided by another AWS account using MediaConnect

When another AWS account (originator account) grants an entitlement to your AWS account (subscriber account), you can create a flow that uses the originator's content as your source. To subscribe to content provided by another AWS account, you create a flow based on the entitlement granted to you. You must set up your flow in the same AWS Region as the originator's flow.

You can use an entitlement only once.

Note

MediaConnect suppresses null packets in an effort to optimize the data connection between the content originator's flow and the subscriber's flow. This can result in a fluctuating bitrate on the subscriber's flow, or a difference between the bitrate of the content originator's flow and the subscriber's flow. We recommend that you monitor source health as a combination of `SourceBitRate` and other metrics such as `SourceContinuityCounter` and `SourceNotRecoveredPackets`.

Prerequisites

Before you can create your flow, you must do the following:

- Obtain the following information from the content originator:
 - The entitlement ARN
 - The AWS Region that the originator created the flow in
 - The encryption key and algorithm if the originator set up encryption on the entitlement
- If the entitlement is encrypted using [static key encryption](#), [store the encryption key](#) in AWS Secrets Manager before you begin this procedure. (If the content is encrypted using SPEKE, you don't need to do anything to configure encryption.)

To create a flow based on an entitlement (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. Verify that you are logged in to the same AWS Region that the originator's flow is in.
3. On the **Flows** page, choose **Create flow**.
4. In the **Details** section, for **Name**, specify a name for your flow.
5. For **Availability Zone**, choose an Availability Zone for your flow. This does not need to match the Availability Zone of the originator's flow.
6. In the **Source** section, for **Source type**, choose **Entitled source**.
7. For **Entitlement ARN**, choose the appropriate entitlement. This list includes all entitlements that have been granted to you.

Tip

You can click in this field and start typing the entitlement name. AWS Elemental MediaConnect will filter the list to include only entitlements with a name that matches what you type.

Note

The percentage of the entitlement data transfer fee that you are responsible for is listed next to each entitlement. This value is set by the content originator.

8. If the originator set up encryption on the entitlement, choose **Enable** in the **Decryption** section and do the following:
 - a. For **Decryption type**, choose **Static key**.
 - b. For **Role ARN**, specify the ARN of the role that you created when you [set up encryption](#).
 - c. For **Secret ARN**, specify the ARN that AWS Secrets Manager assigned when you [created the secret to store the encryption key](#).
 - d. For **Decryption algorithm**, choose the type of encryption that the originator provided.
9. At the bottom of the page, choose **Create flow**.

Note

The flow does not start automatically. You must [start the flow](#) manually.

10. [Add outputs](#) to specify where you want MediaConnect to send the content, or [grant entitlements](#) to allow users of other AWS accounts to subscribe to your content.

VPC interfaces

A virtual private cloud (VPC) based on the Amazon Virtual Private Cloud service is your private, logically isolated network in the AWS Cloud. You can set up a VPC interface to establish a connection between your AWS Elemental MediaConnect flow and your VPC.

For more information, see the following sections.

- [Creating a transport stream flow that uses a VPC source](#)
- [Adding a VPC interface to a MediaConnect flow](#)
- [Removing a VPC interface from a MediaConnect flow](#)
- [Adding a VPC source to an existing MediaConnect flow](#)
- [Adding VPC outputs to a flow](#)
- [Security group considerations for VPC interfaces](#)

Adding a VPC interface to a MediaConnect flow

To avoid streaming your content over the public internet, you can add a VPC interface to your AWS Elemental MediaConnect flow. You can add up to two VPC interfaces to each flow.

Important

When you add a VPC interface, MediaConnect creates a service-managed Elastic Network Interface (ENI) in your AWS account. To ensure proper service operation, be sure not to modify this resource in any manner.

Prerequisites

Before you begin this procedure, make sure that you have completed the following steps:

- In Amazon VPC, set up your VPC and associated security groups. For more information about VPCs, see the [Amazon VPC User Guide](#). For information about configuring security groups to work with your VPC interface, see [Security group considerations](#).
- In IAM, [set up MediaConnect as a trusted service](#).

Procedure

To add a VPC interface to a flow (console)

1. On the **Flows** page, choose the name of the flow that you want to update.
2. Choose the **VPC interfaces** tab.
3. Choose **Add VPC interface**.

4. For **Name**, specify a name for your VPC interface. The name of the VPC interface must be unique within the flow.
5. For **Network interface type**, specify the type of network adapter that you want MediaConnect to use on this interface. If you don't set this value, it defaults to **ENA**.

 Note

- You can add one EFA VPC interface per flow.
- You can add up to two ENA VPC interfaces per flow.
- You can only use an EFA VPC interface for sources that use the CDI protocol or the ST 2110 with JPEG XS protocol.

6. For **Role ARN**, specify the Amazon Resource Name (ARN) of the role that you created when you set up MediaConnect as a trusted service.
7. For **VPC**, choose the ID of the VPC that you want to use.
8. For **Subnet**, choose the VPC subnet that you want MediaConnect to use to set up your VPC configuration. The subnet must reside in the same Availability Zone as the flow.
9. For **Security groups**, specify the VPC security groups that you want MediaConnect to use to set up your VPC configuration. You must choose at least one security group.

Additional resources

VPC Flow Logs can be used to capture information about the IP traffic going to and from network interfaces in your VPC. Flow log data can be published to CloudWatch Logs, Amazon S3, or Data Firehose. For more information about VPC Flow Logs, see [Logging IP traffic using VPC Flow Logs](#) in the *Amazon VPC User Guide*.

Removing a VPC interface from a MediaConnect flow

You can remove a VPC interface from your flow if it isn't used as a source for the flow.

Prerequisites

- The flow must be in **Standby**.
- If the flow has an error, you must resolve the error before you complete the following procedure.

Procedure

To remove a VPC interface from a flow (console)

1. On the **Flows** page, choose the name of the flow that is associated with the VPC interface that you want to remove.
2. Choose **Stop**.

The status of the flow changes to **Standby**. The flow stops immediately and is no longer viewable to customers who are accessing the output directly from your flow or through an entitlement.

3. Choose the **VPC interfaces** tab.
4. Choose the VPC interface that you want to remove, and then choose **Remove**.

Security group considerations for VPC interfaces

When you set up a virtual private cloud (VPC) in Amazon Virtual Private Cloud, you create security groups that control inbound and outbound traffic. Then, when you create a VPC interface in AWS Elemental MediaConnect, you specify the security groups that you want MediaConnect to use when it sends and receives content from your VPC.

To ensure that content can flow between your VPC and MediaConnect, adhere to the following guidelines:

If you have...	Make sure that the VPC interface has a security group with...	Additional information
A VPC source	An inbound rule that allows the private IP address of the resource within the VPC that is sending content.	Zixi sources: When you create a VPC source using Zixi protocol, the inbound port is automatically assigned by MediaConnect. The assigned port will be in the range of 2090-2099 and assigned at the time of source creation. You should create the Zixi VPC source first and note the assigned port. After you have the

If you have...	Make sure that the VPC interface has a security group with...	Additional information
		assigned port information, you can configure your security groups.
A VPC output	An outbound rule that allows all outbound traffic. By default, all security groups include this rule. As long as you haven't deleted that rule from the security group, you don't need to create a new one.	On the resource that receives traffic from your flow, you also need to set up a security group with an inbound rule that allows the private IP of the network interface ID that is associated with the VPC interface. (In MediaConnect, you can look at the flow details to find the network interface ID. Then in EC2, you view details about the network interface to obtain the IP address.)
A VPC source and a VPC output from the same VPC interface	An inbound rule and an outbound rule that meet the requirements listed above.	You can use one security group that has both rules or two security groups (one for each rule). For CDI flows, the security group specified for the VPC interfaces must be self referential. Verify that the security group used has the same security group ID added to both inbound and outbound rules.

For more information about security groups, see the [Amazon VPC User Guide](#).

Protocols in MediaConnect

AWS Elemental MediaConnect supports different protocols for incoming (source) and outgoing (output) live video streams depending on the type of flow you use.

Transport stream flows

For transport stream flows, which transport compressed content that is muxed (audio, video, and ancillary data are combined) into a single stream, you can use the following protocols:

- **Network Device Interface (NDI®)** uses SpeedHQ compression to deliver high-quality, low-latency video transmission over IP networks. This protocol is optimized for professional video workflows and supports up to 1080p60 video quality.
- **Reliable Internet Stream Transport (RIST) (Simple profile only)** is a highly available, low-latency protocol that is suitable for long-distance applications. MediaConnect doesn't support encryption for sources or outputs that use the RIST protocol.
- **Real-Time Transport Protocol (RTP)** has wide applicability and takes less bandwidth than RTP-FEC. MediaConnect doesn't support encryption for sources or outputs that use the RTP protocol.
- **Real-Time Transport Protocol with Forward Error Correction (RTP-FEC)** has wide applicability and forward error correction (FEC) to self-heal any corruption and packet loss. Using this protocol takes more bandwidth than RTP without FEC. AWS Elemental MediaConnect doesn't support encryption for sources or outputs that use the RTP-FEC protocol.
- **Secure Reliable Transport (SRT)** is a highly available, low-latency protocol that is suitable for long-distance applications.
 - **SRT listener** is a pull-based implementation of the SRT protocol. You can use it as a source or an output. When configured as a source or an output, an SRT listener can accept connections from only one SRT caller at a time. Multiple connections to a flow configured with an SRT listener aren't supported.
 - **SRT caller** is a push-based implementation of the SRT protocol. You can use it as a source or an output. SRT caller must communicate with an SRT listener.
- **Zixi** is a highly available protocol suitable for most applications, especially use cases that involve longer distances. If your encoder doesn't support Zixi, you can use the Zixi Edge Compute (ZEC) software. ZEC operates as both a sender and a receiver. To download this software, see [Zixi Edge Compute \(ZEC\)](#) on the Zixi website. MediaConnect supports two Zixi protocol options:
 - **Zixi pull** uses the Zixi protocol to send content to a receiver or an integrated receiver decoder (IRD) that is behind a firewall. Additionally, you can use this option when you need network address translation (NAT) to route the traffic from MediaConnect to the receiver.
 - **Zixi push** uses the Zixi protocol to send content to a receiver that has a static, publicly addressable IP address. Use this option when the receiver is not behind a firewall or NAT-based router.

- **Zixi push for AWS Elemental Link** uses the Zixi push protocol to connect an AWS Elemental Link UHD device with a MediaConnect flow.

CDI flows

For CDI flows, which transport high-quality content that has been lightly compressed using JPEG XS, you use the following protocols:

- **AWS Cloud Digital Interface (AWS CDI)** is a technology that allows you to transport high-quality uncompressed video inside the AWS Cloud, with high reliability and network latency as low as 8 milliseconds.
- **ST 2110 JPEG XS** is a low-latency protocol that can be used on streams with minimal compression.

Protocol support for sources and outputs

The following table describes what protocols can be used for sources, outputs, or both.

Transport stream protocols

Protocol	Can this be used as a Source?	Can this be used as an Output?
NDI-SpeedHQ	Yes	Yes
RIST	Yes	Yes
RTP	Yes	Yes
RTP-FEC	Yes	Yes
SRT listener	Yes	Yes
SRT caller	Yes	Yes
Zixi pull	No	Yes
Zixi push	Yes	Yes

CDI protocols

Protocol	Can this be used as a Source?	Can this be used as an Output?
CDI	Yes	Yes
ST 2110 JPEG XS	Yes	Yes

Color support for CDI protocols

MediaConnect CDI flows support multiple configurations of color space, bit depth, and chroma sampling for each protocol. The following table describes the configurations supported by each CDI protocol.

Note

MediaLive does not currently support RGB color space for CDI inputs. If you will be outputting a CDI flow from MediaConnect to MediaLive, ensure that you use YCbCr color space.

CDI color support

Protocol	Supported color configurations
CDI	• YCbCr 10-bit 4:2:2 • RGB 10-bit 4:4:4 • RGB 12-bit 4:4:4
ST 2110 JPEG XS	• YCbCr 10-bit 4:2:2 • RGB 10-bit 4:4:4 • RGB 12-bit 4:4:4

Media streams in MediaConnect

A media stream is an essential component in a CDI flow, which you can use to ingest content into and transport content within the AWS Cloud via the SMPTE 2110, part 22 transport standard. Each media stream represents a single track or stream of media that contains video, audio, or ancillary data.

You define a media stream as part of the flow. Then, you can associate it with a source and multiple outputs on that flow. The source and outputs must use the CDI protocol or the ST 2110 JPEG XS protocol, and can consist of one or many media streams.

The type of media stream that you create is based on the output that you are receiving from or sending to an on-premises device, such as AWS Elemental Live.

 **Note**

You use media streams only for CDI flows that have ST 2110 with JPEG XS as their input and output protocol. If you have configured your flows to use CDI as the input and output protocol, you don't need media streams.

AWS Elemental Live output	MediaConnect media stream type
SMPTE 2110-20: Uncompressed video	(Not supported)
SMPTE 2110-22: Compressed video with JPEG XS	Video
SMPTE 2110-30: PCM audio	Audio
SMPTE 2110-31: Dolby audio (AC3, EAC3)	(Not supported)
SMPTE 2110-40: Ancillary data	Ancillary data

For illustrations of CDI workflows, see [Contribution for CDI flows](#) and [CDI replication and monitoring](#).

Topics

- [Adding a media stream to a MediaConnect flow](#)
- [Updating a media stream a MediaConnect flow](#)
- [Removing a media stream](#)

Adding a media stream to a MediaConnect flow

Before you can associate a media stream with a source or an output, you need to add it to the flow. After you add a media stream to a flow, you can associate it with a source and then with outputs.

Note

You can only associate a media stream with an output if it has already been associated with a source on the flow.

To add a media stream to a flow

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that you want to add the media stream to.
3. Choose the **Media streams** tab.
4. Choose **Add media stream**.
5. In the **Name** field, specify a descriptive name that will help you distinguish this media stream from others in the flow.
6. For **Description**, specify a description that will help you remember the use of this media stream.
7. For **Stream ID**, specify a unique identifier for the media stream.

If the source or any of the outputs uses the CDI protocol, specify the value that is expected by the production and playout systems.

If the source and all outputs use the ST 2110 JPEG XS protocol, specify a value that is unique to that of other media streams within the flow.

8. Choose **Advanced options** to display the additional options based on your stream type.
9. For specific instructions on the advanced options based on your stream type, choose one of the following tabs:

Audio

1. For **Stream type**, choose **Audio**.
2. For **Media clock rate**, specify the sample rate for the stream. This value is measured in Hz.
3. For **Language**, specify the language of the audio. This value should be in a format that the receiver recognizes.
4. For **Channel order**, specify the format of the audio channel.
5. Choose **Add media stream**.

Video

1. For **Stream type**, choose **Video**.

For many fields, MediaConnect provides a default value that represents the recommended setting. Change the default value if needed.

2. **Media clock rate** is the sample rate for the stream, and is set to 90000. This value is measured in Hz.
3. For **Video format**, specify the resolution of the video.
4. For **Exact framerate**, specify the frame rate of the video. This value should be represented in frames per second.
5. For **Colorimetry**, specify the format that was used for the representation of color in the video.
6. For **Scan mode**, specify the method that was used to scan the incoming video.
 - Choose **Interlace** if the incoming video is interlaced (for example, 480i or 1080i).
 - Choose **Progressive** if the incoming video is progressive (for example, 720p or 1080p).
 - Choose **Progressive segmented frame** if the incoming video is PSF (for example, 1080psf).
7. For **TCS**, specify the transfer characteristic system (TCS) that was used in the video.
8. For **Range**, specify the encoding range of the video.
9. For **PAR**, specify the pixel access ratio (PAR) of the video.
10. Choose **Add media stream**.

Ancillary data

1. For **Stream type**, choose **Ancillary data**.
2. **Media clock rate** is the sample rate for the stream, and is set to 90000. This value is measured in Hz.
3. Choose **Add media stream**.

Updating a media stream a MediaConnect flow

You can update media streams even if the flow is running. However, if the media stream is associated with a source or any outputs, you can't update its type.

To update a media stream on a flow

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the media stream that you want to update.
3. Choose the **Media streams** tab.

A list of media streams for that flow appears.

4. Choose the media stream that you want to update.
5. Choose **Update**.
6. Make the appropriate changes, and then choose **Save**.

Removing a media stream

You can remove a media stream from a flow if the flow is not active and if the media stream is not associated with a source or any outputs.

To remove a media stream from a flow

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow that is associated with the media stream that you want to remove.

The details page for that flow appears.

3. Choose the **Media streams** tab.
4. Choose the media stream, and then choose **Remove**.

Best practices for MediaConnect flows

For the best performance and availability, follow best practices when you configure your AWS Elemental MediaConnect flows.

Performance

Transport stream flows

The following best practices describe how to optimize the performance of transport stream flows:

- Ensure you have set up your transport stream flows with an aggregate output bandwidth of up to 400 Mb/s. MediaConnect is designed to work with an aggregate output bandwidth of 400 Mb/s.

aggregate output bandwidth = (bitrate of the source) x (number of outputs)

For example, if your flow has a source with a bitrate of 80 Mb/s and 5 outputs, the aggregate output bandwidth is 400 Mb/s. Likewise, a flow that has a source with a bitrate of 20 Mb/s and sends content to 20 outputs also has an aggregate output bandwidth of 400 Mb/s.

Note

Because you can specify two destinations for a single ST 2110 JPEG XS output, those outputs should be counted twice in this calculation.

- You can set up transport stream flows with bitrates up to 120 megabits per second (Mb/s) with mezzanine-quality live video.

Transport stream flows with NDI® outputs

The following best practices describe how to optimize the performance of flows with NDI outputs:

- Monitor the performance of your MediaConnect flow as you scale the number of receivers connected to your NDI output. In particular, watch for signs of over-subscription, such as:
 - Dropped frames or stuttering video on your NDI receivers
 - Dropped NDI connections

If you notice these issues, consider reducing the number of NDI receivers or investigating ways to optimize your workflow.

- Calculate the aggregate bandwidth of your NDI output and all subscribed NDI receivers, and ensure it fits within the total throughput capacity of your MediaConnect flow size. The large flow size supports up to 2.5 Gbps of aggregate throughput.
- Use descriptive naming conventions for your NDI output to make it easier for production systems to quickly discover and connect to the correct sources.
- Test your full NDI workflow, including connecting multiple receivers, to understand the performance characteristics and limits for your specific use case.
- Limit your NDI configuration setup to a single interface adapter per VPC. Each VPC interface has its own private IP address. When you use multiple VPC interfaces, this can confuse the NDI discovery server and lead to unexpected routing behavior.
- MediaConnect doesn't impose a hard limit on the number of NDI receivers that can subscribe to a MediaConnect NDI output. However, as you scale the number of NDI receivers, keep in mind that each additional NDI receiver connected to your flow increases the CPU and memory usage on the MediaConnect service. This is because MediaConnect is acting as the NDI sender, and needs to encode and transmit the video and audio streams to all connected receivers.

CDI flows

The following best practices describe how to optimize the performance of CDI flows:

- You can use up to 10 outputs for CDI flows. In addition, 4Kp60 CDI flows support 10 ST 2110 JPEG XS outputs, but only 4 CDI outputs.

Gateways

The following best practices describe how to optimize the performance of Gateways:

- The API can be used to start multiple bridges at one time. If you are starting multiple bridges using the API, we recommend starting no more than 10 at one time. If you need to start more than 10 bridges, use multiple requests.

Flows with managed outputs

The following best practices describe how to optimize the performance of flows with managed output types:

- You can use managed outputs to send content exclusively between MediaConnect flows and MediaLive channels. For instructions on creating these output types, see [Setting up for a MediaConnect input](#) in the MediaLive User Guide.
- For flows with managed output types, we recommend an aggregate bitrate limitation of 160 Mbps. For example, if a flow has a source bitrate of 4.5 Mbps, the total number of managed outputs shouldn't exceed 35.
- For flows with both managed outputs and transport stream outputs, apply the same 160 Mbps aggregate limitation.

Availability

- To minimize packet loss, use Forward Error Correction (FEC) or automatic repeat request (ARQ) based protocols such as the Zixi or RTP-FEC protocol. These [protocols](#) are designed to minimize packet loss between the source and destination devices.
- Because packet loss is present on any network, even in fully managed networks such as the AWS Cloud, you should create and manage redundant connections throughout your workflows. In MediaConnect, there are multiple ways to add redundancy to your workflow:
 - Create flows in at least two different Availability Zones.
 - [Add a second source](#) to each flow. If there are errors in the stream, MediaConnect can use packets from a redundant source or switch to the redundant source completely.
- We recommend that your organization create a VPC specifically for all AWS Media Services. A single VPC will help to ensure the availability of IP addresses, help in setting up appropriate rules in the security groups, and help to ensure that a network administrator doesn't accidentally delete elastic network interfaces.

Reliability

- Set up Amazon CloudWatch metrics and alarms to track the health of your source. For information about which metrics to monitor, see [Monitoring and tagging](#).


Security

- The CIDR block on the flow source should be as precise as possible. Include only the IP addresses that you want to contribute content to your flow. If the CIDR block is too wide, it allows for the possibility of outside parties sending content to your flow.
- When you create a new SRT password to encrypt an SRT output, you must create that password in AWS Secrets Manager. AWS Secrets Manager does not enforce a specific password policy. However, we recommend the following password policy:
 - Minimum password length of 10 characters and a maximum length of 80 characters
 - Minimum of three of the following mix of character types: uppercase, lowercase, numbers, and `! @ # $ % ^ & * ( ) _ + - = [ ] { } | '` symbols
 - Not be identical to your AWS account name or email address

AWS Elemental MediaConnect Gateway

AWS Elemental MediaConnect Gateway is a feature of MediaConnect that deploys on-premises resources for transporting live video to and from the AWS Cloud. MediaConnect Gateway allows you to contribute live video to the AWS Cloud from on-premises hardware, as well as distribute live video from the AWS Cloud to your local data center.

The following graphic depicts a workflow where AWS Elemental MediaConnect Gateway runs on-premises and sends multicast feeds as unicast. This process transmits live video between the on-premises operations center and the AWS Cloud. From there, AWS Elemental MediaConnect Gateway distributes that same content to a different on-premises location.

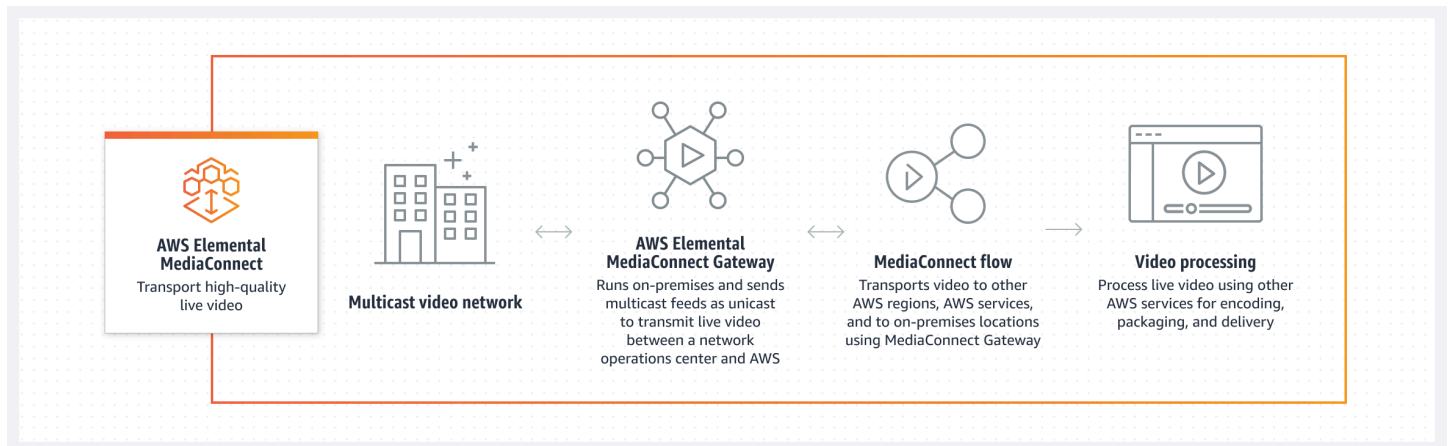

Contents

- [Key points](#)
 - [Gateway components](#)
 - [MediaConnect Gateway terminology](#)
- [Next steps](#)
- [Additional resources](#)


Key points

Gateway components

AWS Elemental MediaConnect Gateway is made up of four major components: *gateways*, *networks*, *instances*, and *bridges*. Each of these components are explained in greater detail in the following sections of this guide. The following describes the basic relationship of these components:

- **Gateways:** A logical grouping of instances and bridges. Each gateway utilizes user-defined IP information for communication between data centers and the AWS Cloud.
- **Networks:** A MediaConnect Gateway network is a collection of IP information that instances and bridges use to communicate on your local data center network. The network information must match the local data center network that you are using to communicate with gateway. Each MediaConnect Gateway may contain a maximum of two networks. All gateways must contain at least one network.
- **Instances:** A compute instance running on equipment in your data center and managed by MediaConnect. This instance is an on-premises implementation of the MediaConnect service and is contained within a gateway. Instances use bridges to communicate between your data center and the AWS Cloud. You create instances by installing software on an on-premises server.
- **Bridges:** A connection between your data center's instances and the AWS Cloud. A bridge can be used to send video from the AWS Cloud to your data center or from your data center to the AWS Cloud.

The following graphic depicts the interactions of each component in a common workflow scenario. In this workflow, multicast from the data center is ingested into a gateway instance and contributed across a bridge to MediaConnect in the AWS Cloud. From the AWS Cloud, the multicast is distributed to a different data center's gateway instance.

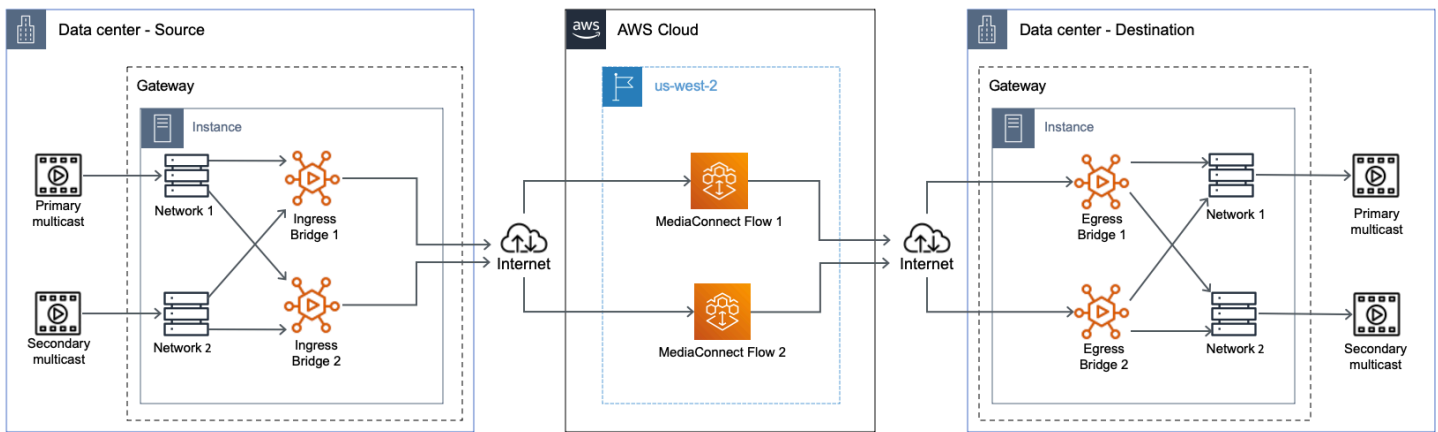

MediaConnect Gateway terminology

The following section provides details about MediaConnect Gateway concepts and terminology.

- **Ingress:** In MediaConnect Gateway, ingress refers to content contributed to the AWS Cloud from an on-premises location. If the content is leaving your location using an ingress bridge, this means its destination is AWS.
- **Egress:** In MediaConnect Gateway, egress refers to content distributed to your on-premises location from the AWS Cloud. If the content is entering your location using an egress bridge, this means its source is AWS.
- **Cloud flow:** A MediaConnect flow that exists in the AWS Cloud. Typically, this will be an existing MediaConnect flow that you might already be using and want to distribute to an on-premises gateway.
- **Flow source:** A source that originates in the AWS Cloud. An egress bridge uses this type of source.
- **Network source:** A source that originates at your on-premises location. An ingress bridge uses this type of source.
- **Flow output:** An output that is delivered to the AWS Cloud. An ingress bridge uses this type of output.
- **Network output:** An output that is delivered to your on-premises location. An egress bridge uses this type of output.

Next steps

Now that you have a basic understanding of MediaConnect Gateway, we recommend you review the [Supported operating systems and system architectures for using MediaConnect Gateway](#).

Additional resources

- To learn more about gateway networks, see [MediaConnect Gateway networks](#).
- To learn more about gateway instances, see [Instances managed by MediaConnect Gateway](#).
- To learn more about gateway bridges, see [MediaConnect Gateway bridges](#).

Supported operating systems and system architectures for using MediaConnect Gateway

Before you can use AWS Elemental MediaConnect Gateway, you need an AWS account and the appropriate permissions to access, view, and edit MediaConnect components. Additionally, you will need physical hardware that complies to the MediaConnect Gateway requirements listed in the following sections.

Contents

- [General information](#)
- [Supported system architectures](#)
- [Supported operating systems](#)

General information

AWS Elemental MediaConnect Gateway is built on the Amazon Elastic Container Service Anywhere (ECS Anywhere) service. Amazon ECS Anywhere enables you to register an *external instance*, such as an on-premises server, to your AWS infrastructure. This architecture requires that external instances using MediaConnect Gateway comply with both Amazon ECS Anywhere requirements and additional MediaConnect Gateway requirements.

For a detailed understanding of Amazon ECS Anywhere and its cluster management capabilities for on-premises hardware, refer to the following resources:

- [Amazon ECS clusters for the external launch type](#) in the *Amazon Elastic Container Service Developer Guide*
- [Amazon ECS Anywhere FAQs](#)

The following sections of this page outline hardware and operating system (OS) requirements, as well as MediaConnect Gateway-specific requirements.

The following table contains the default quotas for each MediaConnect Gateway component.

Component	Default quota	Can this quota be increased?
Maximum number of gateways for each AWS Region	3	Yes
Maximum number of instances for each gateway	20	No
Maximum number of bridges for each gateway	40	No
Maximum bitrate for each bridge	100 Mbps	No

Supported system architectures

The following table contains the recommended system architectures for your individual gateway instances. The system will determine the maximum number of bridges that can run on the instance. Only x86_64 CPU architectures are supported. MediaConnect Gateway does not support ARM-based CPUs:

Number of bridges	vCPU cores (2.6 GHz)	vCPU cores (3.0 GHz)	Minimum RAM (GB)	Minimum disk space (GB)
10	2	2	4	25
25	6	4	8	25
40	10	8	16	25

CPU references

The CPU architectures are benchmarked using these CPUs:

- 2.6 GHz - Intel E5-2660 v3
- 3.0 GHz - AMD 7302

Supported operating systems

The following list contains the supported operating systems (OS) and software configurations for your MediaConnect Gateway instances.

Supported operating systems

- Ubuntu 20.04

Required software

- Docker - MediaConnect Gateway requires that you install the latest release of Docker. If you are using a Linux distribution other than RHEL, the instance registration script provided by MediaConnect will install Docker for you. Neither Docker or RHEL's open package repositories support installing Docker natively on RHEL. When using RHEL, you must ensure that Docker is installed before you run the instance registration script that's described in this document.

MediaConnect Gateway networks

An AWS Elemental MediaConnect Gateway *network* is a collection of IP information that will be used by the instances and bridges to communicate on your local data center network. The gateway network information must match the local data center network that you are using to communicate with the gateway. Each gateway may contain a maximum of two networks. All gateways must contain at least one network.

Key points

- Networks are automatically created during the initial setup process of a new gateway.
- You can't add or edit a network after the initial creation of the gateway.
- Networks are deleted as part of the gateway deletion process.

Next steps

- To learn about creating a gateway and its networks, see [Setting up a MediaConnect Gateway](#).
- To learn about deleting a gateway and its networks, see [Removing a MediaConnect Gateway](#).

Gateways managed by MediaConnect Gateway

Gateways serve as the logical grouping for instances and bridges in the MediaConnect architecture, facilitating communication between on-premises networks and the AWS Cloud for media workflows.

This section covers the fundamental procedures for working with gateways.

Contents

- [Setting up a MediaConnect Gateway](#)
- [Removing a MediaConnect Gateway](#)

Setting up a MediaConnect Gateway

Setup begins with creating the gateway. This can be done in the MediaConnect console, programmatically using the MediaConnect API, or by using AWS CloudFormation.

Contents

- [Prerequisites](#)
- [Procedure](#)
- [Next steps](#)

Prerequisites

- Make sure that you've reviewed the [Supported operating systems and system architectures for using MediaConnect Gateway](#).
- Before creating a gateway, you will need the name, egress CIDR IP information, and network information of the gateway you want to create.

Procedure

You can create a gateway using the console or the AWS CLI.

Console

To create a gateway using the console

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the navigation pane, select **Gateways**. In the **Gateways** section, choose **Create gateway**.
3. On the **Create gateway** page, enter a **Name** for your gateway. This name can't be modified later.
4. For the **Egress CIDR blocks**: Enter a CIDR block for the egress of your gateway. These IP addresses should be in the form of a Classless Inter-Domain Routing (CIDR) block; for example, 10.0.0.0/16. This CIDR block represents a range of IP addresses that are allowed to contribute content or initiate output requests for flows communicating with this gateway.

Important

Don't use 0.0.0.0/0 for the **Egress CIDR blocks**. This will open the gateway to the public.

5. In the **Networks** section, enter a name for your first network. A gateway may contain a maximum of two networks. Each network name must be unique for this gateway.
6. Enter a **CIDR block** for this network. To complete the creation of the gateway, choose the **Create Gateway** button.

AWS CLI

To create a gateway using the AWS CLI

1. Find the name, egress CIDR IP information, and network information of the gateway you want to create. Store this information in a JSON file on the computer that runs the AWS CLI. The JSON file should be named `gateway.json`. The following example shows the correct sections and formatting for the JSON file.


```
{
  "Name": "gateway",
  "EgressCidrBlocks": [
    "10.20.30.0/24"
  ],
  "Networks": [
    {
      "Name": "blue",
      "CidrBlock": "172.31.48.0/20",
    }
  ]
}
```

2. Enter the following command into the AWS CLI interface. Replace the <yourprofile> and <region> values with your desired profile and AWS Region.

```
aws --profile <yourprofile> --region <region> mediaconnect create-gateway
--cli-input-json file://gateway.json
```

3. The AWS CLI will return a response like the following example.

```
"Gateway": {
  "EgressCidrBlocks": [
    "10.20.30.0/24"
  ],
  "GatewayArn": "arn:aws:mediaconnect:us-
west-2:111122223333:gateway:1-23aBC45dEF67hiJ8-12AbC34DE5fG:gateway",
  "GatewayState": "CREATING",
  "Name": "gateway",
  "Networks": [
    {
      "CidrBlock": "172.31.48.0/20",
      "Name": "blue"
    }
  ]
}
```

Next steps

After a MediaConnect Gateway and its networks are created, you can begin registering instances to that MediaConnect Gateway. For instructions, see [Registering a MediaConnect Gateway instance](#).

Removing a MediaConnect Gateway

To remove a gateway, you must first remove all of its components, such as its networks, instances, and bridges. The following is the process for removing a gateway and its components.

Contents

- [Prerequisites](#)
- [Procedure](#)

Prerequisites

The following procedure assumes that you have previously created at least one MediaConnect Gateway.

Procedure

You can remove a gateway using the console or the AWS CLI.

Console

To remove a gateway using the console

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the navigation pane, select **Gateways**. In the **Gateways** section, select the gateway you want to delete.
3. On the MediaConnect Gateway details page, select the **Bridges** tab. Complete the following steps to delete the bridges:
 1. Select the bridge you want to delete.
 2. If the bridge has been started, select **Stop**.
 3. When the bridge is stopped, select **Delete**.
 4. Confirm the deletion of the bridge by selecting **Delete bridge**.

5. Repeat these steps for any additional bridges you need to delete.
4. Return to the gateway's **Details** page, select the **Instances** tab. Complete the following steps to delete the instances:
 - a. Select the instance you want to delete.
 - b. Select **Deregister**.
 - c. Confirm the deregistration of the instance by selecting **Deregister instance**.
 - d. Repeat these steps for any additional instances you need to deregister.

 Note

OPTIONAL: If you want to reuse the instance for Amazon ECS Anywhere or as another gateway instance, you will need to complete the following steps. If not, continue with Step 5.

- e. Make sure that the **Instance state** is **Deregistered** for the instance you want to reuse.
- f. From a computer with the access to do so, connect to the instance using SSH.
- g. Run the following commands, in order:

```

sudo docker stop $(sudo docker ps -f "name=MediaConnectGatewayAgent" -q); \
sudo docker stop ecs-agent; \
sudo systemctl stop ecs amazon-ssm-agent; \
sudo yum remove -y amazon-ecs-init amazon-ssm-agent; `# or apt or snap as
needed` \
sudo rm /var/lib/ecs /etc/ecs /var/lib/amazon/ssm /var/log/ecs /var/log/
amazon/ssm -rf; \
sudo docker rm -f ecs-agent ssm-agent; \
sudo docker container rm -f $(sudo docker ps -a -f
"name=MediaConnectGatewayAgent" -q); \
sudo docker volume rm -f ecsdata docker run; \
sudo pkill -f -KILL network_bootstra[p]; \
sudo pkill -KILL mcproxy;

```

5. After successfully deleting all bridges and deregistering all instances associated with the gateway, you may delete the gateway. Deleting the gateway will delete all networks created under that gateway.
 1. From the navigation pane, select **Gateways**.
 2. In the **Gateways** section, select the gateway that you want to delete to view that gateway's **Details** page.
 3. Choose the **Delete** button.
 4. Confirm the deletion of the gateway by choosing **Delete gateway**.

AWS CLI

To remove a gateway using the AWS CLI

1. Delete the bridges by running the following command.

```
aws --profile <Profile> --region <Region> mediaconnect delete-bridge --bridge-arn <BridgeArn>
```

2. Deregister the instances by running the following command.

```
aws --profile <Profile> --region <Region> mediaconnect deregister-gateway-instance --gateway-instance-arn <GatewayArn>
```

Note

OPTIONAL: If you want to reuse the instance for Amazon ECS Anywhere or as another AWS Elemental MediaConnect Gateway instance, you will need to complete the following steps. If not, continue with Step 3.

- a. Make sure that the InstanceState is DEREGISTERED for the instance you want to reuse. You can verify using the describe-gateway-instance command shown in the following example.

```
aws --profile <Profile> --region <Region> mediaconnect describe-gateway-
instance
    --gateway-instance-arn <GatewayInstanceArn>
```

- b. From a computer with the access to do so, connect to the instance using SSH.
- c. Run the following commands, in order.

```
sudo docker stop $(sudo docker ps -f "name=MediaConnectGatewayAgent" -q); \
sudo docker stop ecs-agent; \
sudo systemctl stop ecs amazon-ssm-agent; \
sudo yum remove -y amazon-ecs-init amazon-ssm-agent; `# or apt or snap as
needed` \
sudo rm /var/lib/ecs /etc/ecs /var/lib/amazon/ssm /var/log/ecs /var/log/
amazon/ssm -rf; \
sudo docker rm -f ecs-agent ssm-agent; \
sudo docker container rm -f $(sudo docker ps -a -f
"name=MediaConnectGatewayAgent" -q); \
sudo docker volume rm -f ecsdata docker run; \
sudo pkill -f -KILL network_bootstrap[p]; \
sudo pkill -KILL mcproxy;
```

3. Delete the gateway. This will delete all networks associated with the gateway.

```
aws --profile <Profile> --region <Region> mediaconnect delete-gateway --gateway-
arn <GatewayArn>
```

Instances managed by MediaConnect Gateway

An *instance* is a compute instance running on equipment in your data center and managed by MediaConnect Gateway. This instance is an on-premises implementation of the MediaConnect service and is contained within a gateway.

Instances use bridges to communicate between your data center and the AWS Cloud. Instances are created by installing software on an on-premises server.

This section covers the fundamental procedures for working with gateways.

Contents

- [Registering a MediaConnect Gateway instance](#)
- [Deregistering a MediaConnect Gateway instance](#)

Registering a MediaConnect Gateway instance

You can register an instance by running a custom Linux command on the device that will be hosting the instance. You generate the command by following the instance registration process in the AWS Management Console. Registering an instance using the AWS CLI is not currently supported.

Contents

- [Prerequisites](#)
- [Procedure](#)
- [Next steps](#)
- [Additional resources](#)

Prerequisites

The following procedure assumes that you have previously created a gateway.

Procedure

To register a MediaConnect Gateway instance

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

2. From the navigation pane, select **Gateways**.
3. In the **Gateways** section, select the gateway you want to register the instance to.
4. On the gateway **Details** page, select the **Instances** tab.
5. On the **Instances** tab, choose **Register instance**.
6. On the **Register Gateway instances** page, complete the following steps:
 1. For **Activation key duration**, enter the number of days that the activation key will remain active. After that number of days, the key will no longer work when registering a gateway instance.
 2. For **Number of instances**, enter the number of instances that you want to register to your gateway with this activation key.
 3. For **Instance role**, choose the IAM role to associate with your external instances.
 4. Select **Generate registration command**.
7. Copy the **Linux command** that is displayed.
8. Run the command on each instance you want to register to this gateway.

 Important

The bash portion of the script must be run as root. If the command isn't run as root, an error is returned.

9. After a few minutes, the instance will register to the gateway. All instances registered to this gateway will appear in the **Instances** tab.

Next steps

After you've registered an instance to a MediaConnect Gateway, you can create a bridge on that instance. For instructions, see [the section called "Creating a bridge"](#).

Additional resources

- [Deregistering a MediaConnect Gateway instance](#)

Deregistering a MediaConnect Gateway instance

You can deregister an instance you no longer want to use within MediaConnect Gateway. By deregistering the instance, it will no longer support bridges and will not be a part of your gateway.

Contents

- [Prerequisites](#)
- [Procedure](#)
- [Next steps](#)
 - [Reusing a gateway instance](#)
- [Additional resources](#)

Prerequisites

The following procedure assumes that you have previously registered at least one instance to your gateway.

Procedure

To deregister a gateway instance

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the navigation pane, select **Gateways**. In the **Gateways** section, select the gateway that contains the instance you want to deregister.
3. On the gateway **Details** page, select the **Instances** tab. Select the **Instance ID** of the instance you want to deregister.
4. Select **Deregister**.
5. Confirm the deregistration of the instance by selecting **Deregister instance**.
6. Repeat the previous steps for any additional instances you need to deregister.

Next steps

Reusing a gateway instance

If you want to reuse the instance for Amazon ECS Anywhere or as another gateway instance, you will need to complete the following steps.

To reuse a gateway instance (optional)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the navigation pane, select **Gateways**. In the **Gateways** section, select the gateway that contains the instance you want to reuse.
3. On the gateway **Details** page, select the **Instances** tab. Locate the **Instance ID** of the instance you want to reuse.
4. Make sure that the **Instance state** is **Deregistered** for the instance you want to reuse.
5. From a computer with the access to do so, connect to the instance using SSH.
6. Run the following commands, in order.

```
sudo docker stop $(sudo docker ps -f "name=MediaConnectGatewayAgent" -q); \  
sudo docker stop ecs-agent; \  
sudo systemctl stop ecs amazon-ssm-agent; \  
sudo yum remove -y amazon-ecs-init amazon-ssm-agent; `# or apt or snap as needed` \  
sudo rm /var/lib/ecs /etc/ecs /var/lib/amazon/ssm /var/log/ecs /var/log/amazon/ssm \  
-rf; \  
sudo docker rm -f ecs-agent ssm-agent; \  
sudo docker container rm -f $(sudo docker ps -a -f "name=MediaConnectGatewayAgent" \  
-q); \  
sudo docker volume rm -f ecsdata docker run; \  
sudo pkill -f -KILL network_bootstra[p]; \  
sudo pkill -KILL mcproxy;
```

Additional resources

For more information about deleting a MediaConnect Gateway and its networks, see [Removing a MediaConnect Gateway](#).

MediaConnect Gateway bridges

A *bridge* is a connection between your data center's instances and the AWS Cloud. Depending on the selected bridge type, a bridge can be used to send content from the AWS Cloud to your data center or from your data center to the AWS Cloud.

Contents

- [Key points](#)
 - [Bridge types](#)
 - [Bridge sources](#)
 - [Bridge outputs](#)
- [Next steps](#)

Key points

Bridge types

AWS Elemental MediaConnect Gateway supports two types of bridges. Each bridge type serves a different purpose and determines if you will be contributing content to the AWS Cloud or distributing content to a physical location. The following are the two types of bridges and their different functions:

- **Ingress bridge:** A ground-to-cloud bridge. On an ingress bridge, the content originates at your premises and is delivered to the AWS Cloud
- **Egress bridge:** A cloud-to-ground bridge. On an egress bridge, the content comes from an existing MediaConnect flow and is delivered to your premises.

Bridge sources

Each bridge requires you to create a minimum of one source. The source is the content that will be ingested by the MediaConnect Gateway. The origin of the source content will be different depending on the bridge type you select. If you create multiple bridge sources, you can enhance the resiliency of your bridge by activating failover during the creation process. The following are the two types of sources:

- **Ingress bridge source:** For an ingress bridge, the content originates at your premises and is delivered to the cloud. When creating an ingress bridge source, you will need to select the protocol (RTP, RTP-FEC, or UDP) and enter the multicast IP address and port of the content originating in your premises. You can also use source-specific multicast (SSM) for ingress bridges, which allows you to optionally provide a source IP address in addition to the multicast IP when creating or updating an ingress bridge. This gives you more precise control over the multicast traffic.
- **Egress bridge source:** For an egress bridge, the content originates as an existing MediaConnect flow and is delivered to your premises. When creating an egress bridge source, you will need to select the MediaConnect flow that you would like to send to your premises. You don't need to select the protocol. The source will use the same protocol as the existing flow.

Bridge source failover

If you create multiple bridge sources, you can enhance the resiliency of your bridge by activating failover during the creation process. The failover configuration determines how AWS Elemental MediaConnect Gateway behaves in the event of source input loss. The bridge type will determine which of the two failover modes are available. The following are the two failover modes:

- **Failover:** This mode allows switching between a primary and a backup source. You can specify a source as the primary source. The second source serves as the backup. The service switches to the backup source if the primary source fails, and switches back to the primary source as soon as it is reliable.
- **Merge:** This mode combines the sources into a single stream, allowing a graceful recovery from any single-source loss. In merge mode, if a source is missing a packet the service pulls the missing packet from the other source.

Bridge outputs

Each bridge requires you to create a minimum of one output. The following are the two types of outputs:

- **Ingress bridge output:** For an ingress bridge, the content originates at your premises and is delivered to the cloud. You do not need to configure outputs for ingress bridge types. When you create a MediaConnect flow using the ingress bridge as a source, the output is automatically created when the flow is started.
- **Egress bridge output:** For an egress bridge, the content originates as an existing MediaConnect flow and is delivered to your premises. When you create an egress bridge output, you will need to configure the IP and protocol information that will be delivered to your premises. Egress bridge outputs support RTP, RTP-FEC, and UDP protocols.

Next steps

- To create a bridge, see [the section called “Creating a bridge”](#).

Creating a MediaConnect Gateway bridge

After you have registered at least one instance to your gateway, you can create a bridge. The process for creating a bridge will vary depending on the bridge type you select.

Contents

- [Prerequisites](#)
- [Procedure](#)
- [Next steps](#)
 - [Starting a bridge](#)
 - [Updating a bridge](#)

Prerequisites

- The following procedure assumes that you have previously created a gateway and registered an instance to it.
- Before creating a bridge, you will need to collect the details of the bridge you want to create.
- If you're creating an ingress bridge and you want to use source-specific multicast (SSM), verify your network capability and ensure that your network infrastructure (routers and switches) supports SSM. The multicast source IP that you use must be a valid IPv4 address.

Procedure

After you have registered at least one instance to your gateway, you can create a bridge. The process for creating a bridge will vary depending on the bridge type you select. There are two bridge types: ingress (a ground-to-cloud bridge) or egress (a cloud-to-ground bridge).

Console

To create an ingress bridge

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the navigation pane, select **Gateways**.
3. In the **Gateways** section, select the gateway you want to create the bridge on.
4. On the gateway **Details** page, select the **Bridges** tab.
5. Select **Create bridge**.
6. On the **Create bridge** page, complete the following steps in the **Details** section:
 1. Enter a **Name** for the bridge.
 2. For **Bridge type**, select **Ingress bridge**.

3. Enter the **Maximum bitrate** for the content you will transport over the bridge.
4. Enter the **Maximum outputs** for the bridge.
7. Next, complete the following steps in the **Sources** section. The source of an ingress bridge is multicast content that originates at your premises:
 1. Enter a **Name** for the bridge source.
 2. Select a **Network**. This is a network you created during the gateway setup process.
 3. Select the **Protocol** for this source.
 4. Enter the **Multicast IP** address.
 5. (Optional) If you want to use source-specific multicast (SSM), enter the **Multicast Source IP** address. The multicast source IP that you enter must be a valid IPv4 address. If you don't enter a value here, the bridge source will use Any-Source Multicast (ASM) mode.
 6. Enter the **Port** of the source.
8. If you add more than one source, you can set up failover using the **Failover configuration** section.
 - a. Select the **Failover mode: Failover** or **Merge**.
 - b. (Optional) If you select **Failover** as the mode, you can select one of the sources you previously configured to be the **Primary source**. If you don't select a **Primary source**, MediaConnect will select one at random.
9. Choose **Create bridge**.
10. After the bridge is created, you can start the bridge by selecting **Start** on the bridge's **Details** page.

To create an egress bridge

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the navigation pane, select **Gateways**.
3. In the **Gateways** section, select the gateway you want to create the bridge on.
4. On the gateway's **Details** page, select the **Bridges** tab.
5. Choose **Create bridge**.
6. On the **Create bridge** page, complete the following steps in the **Details** section:
 1. Enter a **Name** for the bridge.

2. Select a **Bridge type** of **Egress bridge**.
3. Enter the **Maximum bitrate** for the content you will transport over the bridge.
7. Complete the following steps in the **Sources** section:
 1. Enter a **Name** for the bridge source. For an Egress bridge, the source is the content coming from a MediaConnect flow and delivered to your premises.
 2. Select a **Network**. This is a network you created during the gateway setup process.
 3. Select the **Flow ARN**. This is the ARN of the MediaConnect flow that you will use as a source.
 4. If this flow uses a **VPC interface**, select it.
8. If you add more than one source, you can set up failover using the **Failover configuration** section.
 - a. When you select an egress bridge, the only available **Failover mode** is **Failover**. **Merge** cannot be selected.
 - b. (Optional) Select one of the sources that you previously created to be the **Primary source**. If you don't select a **Primary source**, MediaConnect will select one at random.
9. Under **Outputs**, complete the following steps.
 1. Enter a **Name** for the bridge output.
 2. Select a **Network**. This is a network that you created during the MediaConnect Gateway setup process.
 3. Select a transport **Protocol** for the output.
 4. Enter an **IP address** for the output. This must be an IP that is compatible with your local network.
 5. Enter the **Port** for the output. This must be a port that is compatible with your local network.
 6. Enter a **TTL** (time-to-live) for the output.
10. Select **Create bridge**.
11. After the bridge is created, you can start the bridge by selecting **Start** on the bridge details page.

AWS CLI

To create a bridge using the AWS CLI

1. Find the details of the bridge you want to create. These details will be stored in a JSON file on the computer running the AWS CLI. The JSON file should be named `bridge.json`. The following examples show the correct sections and formatting for the JSON file.

Here is an example for creating an egress bridge:

```
{
  "Name": "bridge",
  "PlacementArn": "arn:aws:mediaconnect:us-west-2:111122223333:gateway:1-23aBC45dEF67hiJ8-12AbC34DE5fG:gateway",
  "EgressGatewayBridge": {
    "MaxBitrate": 100000000
  },
  "SourceFailoverConfig": {
    "FailoverMode": "FAILOVER",
    "State": "ACTIVE"
  },
  "Sources": [
    {
      "FlowSource": {
        "Name": "Source0",
        "FlowArn": "arn:aws:mediaconnect:us-west-2:111122223333:flow:1-UAECXlABCQJeVwMB-95ec11ac6059:gatewayFlow",
        "NetworkName": "blue"
      }
    },
    {
      "FlowSource": {
        "Name": "Source1",
        "FlowArn": "arn:aws:mediaconnect:us-west-2:111122223333:flow:1-ECRZVGADYMGtPGTM-c1iPQ5FNL7Qn:gatewayFlow",
        "NetworkName": "blue",
        "FlowVpcInterfaceAttachment": {
          "VpcInterfaceName": "VPCIF"
        }
      }
    }
  ],
  "Outputs": [
    {
      "NetworkOutput": {
        "Name": "Output0",
        "NetworkName": "blue",
        "IpAddress": "225.1.2.3",
        "Port": 5010,
        "Protocol": "rtp-fec",
        "Ttl": 8
      }
    }
  ]
}
```

```

    }
  },
  {
    "NetworkOutput": {
      "Name": "Output1",
      "NetworkName": "blue",
      "IpAddress": "225.1.2.4",
      "Port": 6010,
      "Protocol": "rtsp",
      "Ttl": 250
    }
  }
]
}

```

Here is an example for creating an ingress bridge that supports SSM (MulticastSourceSettings and MulticastSourceIp are defined in the source):

```

{
  "Name": "bridge",
  "PlacementArn": "arn:aws:mediaconnect:us-west-2:11112223333:gateway:1-23aBC45dEF67hiJ8-12AbC34DE5fG:gateway",
  "IngressGatewayBridge": {
    "MaxBitrate": 800000000,
    "MaxOutputs": 1
  },
  "SourceFailoverConfig": {
    "FailoverMode": "FAILOVER",
    "SourcePriority": {
      "PrimarySource": "network-source1"
    }
  },
  "State": "ENABLED",
  "Sources": [
    {
      "NetworkSource": {
        "MulticastIp": "224.0.0.1",
        "MulticastSourceSettings": {
          "MulticastSourceIp": "1.2.3.4"
        },
        "Name": "network-source1",
        "NetworkName": "network-1",
        "Port": 5001,

```

```
        "Protocol": "rtp"
      },
    ],
    {
      "NetworkSource": {
        "MulticastIp": "224.0.0.2",
        "MulticastSourceSettings": {
          "MulticastSourceIp": "4.3.2.1"
        },
        "Name": "network-source2",
        "NetworkName": "network-1",
        "Port": 5001,
        "Protocol": "rtp"
      }
    }
  ]
}
```

2. Enter the following command into the AWS CLI interface. Replace the *<yourprofile>* and *<region>* values with your desired profile and AWS Region.

```
aws --profile <yourprofile> --region <region> mediaconnect create-bridge
    --cli-input-json file://bridge.json
```

3. The AWS CLI will return a response like the following example.

```

{
  "Bridge": {
    "BridgeArn": "arn:aws:mediaconnect:us-west-2:111122223333:bridge:1-GLx1BRLrHzzvpwyb-1dd82066b207:bridge",
    "BridgeMessages": [],
    "BridgeState": "STANDBY",
    "EgressGatewayBridge": {
      "MaxBitrate": 1000000000
    },
    "Name": "bridge",
    "Outputs": [
      {
        "NetworkOutput": {
          "IpAddress": "225.1.2.3",
          "Name": "Output0",
          "NetworkName": "blue",
          "Port": 5010,
          "Protocol": "rtp-fec",
          "Ttl": 8
        }
      },
      {
        "NetworkOutput": {
          "IpAddress": "225.1.2.4",
          "Name": "Output1",
          "NetworkName": "blue",
          "Port": 6010,
          "Protocol": "rtp",
          "Ttl": 250
        }
      }
    ],
    "PlacementArn": "arn:aws:mediaconnect:us-west-2:111122223333:gateway:1-23aBC45dEF67hiJ8-12AbC34DE5fG:gateway",
    "SourceFailoverConfig": {
      "FailoverMode": "FAILOVER",
      "State": "ENABLED"
    },
    "Sources": [
      {
        "FlowSource": {
          "FlowArn": "arn:aws:mediaconnect:us-west-2:111122223333:flow:1-UAECX1ABCQJeVwMB-95ec11ac6059:gatewayFlow",
          "Name": "Source0",

```

```

        "NetworkName": "blue"
      },
    },
    {
      "FlowSource": {
        "FlowArn": "arn:aws:mediaconnect:us-
west-2:111122223333:flow:1-ECRZVGADYMGtPGTM-c1iPQ5FNL7Qn:gatewayFlow",
        "Name": "Source1",
        "NetworkName": "blue",
        "FlowVpcInterfaceAttachment": {
          "VpcInterfaceName": "VPCIF"
        }
      }
    }
  ]
}

```

Next steps

Starting a bridge

After the bridge is created, you can start the bridge by choosing **Start** on the bridge's details page.

Updating a bridge

When updating an existing bridge source to use SSM, keep these key points in mind:

1. **Bridge state requirements:** The bridge must be in **STANDBY** state before you make any changes.
2. **Enabling SSM:** To enable SSM, add a multicast source IP to the ingress bridge configuration. After you start the bridge, it will use the new SSM configuration and only accept multicast traffic from the specified source IP.
3. **Reverting to ASM:** To switch back to Any-Source Multicast (ASM) mode, remove the multicast source IP from the ingress bridge configuration. Remember, this can only be done when the bridge is in **STANDBY** state.
4. **Applying changes:** After you make your changes, you must start the bridge for the new configuration to take effect.

5. **Verifying bridge source information:** You can view the current state of your bridge sources (including the multicast source IP) by using the [DescribeBridge](#) API or checking the bridge details in the console.

By following these guidelines, you can successfully manage your bridge's multicast settings, switching between SSM and ASM modes as needed.

Reservations for AWS Elemental MediaConnect

Reservations provide you with significant savings on your AWS Elemental MediaConnect costs compared to on-demand pricing.

A *reservation* is a commitment to use a specific amount of outbound bandwidth each month over the course of a specified duration. In return, you pay a discounted hourly rate for that bandwidth. The reservation is allocated and billed on a monthly basis through the duration of the reservation.

The discounted rate applies to outbound bandwidth from all of the MediaConnect flows in your account up to the amount of bandwidth specified in the reservation.

Outbound bandwidth refers to data that is transferred from a MediaConnect flow to a location or endpoint outside of the AWS Cloud. It does not include data transferred *in* to your MediaConnect flow, nor does it include data transferred from a MediaConnect flow to any location within the AWS Cloud.

For information on charges for reservations, see the [MediaConnect price list](#).

How billing works

Reserved outbound bandwidth is billed hourly. For each billing cycle, AWS charges your account for outbound bandwidth at the discounted rate, as specified in your reservation. If your account uses more outbound bandwidth than is covered in the reservation, the overage is charged at on-demand rates. If your account used less bandwidth, AWS charges you for the amount of outbound bandwidth that's specified in the reservation. Unused bandwidth is not carried over to the next month.

Viewing reservations for MediaConnect

On the console, you can view the reservations that you have purchased.

To view a list of reservations (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Reservations**.

A list appears, showing all reservations that you have purchased.

Offerings in MediaConnect

Offerings are discounts that MediaConnect offers in exchange for a commitment to use a certain amount of outbound bandwidth each month. The components of a MediaConnect offering are:

- Duration
- Outbound bandwidth
- Price (billed hourly)

When you purchase an offering, you specify the start date and time. The resulting resource is called a *reservation* because you are "reserving" a certain amount of outbound bandwidth for a period of time.

Outbound bandwidth refers to data that is transferred from a MediaConnect flow to a location or endpoint outside of the AWS Cloud. It does not include data transferred *in* to your MediaConnect flow, nor does it include data transferred from a MediaConnect flow to any location within the AWS Cloud.

Viewing MediaConnect offerings

On the console, you can view the offerings that are available in the current AWS Region.

To view a list of offerings (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Offerings**.

A list appears, showing all offerings that are available in the current Region.

Purchasing a MediaConnect offering

If your account doesn't already have an active reservation, you can purchase an offering to create a new reservation.

To purchase an offering (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Offerings**.

A list appears, showing all offerings that are available in the current Region.

 Note

If you have an active reservation, you can't purchase another offering.

3. Choose the reservation that you want to purchase, and choose **Purchase**.

The **Enter reservation details** page appears.

4. In the **Name** field, enter a name for the reservation. Reservation names must be unique within your account, including expired reservations.
5. For **Start date**, click the calendar icon and choose the date that you want the reservation to begin. You can choose a date as early as the first day of the current month and as recent as today.
6. In the **Start time** field, enter the time of day that you want the reservation to begin. If your start date occurs in the past, you can choose any time of day. If your start date occurs today, you can choose any time up to and including the current time.
7. Choose **Next**.

The **Review and purchase** page appears.

8. Review the details of the reservation. If you need to make changes to the reservation name or start, choose **Previous** and make the changes. If you need to choose a different offering, choose **Cancel** and start over.
9. Choose **Purchase**.

Security in AWS Elemental MediaConnect

Cloud security at AWS is the highest priority. As an AWS customer, you benefit from a data center and network architecture that is built to meet the requirements of the most security-sensitive organizations.

Security is a shared responsibility between AWS and you. The [shared responsibility model](#) describes this as security *of* the cloud and security *in* the cloud:

- **Security of the cloud** – AWS is responsible for protecting the infrastructure that runs AWS services in the AWS Cloud. AWS also provides you with services that you can use securely. Third-party auditors regularly test and verify the effectiveness of our security as part of the [AWS compliance programs](#). To learn about the compliance programs that apply to AWS Elemental MediaConnect, see [AWS Services in Scope by Compliance Program](#).
- **Security in the cloud** – Your responsibility is determined by the AWS service that you use. You are also responsible for other factors including the sensitivity of your data, your company's requirements, and applicable laws and regulations.

This documentation helps you understand how to apply the shared responsibility model when using AWS Elemental MediaConnect. The following topics show you how to configure AWS Elemental MediaConnect to meet your security and compliance objectives. You also learn how to use other AWS services that help you to monitor and secure your AWS Elemental MediaConnect resources.

Topics

- [Data protection for AWS Elemental MediaConnect](#)
- [Identity and access management for AWS Elemental MediaConnect](#)
- [Logging and monitoring](#)
- [Compliance validation for AWS Elemental MediaConnect](#)
- [Resilience in AWS Elemental MediaConnect](#)
- [Infrastructure security in AWS Elemental MediaConnect](#)

Data protection for AWS Elemental MediaConnect

You can protect your data using tools that are provided by AWS. AWS Elemental MediaConnect can decrypt your incoming video (flow source or router input) and encrypt your outgoing video (flow outputs, router outputs and entitlements).

You have three options for encrypting content in transit:

- **Static key encryption:** You can use this option to encrypt flow sources, flow outputs, router I/O and entitlements. You store your encryption key in AWS Secrets Manager, and then you give MediaConnect permission to obtain the encryption key from Secrets Manager.

Advantages: You have full control over storage of the encryption key for your account. The key is stored in AWS Secrets Manager, where you can access it any time.

Challenges: All parties (the owners of the flow or router input source, the flow, any flow or router outputs, and any entitlements) need the encryption key. If the content is shared using an entitlement, both the originator and the subscriber must store the encryption key in AWS Secrets Manager. If the encryption key changes, you must notify all parties of the new key.

- **Secure Packager and Encoder Key Exchange (SPEKE):** You can use this option to encrypt content that is sent through an entitlement. You partner with a conditional access (CA) platform key provider who manages and provides encryption keys. Then you give Amazon API Gateway permission to act as a proxy between the CA platform key provider and your AWS account.

Advantages: The content originator has full control over access to the encryption key. As the content originator, you partner with your CA platform key provider who manages the encryption key, but you don't handle the key itself and you don't share it with any other parties. Depending on the capabilities of your key provider, this option allows you to assign time limitations to an encryption key or revoke the key entirely. The subscriber doesn't need to set up encryption. This information is automatically provided through the entitlement.

Challenges: You must work with a third party (the key provider).

- **Secure Reliable Transport (SRT) password encryption:** You can use this option to encrypt flow sources, flow outputs and router I/O when using SRT protocols. SRT protocols are highly available, low-latency protocols that are suitable for long-distance applications. You store your encryption password in AWS Secrets Manager, and then you give MediaConnect permission to obtain the encryption password from Secrets Manager.

Advantages: Uses AES with key lengths of 128, 192 or 256 bits. You have full control over the storage of the encryption password. The password is stored in AWS Secrets Manager, where you can access it any time.

Challenges: Only usable with SRT protocols.

Note

Encryption is supported for entitlements, flow sources and outputs that use the Zixi or SRT protocols, and for router I/O that use the SRT protocol.

Topics

- [Static key encryption in AWS Elemental MediaConnect](#)
- [SPEKE encryption in AWS Elemental MediaConnect](#)
- [SRT password encryption in AWS Elemental MediaConnect](#)
- [Internetwork traffic privacy](#)

Static key encryption in AWS Elemental MediaConnect

You can use static key encryption to protect your sources, outputs, entitlements and router I/O. You store your encryption key in AWS Secrets Manager, and then you give MediaConnect permission to obtain the encryption key from Secrets Manager.

Topics

- [Key management for static key encryption](#)
- [Setting up static key encryption using AWS Elemental MediaConnect](#)

Key management for static key encryption

In AWS Elemental MediaConnect, you can use static key encryption to secure content in sources, outputs, entitlements and router I/O. To use this method, you store an encryption key as a *secret* in AWS Secrets Manager, and you give AWS Elemental MediaConnect permission to access the secret. Secrets Manager keeps your encryption key secure, allowing it be accessed only by entities that you specify in an AWS Identity and Access Management (IAM) policy.

With static key encryption, all participants (the owner of the flow source, the flow, and any flow outputs, entitlements and router I/O) need the encryption key. If the content is shared using an entitlement, both AWS account owners must store the encryption key in AWS Secrets Manager.

For more information, see [Setting up static key encryption](#).

Setting up static key encryption using AWS Elemental MediaConnect

Before you can create a flow or a router I/O with an encrypted source or an output, or an entitlement that uses static key encryption, you must perform the following steps:

Step 1 – Store your encryption key as a secret in AWS Secrets Manager.

Step 2 – Create an IAM policy that allows AWS Elemental MediaConnect to read the secret that you stored in AWS Secrets Manager.

Step 3 – Create an IAM role and attach the policy that you created in step 2. Next, set up AWS Elemental MediaConnect as a trusted entity that is allowed to assume this role and make requests on behalf of your account.

Note

MediaConnect supports encryption only for entitlements, flow sources and outputs that use the Zixi or SRT protocols, and for router I/O that use the SRT protocol. Your stored key in Secrets Manager for the Zixi protocol is a static key in a hexadecimal format. SRT uses a passkey for encryption.

Step 1: Store your encryption key in AWS Secrets Manager

To use static key encryption to encrypt your AWS Elemental MediaConnect content, you must use AWS Secrets Manager to create a secret that stores the encryption key. You must create the secret, and the resource (source, output, entitlement or router I/O) that uses the secret in the same AWS account. You can't share secrets across accounts.

Note

If you use MediaConnect to distribute video from one AWS Region to another, you must create two secrets (one secret in each Region).

To store an encryption key in Secrets Manager

1. Obtain the encryption key from the entity that manages the source.
2. Sign in to the AWS Secrets Manager console at <https://console.aws.amazon.com/secretsmanager/>.
3. On the **Store a new secret** page, for **Select secret type**, choose **Other type of secrets**.
4. For **Key/value pairs**, choose **Plaintext**.
5. Clear any text in the box and replace it with only the **value** of the encryption key. For hexadecimal keys, check the length of the key to ensure that it matches the length specified for the encryption type. For example, an AES-256 encryption key must have 64 digits, because each digit is 4 bits in size.
6. For **Select the encryption key**, keep the default set to **DefaultEncryptionKey**.
7. Choose **Next**.
8. For **Secret name**, specify a name for your secret that will help you identify it later. For example, **2018-12-01_baseball-game-source**.
9. Choose **Next**.
10. For **Configure automatic rotation** section, choose **Disable automatic rotation**.
11. Choose **Next**, and then choose **Store**.

The details page for your new secret appears, showing information such as the secret ARN.

12. Make a note of the secret ARN from Secrets Manager. You will need this information in the next procedure.

Step 2: Create an IAM policy to allow AWS Elemental MediaConnect to access your secret

In [step 1](#), you created a secret and stored it in AWS Secrets Manager. In this step, you create an IAM policy that allows AWS Elemental MediaConnect to read the secret that you stored.

To create an IAM policy that allows MediaConnect to access your secret

1. Open the IAM console at <https://console.aws.amazon.com/iam/>.
2. In the navigation pane of the IAM console, choose **Policies**.
3. Choose **Create policy**, and then choose the **JSON** tab.
4. Enter a policy that uses the following format:

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "secretsmanager:GetResourcePolicy",
        "secretsmanager:GetSecretValue",
        "secretsmanager:DescribeSecret",
        "secretsmanager:ListSecretVersionIds"
      ],
      "Resource": [
        "arn:aws:secretsmanager:us-west-2:111122223333:secret:aes256-7g8H9i"
      ]
    }
  ]
}
```

In the Resource section, each line represents the ARN of a different secret that you created. For more examples, see [Policy examples for accessing MediaConnect encryption keys in Secrets Manager](#).

5. Choose **Review policy**.
6. For **Name**, enter a name for your policy such as **SecretsManagerForMediaConnect**.
7. Choose **Create policy**.

Step 3: Create an IAM role with a trusted relationship

In [step 2](#), you created an IAM policy that allows read access to the secret that you stored in AWS Secrets Manager. In this step, you create an IAM role and assign the policy to that role. Then you define AWS Elemental MediaConnect as a trusted entity that can assume the role. This allows MediaConnect to have read access to your secret.

To create a role with a trusted relationship

1. In the navigation pane of the IAM console, choose **Roles**.

2. On the **Role** page, choose **Create role**.
3. On the **Create role** page, for **Select type of trusted entity**, choose **AWS service** (the default).
4. For **Choose the service that will use this role**, choose **EC2**.

You choose EC2 because AWS Elemental MediaConnect is not currently included in this list. Choosing EC2 lets you create a role. In a later step, you change this role to include MediaConnect instead of EC2.

5. Choose **Next: Permissions**.
6. For **Attach permissions policies**, enter the name of the policy that you created in [step 2](#), such as **SecretsManagerForMediaConnect**.
7. For **SecretsManagerReadWrite**, select the check box, and then choose **Next: Review**.
8. For **Role name**, enter a name. We highly recommend that you don't use the name **MediaConnectAccessRole** because it is reserved. Instead, use a name that includes **MediaConnect** and describes this role's purpose, such as **MediaConnect-ASM**.
9. For **Role description**, replace the default text with a description that will help you remember the purpose of this role. For example, **Allows MediaConnect to view secrets stored in AWS Secrets Manager**.
10. Choose **Create role**.
11. In the confirmation message that appears across the top of your page, choose the name of the role that you just created.
12. Choose **Trust relationships**, and then choose **Edit trust policy**.
13. in the **Edit trust policy** window, make the following changes to the JSON:
 - For **Service**, change `ec2.amazonaws.com` to `mediaconnect.amazonaws.com`
 - For added security, define specific conditions for the trust policy. This will limit MediaConnect to only using resources in your account. You do this by using a global condition such as the **Account ID**, the **flow ARN**, or both. See the following example of the conditional trust policy. For more information about the security benefits of the global conditions, see [Cross-service confused deputy prevention](#).

 Note

The following example uses both the **Account ID** and **flow ARN** conditions. Your policy will look different if you do not use both conditions. If you don't know the full ARN of the flow or if you are specifying multiple flows, use the `aws:SourceArn`

global context condition key with wildcard characters (*) for the unknown portions of the ARN. For example, `arn:aws:mediaconnect:*:111122223333:*`.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Principal": {
        "Service": "mediaconnect.amazonaws.com"
      },
      "Action": "sts:AssumeRole",
      "Condition": {
        "StringEquals": {
          "aws:SourceAccount": "111122223333"
        },
        "ArnLike": {
          "aws:SourceArn": "arn:aws:mediaconnect:us-
west-2:111122223333:flow:*:flow-name"
        }
      }
    }
  ]
}
```

14. Choose **Update Trust Policy**.

15. On the **Summary** page, make a note of the value for **Role ARN**. It looks like this:

`arn:aws:iam::111122223333:role/MediaConnectASM`.

SPEKE encryption in AWS Elemental MediaConnect

You can use Secure Packager and Encoder Key Exchange (SPEKE) with AWS Elemental MediaConnect to encrypt an [entitlement](#). This gives you, as the content originator, full control of permissions for this content. This usage is a customization of the SPEKE cloud-based architecture described in the [SPEKE documentation](#).


Topics

- [Key management for SPEKE](#)
- [Setting up SPEKE encryption using AWS Elemental MediaConnect](#)

Key management for SPEKE

With a SPEKE implementation, a conditional access (CA) system provides keys to AWS Elemental MediaConnect for content encryption and decryption. API Gateway acts as a proxy for the communication between the service and the CA platform key provider. Each AWS Elemental MediaConnect flow must reside in the same AWS Region as its API Gateway proxy.

The following illustration shows how AWS Elemental MediaConnect obtains the encryption or decryption key using SPEKE. In the originator's flow, the service obtains the encryption key and uses it to encrypt the content before sending it through the entitlement. In the subscriber's flow, the service obtains the decryption key when the content is received from the entitlement.

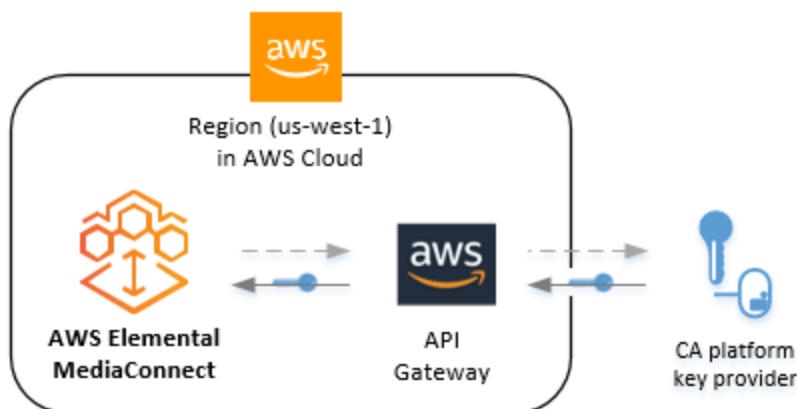

Legend

- > Step 1. The service requests the encryption key, through API Gateway.
- ←● Step 2. The CA platform key provider returns the encryption key to the service, through API Gateway.

These are the main services and components:

- **AWS Elemental MediaConnect** – Provides and controls the encryption setup for the flow. AWS Elemental MediaConnect obtains the encryption keys from the CA platform key provider through Amazon API Gateway. Using the encryption keys, AWS Elemental MediaConnect encrypts the content (for the originator's flow) or decrypts the content (for the subscriber's flow).
- **API Gateway** – Manages customer-trusted roles and proxy communication between the encryptor and the key provider. API Gateway provides logging capabilities and lets customers

control their relationships with the encryptor and with the CA platform. The API Gateway must reside in the same AWS Region as the encryptor.

- **CA platform key provider** – Provides encryption and decryption keys to AWS Elemental MediaConnect through a SPEKE-compliant API.

For more information, see [Setting up SPEKE encryption](#).

Setting up SPEKE encryption using AWS Elemental MediaConnect

Before you can grant an entitlement that uses SPEKE encryption, you must perform the following steps:

Step 1. – Get on board with a conditional access (CA) platform key provider who will manage your encryption key. During this process, you create an API in Amazon API Gateway that sends requests on behalf of AWS Elemental MediaConnect to the key provider.

Step 2 – Create an IAM policy that allows the API that you created in step 1 to act as a proxy to make requests to the key provider.

Step 3. – Create an IAM role and attach the policy that you created in step 2. Next, set up AWS Elemental MediaConnect as a trusted entity that is allowed to assume this role and access the API Gateway endpoint on your behalf.

Step 1: Get on board with a CA provider

To use SPEKE with AWS Elemental MediaConnect, you must have a CA platform key provider. The following AWS partners provide conditional access (CA) solutions for the MediaConnect customization of SPEKE:

- [Verimatrix](#)

If you are a content originator, contact your CA platform key provider for assistance with the onboarding process. With the help of your CA platform key provider, you manage who gets access to which content.

During the onboarding process, make a note of the following:

- **ARN of the POST method request** – The Amazon Resource Name (ARN) that AWS assigns to the request that you create in API Gateway.

- **Constant initialization vector (optional)** – A 128-bit, 16-byte hex value represented by a 32-character string, to be used with the key for encrypting content.
- **Device ID** – A unique identifier for each device that you configure with the key provider. Each device represents a different recipient for your content.
- **Resource ID** – A unique identifier that you create for each piece of content that you configure with the key provider.
- **URL** – The URL assigned by AWS for the API that you create in Amazon API Gateway.

You need these values later, when you configure the [entitlement](#) in MediaConnect.

Step 2: Create an IAM policy to allow API Gateway to act as your proxy

In [step 1](#), you worked with a CA platform key provider who manages your encryption key. In this step, you create an IAM policy that allows API Gateway to make requests on your behalf. API Gateway acts as a proxy for communication between your account and the key provider.

To create an IAM policy for an API Gateway proxy

1. In the navigation pane of the IAM console, choose **Policies**.
2. Choose **Create policy**, and then choose the **JSON** tab.
3. Enter a policy that uses the following format:

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "execute-api:Invoke"
      ],
      "Resource": [
        "arn:aws:execute-api:us-west-2:111122223333:1abcdefghi/*/POST/*"
      ]
    }
  ]
}
```

In the Resource section, replace the sample Amazon Resource Name (ARN) with the ARN of the POST method request that you created in API Gateway with the CA platform key provider.

4. Choose **Review policy**.
5. For **Name**, enter **APIGateway-Proxy-Access**.
6. Choose **Create policy**.

Step 3: Create an IAM role with a trusted relationship

In [step 2](#), you created an **APIGateway-Proxy-Access** policy that allows API Gateway to act as a proxy and make requests on your behalf. In this step, you create an IAM role and attach the following permissions:

- The **APIGateway-Proxy-Access** policy allows Amazon API Gateway to act as a proxy on your behalf so that it can make requests between your account and the CA platform key provider. This is the policy you created in step 1.
- A **trust relationship** policy allows AWS Elemental MediaConnect to assume the role on your behalf. You will create this policy as part of the following procedure.

To create an IAM role with a trusted relationship

1. In the navigation pane of the IAM console, choose **Roles**.
2. On the **Role** page, choose **Create role**.
3. On the **Create role** page, for **Select type of trusted entity**, choose **AWS service** (the default).
4. For **Choose the service that will use this role**, choose **EC2**.

You choose EC2 because AWS Elemental MediaConnect is not currently included in this list. Choosing EC2 lets you create a role. In a later step, you change this role to include MediaConnect instead of EC2.

5. Choose **Next: Permissions**.
6. For **Filter policies**, choose **Customer managed**.
7. Select the check box next to **APIGateway-Proxy-Access**, and then choose **Next: Tags**.
8. Enter tag values (optional), and then choose **Next: Review**.
9. For **Role name**, enter a name such as **SpekeAccess**.

10. For **Role description**, replace the default text with a description that will help you remember the purpose of this role. For example, **Allows AWS Elemental MediaConnect to talk to API Gateway on my behalf.**
11. Choose **Create role**.
12. In the confirmation message that appears across the top of your page, choose the name of the role that you just created.
13. Choose **Trust relationships**, and then choose **Edit Trust Relationship**.
14. For **Policy Document**, change the policy to look like this:

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Principal": {
        "Service": "mediacnect.amazonaws.com"
      },
      "Action": "sts:AssumeRole"
    }
  ]
}
```

15. Choose **Update Trust Policy**.
16. On the **Summary** page, make a note of the value for **Role ARN**. It looks like this:
arn:aws:iam::111122223333:role/SpekeAccess.

SRT password encryption in AWS Elemental MediaConnect

You can use the Secure Reliable Transport (SRT) password encryption option to encrypt sources, outputs and router I/O when using the SRT protocols. SRT protocols are a highly available, low-latency protocol suitable for long-distance applications. You store your encryption password in AWS Secrets Manager, and then you give MediaConnect permission to obtain the encryption password from Secrets Manager.

Topics

- [Password management for SRT password encryption](#)
- [Setting up SRT password encryption using AWS Elemental MediaConnect](#)

Password management for SRT password encryption

In AWS Elemental MediaConnect, you can use SRT password encryption to secure content in sources, outputs and router I/O. To use this method, you store an SRT password as a *secret* in AWS Secrets Manager, and you give AWS Elemental MediaConnect permission to access the secret. Secrets Manager keeps your password secure, allowing it be accessed only by entities that you specify in an AWS Identity and Access Management (IAM) policy.

With SRT password encryption, all participants (the owner of the source, the flow, the outputs and the router I/O) need the SRT password.

For more information, see [Setting up SRT password encryption](#).

Setting up SRT password encryption using AWS Elemental MediaConnect

Before you can create a flow or a router I/O that uses SRT password encryption, you must perform the following steps:

[Step 1](#) – Store your SRT password as a secret in AWS Secrets Manager.

[Step 2](#) – Create an IAM policy that allows AWS Elemental MediaConnect to read the secret that you stored in AWS Secrets Manager.

[Step 3](#) – Create an IAM role and attach the policy that you created in step 2. Next, set up AWS Elemental MediaConnect as a trusted entity that is allowed to assume this role and make requests on behalf of your account.

Step 1: Store your encryption password in AWS Secrets Manager

To use SRT password encryption to encrypt your AWS Elemental MediaConnect content, you must use AWS Secrets Manager to create a secret that stores the password. You must create the secret, and the resource (source, output or router I/O) that uses the secret in the same AWS account. You can't share secrets across accounts.

Note

If you distribute video from one AWS Region to another, you must create two secrets (one secret in each Region).

If you are creating a new SRT password to encrypt a flow or a router output, we recommend the following password policy:

- Minimum password length of 10 characters and a maximum length of 80 characters
- Minimum of three of the following mix of character types: uppercase, lowercase, numbers, and ! @ # \$ % ^ & * () _ + - = [] { } | ' symbols
- Not be identical to your AWS account name or email address

To store a password in Secrets Manager

1. Sign in to the AWS Secrets Manager console at <https://console.aws.amazon.com/secretsmanager/>.
2. On the **Store a new secret** page, for **Select secret type**, choose **Other type of secrets**.
3. For **Key/value pairs**, choose **Plaintext**.
4. Clear any text in the box and replace it with only the **value** of the SRT password.
5. For **Encryption key**, keep the default set to **aws/secretsmanager**.
6. Choose **Next**.
7. For **Secret name**, specify a name for your secret that will help you identify it later. For example, **2018-12-01_baseball-game-source**.
8. Choose **Next**.
9. For the **Configure automatic rotation** section, leave **Automatic rotation** off.
10. Choose **Next**, and then choose **Store**. On the next screen, select the name of the secret you created.

The details page for your new secret appears, showing information such as the secret ARN.

11. Make a note of the secret ARN from Secrets Manager. You will need this information in the next procedure.

Step 2: Create an IAM policy to allow AWS Elemental MediaConnect to access your secret

In [step 1](#), you created a secret and stored it in AWS Secrets Manager. In this step, you create an IAM policy that allows AWS Elemental MediaConnect to read the secret that you stored.

To create an IAM policy that allows MediaConnect to access your secret

1. Open the IAM console at <https://console.aws.amazon.com/iam/>.
2. In the navigation pane of the IAM console, choose **Policies**.
3. Choose **Create policy**, and then choose the **JSON** tab.
4. Enter a policy that uses the following format:

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "secretsmanager:GetResourcePolicy",
        "secretsmanager:GetSecretValue",
        "secretsmanager:DescribeSecret",
        "secretsmanager:ListSecretVersionIds"
      ],
      "Resource": [
        "arn:aws:secretsmanager:us-west-2:111122223333:secret:aes256-7g8H9i"
      ]
    }
  ]
}
```

In the Resource section, each line represents the ARN of a different secret that you created. Enter the secret ARN from the previous procedure. Choose **Next: Tags**.

5. Choose **Next: Review**.
6. For **Name**, enter a name for your policy such as **SecretsManagerForMediaConnect**.
7. Choose **Create policy**.

Step 3: Create an IAM role with a trusted relationship

In [step 2](#), you created an IAM policy that allows read access to the secret that you stored in AWS Secrets Manager. In this step, you create an IAM role and assign the policy to that role. Then you define AWS Elemental MediaConnect as a trusted entity that can assume the role. This allows MediaConnect to have read access to your secret.

To create a role with a trusted relationship

1. In the navigation pane of the IAM console, choose **Roles**.
2. On the **Role** page, choose **Create role**.
3. On the **Create role** page, for **Select type of trusted entity**, choose **AWS service** (the default).
4. For **Choose the service that will use this role**, choose **EC2**.

You choose EC2 because AWS Elemental MediaConnect is not currently included in this list. Choosing EC2 lets you create a role. In a later step, you change this role to include MediaConnect instead of EC2.

5. Choose **Next: Permissions**.
6. For **Attach permissions policies**, enter the name of the policy that you created in [step 2](#), such as **SecretsManagerForMediaConnect**.
7. For **SecretsManagerForMediaConnect**, select the check box, and then choose **Next**.
8. For **Role name**, enter a name. We highly recommend that you don't use the name **MediaConnectAccessRole** because it is reserved. Instead, use a name that includes MediaConnect and describes this role's purpose, such as **MediaConnect-ASM**.
9. For **Role description**, replace the default text with a description that will help you remember the purpose of this role. For example, **Allows MediaConnect to view secrets stored in AWS Secrets Manager**.
10. Choose **Create role**.
11. In the confirmation message that appears across the top of your page, choose the name of the role that you just created.
12. Choose **Trust relationships**, and then choose **Edit trust policy**.
13. For **Edit trust policy**, change `ec2.amazonaws.com` to `mediaconnect.amazonaws.com`.

The policy document should now look like this:

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Principal": {
        "Service": "mediacconnect.amazonaws.com"
      },
      "Action": "sts:AssumeRole"
    }
  ]
}
```

14. Choose **Update policy**.
15. On the **Summary** page, make a note of the value for **Role ARN**. It looks like this:
arn:aws:iam::111122223333:role/MediaConnectASM.

Internetwork traffic privacy

To set up a private connection between your Amazon VPC and your corporate network, you can choose to set up either an IPsec VPN connection over the internet or a private physical connection using Direct Connect connection. Direct Connect enables you to establish a private virtual interface from your on-premises network directly to your Amazon VPC, providing you with a private, high-bandwidth network connection between your network and your VPC. With multiple virtual interfaces, you can establish private connectivity to multiple VPCs while maintaining network isolation. For more information, see [What is AWS Site-to-Site VPN?](#) and [What is Direct Connect?](#)

To route traffic directly between MediaConnect and your corporate network via a virtual private cloud (VPC)

1. Set up a private connection between your Amazon VPC and your corporate network. You can choose between an IPsec VPN connection over the internet or a private physical connection using Direct Connect connection.
2. [Create a flow that uses a VPC source](#). During this process, you add a VPC *interface* to your flow to establish the initial connection between your VPC and your flow. You also specify that same VPC interface as the source for the new flow.

Note

If your flow already exists, you can update the flow to [add a VPC interface](#) and then [add another source that uses that VPC interface](#).

Identity and access management for AWS Elemental MediaConnect

AWS Identity and Access Management (IAM) is an AWS service that helps an administrator securely control access to AWS resources. IAM administrators control who can be *authenticated* (signed in) and *authorized* (have permissions) to use MediaConnect resources. IAM is an AWS service that you can use with no additional charge.

Audience

How you use AWS Identity and Access Management (IAM) differs based on your role:

- **Service user** - request permissions from your administrator if you cannot access features (see [Troubleshooting AWS Elemental MediaConnect identity and access](#))
- **Service administrator** - determine user access and submit permission requests (see [How AWS Elemental MediaConnect works with IAM](#))
- **IAM administrator** - write policies to manage access (see [AWS Elemental MediaConnect identity-based policy examples](#))

Authenticating with identities

Authentication is how you sign in to AWS using your identity credentials. You must be authenticated as the AWS account root user, an IAM user, or by assuming an IAM role.

You can sign in as a federated identity using credentials from an identity source like AWS IAM Identity Center (IAM Identity Center), single sign-on authentication, or Google/Facebook credentials. For more information about signing in, see [How to sign in to your AWS account](#) in the *AWS Sign-In User Guide*.

For programmatic access, AWS provides an SDK and CLI to cryptographically sign requests. For more information, see [AWS Signature Version 4 for API requests](#) in the *IAM User Guide*.

AWS account root user

When you create an AWS account, you begin with one sign-in identity called the AWS account *root user* that has complete access to all AWS services and resources. We strongly recommend that you don't use the root user for everyday tasks. For tasks that require root user credentials, see [Tasks that require root user credentials](#) in the *IAM User Guide*.

IAM users and groups

An [IAM user](#) is an identity with specific permissions for a single person or application. We recommend using temporary credentials instead of IAM users with long-term credentials. For more information, see [Require human users to use federation with an identity provider to access AWS using temporary credentials](#) in the *IAM User Guide*.

An [IAM group](#) specifies a collection of IAM users and makes permissions easier to manage for large sets of users. For more information, see [Use cases for IAM users](#) in the *IAM User Guide*.

IAM roles

An [IAM role](#) is an identity with specific permissions that provides temporary credentials. You can assume a role by [switching from a user to an IAM role \(console\)](#) or by calling an AWS CLI or AWS API operation. For more information, see [Methods to assume a role](#) in the *IAM User Guide*.

IAM roles are useful for federated user access, temporary IAM user permissions, cross-account access, cross-service access, and applications running on Amazon EC2. For more information, see [Cross account resource access in IAM](#) in the *IAM User Guide*.

Managing access using policies

You control access in AWS by creating policies and attaching them to AWS identities or resources. A policy defines permissions when associated with an identity or resource. AWS evaluates these policies when a principal makes a request. Most policies are stored in AWS as JSON documents. For more information about JSON policy documents, see [Overview of JSON policies](#) in the *IAM User Guide*.

Using policies, administrators specify who has access to what by defining which **principal** can perform **actions** on what **resources**, and under what **conditions**.

By default, users and roles have no permissions. An IAM administrator creates IAM policies and adds them to roles, which users can then assume. IAM policies define permissions regardless of the method used to perform the operation.

Identity-based policies

Identity-based policies are JSON permissions policy documents that you attach to an identity (user, group, or role). These policies control what actions identities can perform, on which resources, and under what conditions. To learn how to create an identity-based policy, see [Define custom IAM permissions with customer managed policies](#) in the *IAM User Guide*.

Identity-based policies can be *inline policies* (embedded directly into a single identity) or *managed policies* (standalone policies attached to multiple identities). To learn how to choose between managed and inline policies, see [Choose between managed policies and inline policies](#) in the *IAM User Guide*.

Other policy types

AWS supports additional policy types that can set the maximum permissions granted by more common policy types:

- **Permissions boundaries** – Set the maximum permissions that an identity-based policy can grant to an IAM entity. For more information, see [Permissions boundaries for IAM entities](#) in the *IAM User Guide*.
- **Service control policies (SCPs)** – Specify the maximum permissions for an organization or organizational unit in AWS Organizations. For more information, see [Service control policies](#) in the *AWS Organizations User Guide*.
- **Resource control policies (RCPs)** – Set the maximum available permissions for resources in your accounts. For more information, see [Resource control policies \(RCPs\)](#) in the *AWS Organizations User Guide*.
- **Session policies** – Advanced policies passed as a parameter when creating a temporary session for a role or federated user. For more information, see [Session policies](#) in the *IAM User Guide*.

Multiple policy types

When multiple types of policies apply to a request, the resulting permissions are more complicated to understand. To learn how AWS determines whether to allow a request when multiple policy types are involved, see [Policy evaluation logic](#) in the *IAM User Guide*.

Learn more

For more information about identity and access management for MediaConnect, continue to the following pages:

- [How MediaConnect works with IAM](#)
- [Identity-based policy examples](#)
- [Resource-based policy examples](#)
- [Policy examples for secrets in AWS Secrets Manager](#)
- [Troubleshooting](#)

How AWS Elemental MediaConnect works with IAM

Before you use IAM to manage access to MediaConnect, you should understand what IAM features are available to use with MediaConnect. To get a high-level view of how MediaConnect and other AWS services work with IAM, see [AWS Services That Work with IAM](#) in the *IAM User Guide*.

Topics

- [MediaConnect identity-based policies](#)
- [MediaConnect resource-based policies](#)
- [Authorization based on MediaConnect tags](#)
- [MediaConnect IAM roles](#)

MediaConnect identity-based policies

With IAM identity-based policies, you can specify allowed or denied actions and resources as well as the conditions under which actions are allowed or denied. MediaConnect supports specific actions, resources, and condition keys. To learn about all of the elements that you use in a JSON policy, see [IAM JSON Policy Elements Reference](#) in the *IAM User Guide*.

Actions

Administrators can use AWS JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The **Action** element of a JSON policy describes the actions that you can use to allow or deny access in a policy. Include actions in a policy to grant permissions to perform the associated operation.

Policy actions in MediaConnect use the following prefix before the action: `mediaconnect:`. For example, to grant someone permission to view a list of entitlements with the MediaConnect `ListEntitlements` API operation, you include the `mediaconnect:ListEntitlements` action in their policy. Policy statements must include either an **Action** or **NotAction** element. MediaConnect defines its own set of actions that describe tasks that you can perform with this service.

To specify multiple actions in a single statement, separate them with commas as follows:

```
"Action": [  
    "mediaconnect:action1",  
    "mediaconnect:action2"
```

You can specify multiple actions using wildcards (*). For example, to specify all actions that begin with the word `List`, include the following action:

```
"Action": "mediaconnect:List*"
```

To see a list of MediaConnect actions, see [Actions Defined by AWS Elemental MediaConnect](#) in the *IAM User Guide*.

Resources

Administrators can use AWS JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The **Resource** JSON policy element specifies the object or objects to which the action applies. As a best practice, specify a resource using its [Amazon Resource Name \(ARN\)](#). For actions that don't support resource-level permissions, use a wildcard (*) to indicate that the statement applies to all resources.

```
"Resource": "*"
```

MediaConnect has the following ARNs:


```
arn:${Partition}:mediaconnect:${Region}:${Account}:entitlement:${resourceID}:  
${resourceName}  
arn:${Partition}:mediaconnect:${Region}:${Account}:flow:${resourceID}:${resourceName}  
arn:${Partition}:mediaconnect:${Region}:${Account}:output:${resourceID}:${resourceName}  
arn:${Partition}:mediaconnect:${Region}:${Account}:source:${resourceID}:${resourceName}
```

For more information about the format of ARNs, see [Amazon Resource Names \(ARNs\) and AWS Service Namespaces](#).

For example, to specify the 1-23aBC45dEF67hiJ8-12AbC34DE5fG flow in your statement, use the following ARN:

```
"Resource": "arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame"
```

To specify all flows that belong to a specific account, use the wildcard (*):

```
"Resource": "arn:aws:mediaconnect:us-east-1:111122223333:flow:*"
```

Some MediaConnect actions, such as those for creating resources, can't be performed on a specific resource. In those cases, you must use the wildcard (*).

```
"Resource": "*"
```

Many MediaConnect API actions involve multiple resources. For example, `RemoveFlowOutput` removes an output from a particular flow, so an IAM user must have permissions for the flow and the output. To specify multiple resources in a single statement, separate the ARNs with commas.

```
"Resource": [  
    "resource1",  
    "resource2"
```

To see a list of MediaConnect resource types and their ARNs, see [Resources Defined by AWS Elemental MediaConnect](#) in the *IAM User Guide*. To learn with which actions you can specify the ARN of each resource, see [Actions Defined by AWS Elemental MediaConnect](#).

Condition keys

Administrators can use AWS JSON policies to specify who has access to what. That is, which **principal** can perform **actions** on what **resources**, and under what **conditions**.

The **Condition** element specifies when statements execute based on defined criteria. You can create conditional expressions that use [condition operators](#), such as equals or less than, to match the condition in the policy with values in the request. To see all AWS global condition keys, see [AWS global condition context keys](#) in the *IAM User Guide*.

Examples

To view examples of MediaConnect identity-based policies, see [AWS Elemental MediaConnect identity-based policy examples](#).

MediaConnect resource-based policies

AWS Elemental MediaConnect does not support resource-based policies.

Authorization based on MediaConnect tags

AWS Elemental MediaConnect does not support tagging resources or controlling access based on tags.

MediaConnect IAM roles

An [IAM role](#) is an entity within your AWS account that has specific permissions.

Using temporary credentials with MediaConnect

You can use temporary credentials to sign in with federation, assume an IAM role, or to assume a cross-account role. You obtain temporary security credentials by calling AWS STS API operations such as [AssumeRole](#) or [GetFederationToken](#).

MediaConnect supports using temporary credentials.

Service-linked roles

[Service-linked roles](#) allow AWS services to access resources in other services to complete an action on your behalf. Service-linked roles appear in your IAM account and are owned by the service. An IAM administrator can view but not edit the permissions for service-linked roles.

MediaConnect does not support service-linked roles.

Service roles

This feature allows a service to assume a [service role](#) on your behalf. This role allows the service to access resources in other services to complete an action on your behalf. Service roles appear in your

IAM account and are owned by the account. This means that an IAM administrator can change the permissions for this role. However, doing so might break the functionality of the service.

MediaConnect does not support service roles.

AWS Elemental MediaConnect identity-based policy examples

By default, IAM users and roles don't have permission to create or modify MediaConnect resources. They also can't perform tasks using the AWS Management Console, AWS CLI, or AWS API. An IAM administrator must create IAM policies that grant users and roles permission to perform specific API operations on the specified resources they need. The administrator must then attach those policies to the IAM users or groups that require those permissions.

To learn how to create an IAM identity-based policy using these example JSON policy documents, see [Creating Policies on the JSON Tab](#) in the *IAM User Guide*.

Policy best practices

Identity-based policies determine whether someone can create, access, or delete MediaConnect resources in your account. These actions can incur costs for your AWS account. When you create or edit identity-based policies, follow these guidelines and recommendations:

- **Get started with AWS managed policies and move toward least-privilege permissions** – To get started granting permissions to your users and workloads, use the *AWS managed policies* that grant permissions for many common use cases. They are available in your AWS account. We recommend that you reduce permissions further by defining AWS customer managed policies that are specific to your use cases. For more information, see [AWS managed policies](#) or [AWS managed policies for job functions](#) in the *IAM User Guide*.
- **Apply least-privilege permissions** – When you set permissions with IAM policies, grant only the permissions required to perform a task. You do this by defining the actions that can be taken on specific resources under specific conditions, also known as *least-privilege permissions*. For more information about using IAM to apply permissions, see [Policies and permissions in IAM](#) in the *IAM User Guide*.
- **Use conditions in IAM policies to further restrict access** – You can add a condition to your policies to limit access to actions and resources. For example, you can write a policy condition to specify that all requests must be sent using SSL. You can also use conditions to grant access to service actions if they are used through a specific AWS service, such as CloudFormation. For more information, see [IAM JSON policy elements: Condition](#) in the *IAM User Guide*.

- **Use IAM Access Analyzer to validate your IAM policies to ensure secure and functional permissions** – IAM Access Analyzer validates new and existing policies so that the policies adhere to the IAM policy language (JSON) and IAM best practices. IAM Access Analyzer provides more than 100 policy checks and actionable recommendations to help you author secure and functional policies. For more information, see [Validate policies with IAM Access Analyzer](#) in the *IAM User Guide*.
- **Require multi-factor authentication (MFA)** – If you have a scenario that requires IAM users or a root user in your AWS account, turn on MFA for additional security. To require MFA when API operations are called, add MFA conditions to your policies. For more information, see [Secure API access with MFA](#) in the *IAM User Guide*.

For more information about best practices in IAM, see [Security best practices in IAM](#) in the *IAM User Guide*.

Using the MediaConnect console

To access the AWS Elemental MediaConnect console, you must have a minimum set of permissions. These permissions must allow you to list and view details about the MediaConnect resources in your AWS account. If you create an identity-based policy that is more restrictive than the minimum required permissions, the console won't function as intended for entities (IAM users or roles) with that policy.

To ensure that those entities can still use the MediaConnect console, also attach the following AWS managed policy to the entities. For more information, see [Adding Permissions to a User](#) in the *IAM User Guide*.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Action": [
        "mediaconnect:*"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
```

```

    "Action": [
      "ec2:DescribeAvailabilityZones",
      "ec2:DescribeSecurityGroups",
      "ec2:DescribeSubnets",
      "ec2:DescribeNetworkInterfaces",
      "ec2:DescribeVpcs",
      "ec2:CreateNetworkInterface",
      "ec2:CreateNetworkInterfacePermission",
      "ec2>DeleteNetworkInterface",
      "ec2>DeleteNetworkInterfacePermission"
    ],
    "Effect": "Allow",
    "Resource": "*"
  },
  {
    "Action": [
      "cloudwatch:GetMetricData"
    ],
    "Effect": "Allow",
    "Resource": "*"
  },
  {
    "Action": [
      "iam:PassRole"
    ],
    "Effect": "Allow",
    "Resource": "*",
    "Condition": {
      "StringLike": {
        "iam:PassedToService": "mediaconnect.amazonaws.com"
      }
    }
  }
]
}

```

You don't need to allow minimum console permissions for users that are making calls only to the AWS CLI or the AWS API. Instead, allow access to only the actions that match the API operation that you're trying to perform.

Allow users to view their own permissions

This example shows how you might create a policy that allows IAM users to view the inline and managed policies that are attached to their user identity. This policy includes permissions to complete this action on the console or programmatically using the AWS CLI or AWS API.

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Sid": "ViewOwnUserInfo",
      "Effect": "Allow",
      "Action": [
        "iam:GetUserPolicy",
        "iam:ListGroupsWithUser",
        "iam:ListAttachedUserPolicies",
        "iam:ListUserPolicies",
        "iam:GetUser"
      ],
      "Resource": ["arn:aws:iam::*:user/${aws:username}"]
    },
    {
      "Sid": "NavigateInConsole",
      "Effect": "Allow",
      "Action": [
        "iam:GetGroupPolicy",
        "iam:GetPolicyVersion",
        "iam:GetPolicy",
        "iam:ListAttachedGroupPolicies",
        "iam:ListGroupPolicies",
        "iam:ListPolicyVersions",
        "iam:ListPolicies",
        "iam:ListUsers"
      ],
      "Resource": "*"
    }
  ]
}
```

AWS Elemental MediaConnect resource-based policy examples

To access the AWS Elemental MediaConnect console, you must have a minimum set of permissions that allows you to list and view details about the MediaConnect resources in your AWS account. The IAM policies in this section show examples of policies that allow specific actions on resources in AWS Elemental MediaConnect.

Allow read access to all resources in AWS Elemental MediaConnect

To access the AWS Elemental MediaConnect console, you must have a policy that defines which actions you are allowed to take on MediaConnect resources in your AWS account. The IAM policy below provides the following permissions:

- The section for the `mediaconnect:List*` and `mediaconnect:Describe*` actions allow read-only access to all resources that you create in AWS Elemental MediaConnect.
- The section for the `ec2:DescribeAvailabilityZones` action allows the service to obtain information about which Availability Zone the flow is in. This portion of the policy is required.
- The section for the `cloudwatch:GetMetricData` action allows the service to obtain metrics from Amazon CloudWatch. This portion of the policy is required.
- The section for the `iam:PassRole` action allows IAM to *pass* a role to AWS Elemental MediaConnect the service to communicate with IAM in order to assume a role on behalf of the service. This allows the service to assume the role later and perform actions on your behalf. This portion of the policy is required.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Action": [
        "mediaconnect:List*",
        "mediaconnect:Describe*",
        "mediaconnect:Get*"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
  ],
}
```

```

    {
      "Action": [
        "ec2:DescribeAvailabilityZones"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "cloudwatch:GetMetricData"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "iam:PassRole"
      ],
      "Effect": "Allow",
      "Resource": "*",
      "Condition": {
        "StringLike": {
          "iam:PassedToService": "mediaconnect.amazonaws.com"
        }
      }
    }
  ]
}

```

Allow all actions on all AWS Elemental MediaConnect resources

Every user of AWS Elemental MediaConnect must have a policy that defines permissions on AWS Elemental MediaConnect resources. The IAM policy below provides the following permissions:

- The section for the `mediaconnect:*` action allows all actions on all resources that you create in AWS Elemental MediaConnect.
- The section for the `ec2:DescribeAvailabilityZones` action allows the service to obtain information about which Availability Zone the flow is in. This portion of the policy is required.
- The section for the `cloudwatch:GetMetricData` action allows the service to obtain metrics from Amazon CloudWatch. This portion of the policy is required.

- The section for the `iam:PassRole` action allows IAM to *pass* a role to AWS Elemental MediaConnect the service to communicate with IAM in order to assume a role on behalf of the service. This allows the service to assume the role later and perform actions on your behalf. This portion of the policy is required.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Action": [
        "mediacconnect:*"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "ec2:DescribeAvailabilityZones"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "cloudwatch:GetMetricData"
      ],
      "Effect": "Allow",
      "Resource": "*"
    },
    {
      "Action": [
        "iam:PassRole"
      ],
      "Effect": "Allow",
      "Resource": "*",
      "Condition": {
        "StringLike": {
          "iam:PassedToService": "mediacconnect.amazonaws.com"
        }
      }
    }
  ]
}
```

```

    }
  }
]
}

```

Allow AWS Elemental MediaConnect to create and manage network interfaces in your VPC

This example IAM policy allows AWS Elemental MediaConnect to create and manage network interfaces in your VPC so that content can flow from your VPC to MediaConnect. If you want to connect your VPC to your flow, you must set up this policy.

- The section for the `ec2:` actions allows MediaConnect to create, read, update, and delete network interfaces in your VPC. This portion of the policy is required.

JSON

```

{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Action": [
        "ec2:DescribeNetworkInterfaces",
        "ec2:DescribeSecurityGroups",
        "ec2:DescribeSubnets",
        "ec2:CreateNetworkInterface",
        "ec2:CreateNetworkInterfacePermission",
        "ec2>DeleteNetworkInterface",
        "ec2>DeleteNetworkInterfacePermission"
      ],
      "Effect": "Allow",
      "Resource": "*"
    }
  ]
}

```

Policy examples for accessing MediaConnect encryption keys in Secrets Manager

You can create IAM policies that allow AWS Elemental MediaConnect to read encryption keys that are stored as secrets in AWS Secrets Manager.

When setting up static key encryption using MediaConnect, [you create an IAM policy](#) that you assign to MediaConnect. This policy allows MediaConnect to read the secrets that you have stored in Secrets Manager. The settings for this policy are entirely up to you. The policy can range from most restrictive (allowing access to only specific secrets) to least restrictive (allowing access to any secret that you create using your AWS account). We recommend using the most restrictive policy as a best practice. However, the following examples show you how to set up policies with different levels of restriction. Because MediaConnect only needs read access to secrets, all of the examples show only the actions that are necessary to read the values that you store.

Note

While the following example IAM policies for Secrets Manager are broadly applicable to various AWS services, this page specifically demonstrates their use in the context of MediaConnect. For more information about Secrets Manager, refer to the [AWS Secrets Manager documentation](#).

Topics

- [Allow read access to specific secrets in Secrets Manager](#)
- [Allow read access to all secrets created in a specific AWS Region in Secrets Manager](#)
- [Allow read access to all resources in Secrets Manager](#)

Allow read access to specific secrets in Secrets Manager

The following example IAM policy allows read access to specific resources (secrets) that you create in Secrets Manager.

Replace the *placeholder text* in the ARNs with your own information. The ARNs should represent the secrets that store the encryption keys you want to use with MediaConnect.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "secretsmanager:GetResourcePolicy",
        "secretsmanager:GetSecretValue",
        "secretsmanager:DescribeSecret",
        "secretsmanager:ListSecretVersionIds"
      ],
      "Resource": [
        "arn:aws:secretsmanager:us-west-2:111122223333:secret:aes128-1a2b3c",
        "arn:aws:secretsmanager:us-west-2:111122223333:secret:aes192-4D5e6F",
        "arn:aws:secretsmanager:us-west-2:111122223333:secret:aes256-7g8H9i"
      ]
    },
    {
      "Effect": "Allow",
      "Action": "secretsmanager:ListSecrets",
      "Resource": "*"
    }
  ]
}
```

Allow read access to all secrets created in a specific AWS Region in Secrets Manager

The following IAM policy allows read access to all secrets that you create in a specific AWS Region in Secrets Manager, including any encryption keys used for MediaConnect. This policy applies to resources that you have created already and all resources that you create in the future in the specified Region. This might be useful when managing multiple encrypted MediaConnect flows within the same Region.

Replace the *placeholder text* in the ARNs with your own information. The Region and account ID should represent where your secrets are stored.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "secretsmanager:GetResourcePolicy",
        "secretsmanager:GetSecretValue",
        "secretsmanager:DescribeSecret",
        "secretsmanager:ListSecretVersionIds"
      ],
      "Resource": "arn:aws:secretsmanager:us-west-2:111122223333:secret:*"
    },
    {
      "Effect": "Allow",
      "Action": "secretsmanager:ListSecrets",
      "Resource": "*"
    }
  ]
}
```

Allow read access to all resources in Secrets Manager

The following IAM policy allows read access to all resources that you create in Secrets Manager, including any encryption keys used for MediaConnect. This policy applies to resources that you have created already and all resources that you create in the future. This broader access might be needed when managing encrypted MediaConnect flows across multiple regions.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
```

```
    "Action": [
      "secretsmanager:GetResourcePolicy",
      "secretsmanager:GetSecretValue",
      "secretsmanager:DescribeSecret",
      "secretsmanager:ListSecretVersionIds",
      "secretsmanager:ListSecrets"
    ],
    "Resource": [
      "*"
    ]
  }
}
```

For more information on setting up encryption for your MediaConnect flows, see [Data protection](#) in this guide. For general information about using Secrets Manager, refer to the [AWS Secrets Manager User Guide](#).

AWS managed policies for AWS Elemental MediaConnect

An AWS managed policy is a standalone policy that is created and administered by AWS. AWS managed policies are designed to provide permissions for many common use cases so that you can start assigning permissions to users, groups, and roles.

Keep in mind that AWS managed policies might not grant least-privilege permissions for your specific use cases because they're available for all AWS customers to use. We recommend that you reduce permissions further by defining [customer managed policies](#) that are specific to your use cases.

You cannot change the permissions defined in AWS managed policies. If AWS updates the permissions defined in an AWS managed policy, the update affects all principal identities (users, groups, and roles) that the policy is attached to. AWS is most likely to update an AWS managed policy when a new AWS service is launched or new API operations become available for existing services.

For more information, see [AWS managed policies](#) in the *IAM User Guide*.

AWS managed policy: AWSElementalMediaConnectReadOnlyAccess

You can attach AWSElementalMediaConnectReadOnlyAccess to your users, groups, and roles.

This policy grants read-only permissions that allow users to view all resources in MediaConnect.

Permissions details

This policy includes the following permissions.

- `mediaconnect:DescribeBridge` – Allows principals to view detailed information about a specific bridge in MediaConnect. This is required so that you can inspect the bridge configuration and status.
- `mediaconnect:DescribeFlow` – Allows principals to view detailed information about a specific flow in MediaConnect. This is required so that you can inspect the flow configuration and status.
- `mediaconnect:DescribeFlowSourceMetadata` – Allows principals to view metadata about a flow's source in MediaConnect. This is required so that you can see technical details about the input stream.
- `mediaconnect:DescribeFlowSourceThumbnail` – Allows principals to view the details of the thumbnail image for a flow's source in MediaConnect. This is required so that you can see visual previews of your video streams.
- `mediaconnect:DescribeGateway` – Allows principals to view detailed information about a specific gateway in MediaConnect. This is required so that you can inspect the gateway configuration and status.
- `mediaconnect:DescribeGatewayInstance` – Allows principals to view detailed information about a specific gateway instance in MediaConnect. This is required so that you can inspect the gateway instance configuration and status.
- `mediaconnect:DescribeOffering` – Allows principals to view detailed information about a specific service offering in MediaConnect. This is required so that you can see bandwidth commitment options and their associated discount rates.
- `mediaconnect:DescribeReservation` – Allows principals to view detailed information about a specific reservation in MediaConnect. This is required so that you can see the details of your bandwidth commitment and its associated discount.
- `mediaconnect:ListBridges` – Allows principals to view a list of bridges in MediaConnect. This is required so that you can see all the available bridge resources in your account.
- `mediaconnect:ListEntitlements` – Allows principals to view a list of entitlements in MediaConnect. This is required so that you can see all permissions granted to other AWS accounts to access your transport stream flows.

- `mediaconnect:ListFlows` – Allows principals to view a list of flows in MediaConnect. This is required so that you can see all the available flow resources in your account.
- `mediaconnect:ListGatewayInstances` – Allows principals to view a list of gateway instances in MediaConnect. This is required so that you can see all the running gateway compute resources in your account.
- `mediaconnect:ListGateways` – Allows principals to view a list of gateways in MediaConnect. This is required so that you can see all the available gateway resources in your account.
- `mediaconnect:ListOfferings` – Allows principals to view a list of service offerings in MediaConnect. This is required so that you can see the available bandwidth discount options that require a commitment. The offerings that are displayed may vary based on your AWS Region.
- `mediaconnect:ListReservations` – Allows principals to view a list of reservations in MediaConnect. This is required so that you can see your active bandwidth commitments and their associated discounts.
- `mediaconnect:ListTagsForResource` – Allows principals to view tags associated with MediaConnect resources. This is required so that you can see resource organization and classification metadata.

To view the permissions for this policy, see [AWSElementalMediaConnectReadOnlyAccess](#) in the *AWS Managed Policy Reference*.

AWS managed policy: AWSElementalMediaConnectFullAccess

You can attach `AWSElementalMediaConnectFullAccess` to your users, groups, and roles.

This policy grants administrative permissions that allow the user permission to create, read, update, and delete MediaConnect resources.

Permissions details

This policy includes the following permissions.

- `mediaconnect:*` – Allows principals to perform all actions in MediaConnect. This is required so that administrators and other users can create, read, update, and delete MediaConnect resources and manage all aspects of video transport workflows. The wildcard (*) permission includes all possible MediaConnect actions, such as creating and deleting flows, managing entitlements and outputs, and configuring video transport workflows.

To view the permissions for this policy, see [AWSElementalMediaConnectFullAccess](#) in the *AWS Managed Policy Reference*.

AWS managed policy: MediaConnectGatewayInstanceRolePolicy

You can attach the MediaConnectGatewayInstanceRolePolicy policy to your IAM identities.

This policy grants permission to register MediaConnect Gateway Instances to a MediaConnect Gateway. This policy will be attached to a role. The entity assuming the role will have the ability to register instances to the gateway.

Permissions details

This policy includes the following permissions.

- `mediaconnect:DiscoverGatewayPollEndpoint` – Allows principals to locate the gateway poll endpoints for the specified gateway.
- `mediaconnect:PollGateway` – Allows principals to regularly query the gateway in MediaConnect. This is required so that MediaConnect Gateway Instances can check for and receive updates, configurations, and instructions from the gateway service.
- `mediaconnect:SubmitGatewayStateChange` – Allows principals to report status updates in MediaConnect. This is required so that MediaConnect Gateway Instances can notify the gateway service about changes in their operational state, health, and configuration status.

To view the permissions for this policy, see [MediaConnectGatewayInstanceRolePolicy](#) in the *AWS Managed Policy Reference*.

AWS managed policy: AWSMediaConnectServicePolicy

You can't attach AWSMediaConnectServicePolicy to your IAM entities. This policy is attached to a service-linked role that allows MediaConnect to perform actions on your behalf. For more information, visit [Using service-linked roles](#).

This policy is attached to the **AWSServiceRoleForMediaConnect** service-linked role.

This policy allows the service-linked role to manage Amazon ECS resources on your behalf. AWS Elemental MediaConnect Gateway uses Amazon ECS as the foundation for the on-premises implementation of AWS Elemental MediaConnect Gateway. As a result, MediaConnect must have the ability to create, update, and delete Amazon ECS resources as needed.

The policy also allows the service-linked role to manage Amazon EC2 resources on your behalf. The MediaConnect router requires EC2 networking capabilities for audio and video routing. As a result, MediaConnect must have the ability to create, update, and delete Amazon EC2 resources as needed, as well as view network configuration details. When MediaConnect performs actions on EC2 resources using this service-linked role, we tag them with `aws:ResourceTag/created-for-service: MediaConnect`. This helps you easily distinguish between the EC2 resources that MediaConnect creates, and the ones that you create yourself.

Permissions details

This policy includes the following permissions.

- **Amazon ECS permissions**

Note

These permissions are restricted to ECS clusters with names starting with `MediaConnectGateway` through the condition block.

- `ecs:CreateCluster` - Allows principals to create new ECS clusters. This is required so that MediaConnect can establish new clusters needed for Gateway operations.
- `ecs:CreateService` - Allows principals to establish new ECS services. This is required so that MediaConnect can set up new service components for the Gateway implementation.
- `ecs>DeleteAttributes` - Allows principals to remove attributes from ECS resources. This is required so that MediaConnect can clean up metadata when no longer needed.
- `ecs>DeleteService` - Allows principals to remove ECS services. This is required so that MediaConnect can clean up services when they're no longer needed.
- `ecs:DescribeClusters` - Allows principals to view details about ECS clusters. This is required so that MediaConnect can monitor the state and configuration of Gateway clusters.
- `ecs:DescribeContainerInstances` - Allows principals to view details about ECS container instances. This is required so that MediaConnect can monitor the health and status of Gateway components.
- `ecs:DeregisterContainerInstance` - Allows principals to remove container instances from an ECS cluster. This is required so that MediaConnect can remove Gateway components from the cluster when no longer needed.

- `ecs:DescribeServices` – Allows principals to view details about ECS services. This is required so that MediaConnect can monitor and manage the state of its services.
 - `ecs:DescribeTasks` – Allows principals to view details about ECS tasks. This is required so that MediaConnect can monitor the status of running tasks.
 - `ecs:ListAttributes` – Allows principals to retrieve attributes from ECS resources. This is required so that MediaConnect can monitor and manage metadata for Gateway components.
 - `ecs:ListContainerInstances` – Allows principals to retrieve a list of container instances in a cluster. This is required so that MediaConnect can track all Gateway components running in the cluster.
 - `ecs:ListTasks` – Allows principals to view all tasks in ECS. This is required so that MediaConnect can monitor and manage running tasks.
 - `ecs:PutAttributes` – Allows principals to add attributes to ECS resources. This is required so that MediaConnect can configure resources by applying the necessary metadata.
 - `ecs:RegisterTaskDefinition` – Allows principals to register new task definitions. This is required so that MediaConnect can define specifications for new Gateway components.
 - `ecs:RunTask` – Allows principals to start new tasks in ECS. This is required so that MediaConnect can launch new Gateway components as needed.
 - `ecs:StartTask` – Allows principals to initiate specific tasks in ECS. This is required so that MediaConnect can launch specific Gateway components.
 - `ecs:StopTask` – Allows principals to terminate running tasks in ECS. This is required so that MediaConnect can stop Gateway components when needed.
 - `ecs:UpdateContainerInstancesState` – Allows principals to modify the state of container instances. This is required so that MediaConnect can manage the lifecycle of container instances.
 - `ecs:UpdateCluster` – Allows principals to modify existing ECS cluster configurations. This is required so that MediaConnect can adjust cluster settings as needed for optimal Gateway operations.
 - `ecs:UpdateClusterSettings` – Allows principals to modify cluster-wide settings. This is required so that MediaConnect can update cluster settings to support Gateway requirements.
 - `ecs:UpdateService` – Allows principals to modify existing ECS services. This is required so that MediaConnect can update service configurations for MediaConnect Gateway components running on ECS.
- **Amazon EC2 permissions**

- `ec2:CreateNetworkInterfacePermission` – Allows MediaConnect to grant permissions for network interfaces used within the router.
- `ec2:DeleteNetworkInterface` – Allows MediaConnect to remove network interfaces when they're no longer needed.
- `ec2:DeleteNetworkInterfacePermission` – Allows MediaConnect to revoke permissions for network interfaces used within the router.
- `ec2:DescribeNetworkInterfaces` – Allows MediaConnect to view details about network interfaces used within the router.
- `ec2:DescribeSecurityGroups` – Allows MediaConnect to view details about security groups used with a router network interface.
- `ec2:DescribeSubnets` – Allows MediaConnect to view details about subnets used with a router network interface.

To view the permissions for this policy, see [AWSMediaConnectServicePolicy](#) in the *AWS Managed Policy Reference*.

MediaConnect updates to AWS managed policies

View details about updates to AWS managed policies for MediaConnect since this service began tracking these changes. For automatic alerts about changes to this page, subscribe to the RSS feed on the MediaConnect [document history](#) page.

Change	Description	Date
AWSMediaConnectServicePolicy – Update to an existing policy	MediaConnect added the following Amazon EC2 permissions to support the router feature: • <code>ec2:CreateNetworkInterfacePermission</code> • <code>ec2:DeleteNetworkInterface</code>	November 19, 2025

Change	Description	Date
	• <code>ec2:DeleteNetworkInterfacePermission</code> • <code>ec2:DescribeNetworkInterfaces</code> • <code>ec2:DescribeSecurityGroups</code> • <code>ec2:DescribeSubnets</code> These permissions allow MediaConnect to view and manage router network interfaces as needed for cross-Region audio and video routing.	
The MediaConnect managed policy AWS Elemental MediaConnectReadOnlyAccess has been added.	This policy provides read-only access to MediaConnect resources.	February 12, 2025
The MediaConnect managed policy AWS Elemental MediaConnectFullAccess has been added.	This policy provides full access to MediaConnect resources.	February 12, 2025
The MediaConnect managed policy MediaConnectGatewayInstanceRolePolicy has been added.	This policy grants permission to register MediaConnect Gateway Instances to a MediaConnect Gateway.	April 12, 2023
The MediaConnect managed policy AWS MediaConnectServicePolicy has been added.	This policy is used by a service-link role and grants permissions to access AWS services and resources used by MediaConnect.	April 12, 2023
MediaConnect started tracking changes	MediaConnect started tracking changes for its AWS managed policies.	April 12, 2023

Using service-linked roles for MediaConnect

AWS Elemental MediaConnect uses AWS Identity and Access Management (IAM) [service-linked roles](#). A service-linked role is a unique type of IAM role that is linked directly to MediaConnect. Service-linked roles are predefined by MediaConnect and include all the permissions that the service requires to call other AWS services on your behalf.

A service-linked role makes setting up MediaConnect easier because you don't have to manually add the necessary permissions. MediaConnect defines the permissions of its service-linked roles, and unless defined otherwise, only MediaConnect can assume its roles. The defined permissions include the trust policy and the permissions policy, and that permissions policy cannot be attached to any other IAM entity.

You can delete a service-linked role only after first deleting their related resources. This protects your MediaConnect resources because you can't inadvertently remove permission to access the resources.

For information about other services that support service-linked roles, see [AWS Services That Work with IAM](#) and look for the services that have **Yes** in the **Service-linked roles** column. Choose a **Yes** with a link to view the service-linked role documentation for that service.

Service-linked role permissions for MediaConnect

MediaConnect uses the service-linked role named **AWSServiceRoleForMediaConnect**. This is the default Service-Linked Role that enables access to AWS services and resources used or managed by MediaConnect.

The AWSServiceRoleForMediaConnect service-linked role trusts the following services to assume the role:

- MediaConnect

The role permissions policy named MediaConnectServiceRolePolicy allows MediaConnect to complete the following actions on the specified resources:

1. Actions on all ECS resources

- Actions:
 - `ecs:CreateCluster`

- `ecs:RegisterTaskDefinition`
- Resource: *

2. Actions on the MediaConnect Gateway ECS cluster

- Actions:
 - `ecs:DeregisterContainerInstance`
 - `ecs:DescribeClusters`
 - `ecs:ListAttributes`
 - `ecs:ListContainerInstances`
 - `ecs:UpdateCluster`
 - `ecs:UpdateClusterSettings`
- Resource: `arn:aws:ecs:*:*:cluster/MediaConnectGateway`

3. Actions on ECS services and tasks within the MediaConnect Gateway cluster

- Actions:
 - `ecs:CreateService`
 - `ecs>DeleteAttributes`
 - `ecs>DeleteService`
 - `ecs:DescribeContainerInstances`
 - `ecs:DescribeServices`
 - `ecs:DescribeTasks`
 - `ecs:ListTasks`
 - `ecs:PutAttributes`
 - `ecs:RunTask`
 - `ecs:StartTask`
 - `ecs:StopTask`
 - `ecs:UpdateContainerInstancesState`
 - `ecs:UpdateService`
- Resource: *
- Condition: `ArnLike: {"ecs:cluster": "arn:aws:ecs:*:*:cluster/MediaConnectGateway"}`

4. Actions on network interfaces within the MediaConnect router

- Actions:
 - `ec2:DeleteNetworkInterface`
 - `ec2:DeleteNetworkInterfacePermission`
 - `ec2:CreateNetworkInterfacePermission`
- Resource: `arn:aws:ec2:*:*:network-interface/*`
- Condition: `aws:ResourceTag/created-for-service": "MediaConnect"`

5. Actions to describe available network resources

- Actions:
 - `ec2:DescribeNetworkInterfaces`
 - `ec2:DescribeSecurityGroups`
 - `ec2:DescribeSubnets`
- Resource: `*`

You must configure permissions to allow an IAM entity (such as a user, group, or role) to create, edit, or delete a service-linked role. For more information, see [Service-linked role permissions](#) in the *IAM User Guide*.

Creating a service-linked role for MediaConnect

You don't need to manually create a service-linked role. When you create an associated MediaConnect resource in the AWS Management Console, the AWS CLI, or the AWS API, MediaConnect creates the service-linked role for you.

Important

This service-linked role can appear in your account if you completed an action in another service that uses the features supported by this role. Also, if you were using the MediaConnect service before January 1, 2023, when it began supporting service-linked roles, then MediaConnect created the `AWSServiceRoleForMediaConnect` role in your account. To learn more, see [A new role appeared in my IAM account](#).

If you delete this service-linked role, and then need to create it again, you can use the same process to recreate the role in your account. When you create an associated MediaConnect resource, MediaConnect creates the service-linked role for you again.

You can also use the IAM console to create a service-linked role with the **MediaConnect** use case. In the AWS CLI or the AWS API, create a service-linked role with the MediaConnect service name. For more information, see [Creating a service-linked role](#) in the *IAM User Guide*. If you delete this service-linked role, you can use this same process to create the role again.

Editing a service-linked role for MediaConnect

MediaConnect does not allow you to edit the `AWSServiceRoleForMediaConnect` service-linked role. After you create a service-linked role, you cannot change the name of the role because various entities might reference the role. However, you can edit the description of the role using IAM. For more information, see [Editing a service-linked role](#) in the *IAM User Guide*.

Deleting a service-linked role for MediaConnect

If you no longer need to use a feature or service that requires a service-linked role, we recommend that you delete that role. That way you don't have an unused entity that is not actively monitored or maintained. However, you must clean up the resources for your service-linked role before you can manually delete it.

Note

If the MediaConnect service is using the role when you try to delete the resources, then the deletion might fail. If that happens, wait for a few minutes and try the operation again.

To delete MediaConnect resources used by the `AWSServiceRoleForMediaConnect`

1. Delete all Bridges in all Gateways.
2. De-register all Instances in all Gateways.
3. Delete all Gateways.

To manually delete the service-linked role using IAM

Use the IAM console, the AWS CLI, or the AWS API to delete the `AWSServiceRoleForMediaConnect` service-linked role. For more information, see [Deleting a service-linked role](#) in the *IAM User Guide*.

Supported Regions for MediaConnect service-linked roles

MediaConnect supports using service-linked roles in all of the regions where the service is available. For more information, see [MediaConnect Regions and endpoints](#).

Setting up AWS Elemental MediaConnect as a trusted service

You can use AWS Identity and Access Management (IAM) to control which AWS resources can be accessed by which users and applications. This includes setting up permissions to allow AWS Elemental MediaConnect to communicate with other services on behalf of your account. To set up AWS Elemental MediaConnect as a trusted entity, you must perform the following steps:

Step 1. – Create an IAM policy that governs which actions you want to allow.

Step 2 – Create an IAM role with a trusted relationship, and attach the policy that you created in the previous step.

Step 1: Create an IAM policy to allow specific actions

In this step, you create an IAM policy that governs which actions you want to allow.

To create the IAM policy

1. Open the IAM console at <https://console.aws.amazon.com/iam/>.
2. In the navigation pane, choose **Policies**.
3. Choose **Create policy**, and then choose the **JSON** tab.
4. Enter a policy that uses the JSON format. For examples, see the following:
 - [Policy example for connecting to your VPC](#)
 - [Policy examples for secrets in AWS Secrets Manager](#)
5. Choose **Review policy**.
6. For **Name**, enter a name for your policy.
7. Choose **Create policy**.

Step 2: Create an IAM role with a trusted relationship

In [step 1](#), you created an IAM policy that governs which actions you want to allow. In this step, you create an IAM role and assign the policy to that role. Then you define AWS Elemental MediaConnect as a trusted entity that can assume the role.

To create a role with a trusted relationship

1. In the navigation pane of the IAM console, choose **Roles**.
2. On the **Role** page, choose **Create role**.
3. On the **Create role** page, for **Select type of trusted entity**, choose **AWS service** (the default).
4. For **Choose the service that will use this role**, choose **EC2**.

You choose EC2 because MediaConnect is not currently included in this list. Choosing EC2 lets you create a role. In a later step, you change this role to include MediaConnect instead of EC2.

5. Choose **Next: Permissions**.
6. For **Attach permissions policies**, enter the name of the policy that you created in [step 1](#).
7. Select the check box next to the name of the policy, and then choose **Next: Tags**.
8. (Optional) Add metadata to the user by attaching tags as key-value pairs. For more information about using tags in IAM, see [Tagging IAM Entities](#) in the *IAM User Guide*.
9. Choose **Next: Review**.
10. For **Role name**, enter a name. The name `MediaConnectAccessRole` is reserved, so you can't use it. Instead, use a name that includes MediaConnect and describes this role's purpose.
11. For **Role description**, replace the default text with a description that will help you remember the purpose of this role.
12. Choose **Create role**.
13. In the confirmation message that appears across the top of your page, choose the name of the role that you just created by selecting **View role**.
14. Choose **Trust relationships** tab, and then choose **Edit trust policy**.
15. in the **Edit trust policy** window, make the following changes to the JSON:
 - For **Service**, change `ec2.amazonaws.com` to `mediaconnect.amazonaws.com`
 - For added security, define specific conditions for the trust policy. This will limit MediaConnect to only using resources in your account. You do this by using a global condition such as the **Account ID**, the **flow ARN**, or both. See the following example of the conditional trust policy. For more information about the security benefits of the global conditions, see [Cross-service confused deputy prevention](#).

Note

The following example uses both the **Account ID** and **flow ARN** conditions. Your policy will look different if you do not use both conditions. If you don't know the full ARN of the flow or if you are specifying multiple flows, use the `aws:SourceArn` global context condition key with wildcard characters (*) for the unknown portions of the ARN. For example, `arn:aws:mediaconnect:*:111122223333:*`.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Principal": {
        "Service": "mediaconnect.amazonaws.com"
      },
      "Action": "sts:AssumeRole",
      "Condition": {
        "StringEquals": {
          "aws:SourceAccount": "111122223333"
        },
        "ArnLike": {
          "aws:SourceArn": "arn:aws:mediaconnect:us-
west-2:111122223333:flow:*:flow-name"
        }
      }
    }
  ]
}
```

16. Choose **Update policy**.

17. On the **Summary** page, make a note of the value for **Role ARN**. It looks like this:
`arn:aws:iam::111122223333:role/MediaConnectASM`.

Cross-service confused deputy prevention

The confused deputy problem is a security issue where an entity that doesn't have permission to perform an action can coerce a more-privileged entity to perform the action. In AWS, cross-service impersonation can result in the confused deputy problem. Cross-service impersonation can occur when one service (the *calling service*) calls another service (the *called service*). The calling service can be manipulated to use its permissions to act on another customer's resources in a way it should not otherwise have permission to access. To prevent this, AWS provides tools that help you protect your data for all services with service principals that have been given access to resources in your account.

We recommend using the [aws:SourceArn](#) of the flow and [aws:SourceAccount](#) global condition context keys in resource policies to limit the permissions that AWS Elemental MediaConnect gives another service to the resource. Use the flow's `aws:SourceArn` if you want only one resource to be associated with the cross-service access. Use `aws:SourceAccount` if you want to allow any resource in that account to be associated with the cross-service use.

The most effective way to protect against the confused deputy problem is to use the `aws:SourceArn` global condition context key with the full ARN of the flow. If you don't know the full ARN of the flow or if you are specifying multiple flows, use the `aws:SourceArn` global context condition key with wildcard characters (*) for the unknown portions of the ARN. For example, `arn:aws:mediacconnect:*:111122223333:*`.

The following example shows how you can use the `aws:SourceArn` and `aws:SourceAccount` global condition context keys in MediaConnect to prevent the confused deputy problem.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Principal": {
        "Service": "mediacconnect.amazonaws.com"
      },
      "Action": "sts:AssumeRole",
      "Condition": {
        "StringEquals": {
          "aws:SourceAccount": "111122223333"
        }
      }
    }
  ]
}
```

```
    },
    "ArnLike": {
      "aws:SourceArn": "arn:aws:mediaconnect:us-  
west-2:111122223333:flow:1-ABCDEFGHJxyzMNoP-a1234bc12345:flow-name"
    }
  }
}
```

Troubleshooting AWS Elemental MediaConnect identity and access

Use the following information to help you diagnose and fix common issues that you might encounter when working with MediaConnect and IAM.

Topics

- [I am not authorized to perform an action in MediaConnect](#)
- [I want to allow people outside of my AWS account to access my MediaConnect resources](#)

I am not authorized to perform an action in MediaConnect

If the AWS Management Console tells you that you're not authorized to perform an action, then you must contact your administrator for assistance. Your administrator is the person that provided you with your user name and password.

The following example error occurs when the mateojackson user tries to use the console to view details about a flow but does not have `mediaconnect:DescribeFlow` permissions.

```
User: arn:aws:iam::123456789012:user/mateojackson is not authorized to perform:  
mediaconnect:DescribeFlow on resource: myExampleFlow
```

In this case, Mateo asks his administrator to update his policies to allow him to access the `myExampleFlow` resource using the `mediaconnect:DescribeFlow` action.

I want to allow people outside of my AWS account to access my MediaConnect resources

You can create a role that users in other accounts or people outside of your organization can use to access your resources. You can specify who is trusted to assume the role. For services that support

resource-based policies or access control lists (ACLs), you can use those policies to grant people access to your resources.

To learn more, consult the following:

- To learn whether MediaConnect supports these features, see [How AWS Elemental MediaConnect works with IAM](#).
- To learn how to provide access to your resources across AWS accounts that you own, see [Providing access to an IAM user in another AWS account that you own](#) in the *IAM User Guide*.
- To learn how to provide access to your resources to third-party AWS accounts, see [Providing access to AWS accounts owned by third parties](#) in the *IAM User Guide*.
- To learn how to provide access through identity federation, see [Providing access to externally authenticated users \(identity federation\)](#) in the *IAM User Guide*.
- To learn the difference between using roles and resource-based policies for cross-account access, see [Cross account resource access in IAM](#) in the *IAM User Guide*.

Logging and monitoring

This section provides an overview of the options for logging and monitoring in AWS Elemental MediaConnect for security purposes. For more information about logging and monitoring in MediaConnect see [Monitoring and tagging](#).

Monitoring is an important part of maintaining the reliability, availability, and performance of AWS Elemental MediaConnect and your AWS solutions. You should collect monitoring data from all of the parts of your AWS solution so that you can more easily debug a multi-point failure if one occurs. AWS provides several tools for monitoring your MediaConnect resources and responding to potential incidents:

Amazon CloudWatch alarms

Using CloudWatch alarms, you watch a single metric over a time period that you specify. If the metric exceeds a given threshold, a notification is sent to an Amazon SNS topic or AWS Auto Scaling policy. CloudWatch alarms do not invoke actions because they are in a particular state. Rather, the state must have changed and been maintained for a specified number of periods. For more information, see [Monitoring with CloudWatch metrics](#).

AWS CloudTrail logs

CloudTrail provides a record of actions taken by a user, role, or an AWS service in AWS Elemental MediaConnect. Using the information collected by CloudTrail, you can determine the request that was made to MediaConnect, the IP address from which the request was made, who made the request, when it was made, and additional details. For more information, see [Logging API calls with AWS CloudTrail](#).

AWS Trusted Advisor

Trusted Advisor draws upon best practices learned from serving hundreds of thousands of AWS customers. Trusted Advisor inspects your AWS environment and then makes recommendations when opportunities exist to save money, improve system availability and performance, or help close security gaps. All AWS customers have access to five Trusted Advisor checks. Customers with a Business or Enterprise support plan can view all Trusted Advisor checks.

For more information, see [AWS Trusted Advisor](#).

Compliance validation for AWS Elemental MediaConnect

Our new AWS sign-up experience is not designed for regulated workloads. If you're using our new AWS sign-up experience, but you want to use AWS for regulated workloads, you can [sign up for AWS \(advanced\)](#) or [activate advanced features](#) for your AWS environment.

To learn whether an AWS service is within the scope of specific compliance programs, see [AWS services in Scope by Compliance Program](#) and choose the compliance program that you are interested in. For general information, see [AWS Compliance Programs](#).

You can download third-party audit reports using AWS Artifact. For more information, see [Downloading Reports in AWS Artifact](#).

Your compliance responsibility when using AWS services is determined by the sensitivity of your data, your company's compliance objectives, and applicable laws and regulations. For more information about your compliance responsibility when using AWS services, see [AWS Security Documentation](#).

Resilience in AWS Elemental MediaConnect

The AWS global infrastructure is built around AWS Regions and Availability Zones. AWS Regions provide multiple physically separated and isolated Availability Zones, which are connected with low-latency, high-throughput, and highly redundant networking. With Availability Zones, you can design and operate applications and databases that automatically fail over between Availability Zones without interruption. Availability Zones are more highly available, fault tolerant, and scalable than traditional single or multiple data center infrastructures.

For more information about AWS Regions and Availability Zones, see [AWS Global Infrastructure](#).

Infrastructure security in AWS Elemental MediaConnect

As a managed service, AWS Elemental MediaConnect is protected by AWS global network security. For information about AWS security services and how AWS protects infrastructure, see [AWS Cloud Security](#). To design your AWS environment using the best practices for infrastructure security, see [Infrastructure Protection](#) in *Security Pillar AWS Well-Architected Framework*.

You use AWS published API calls to access MediaConnect through the network. Clients must support the following:

- Transport Layer Security (TLS). We require TLS 1.2 and recommend TLS 1.3.
- Cipher suites with perfect forward secrecy (PFS) such as DHE (Ephemeral Diffie-Hellman) or ECDHE (Elliptic Curve Ephemeral Diffie-Hellman). Most modern systems such as Java 7 and later support these modes.

MediaConnect interface VPC endpoints (AWS PrivateLink)

You can use an interface VPC endpoint to keep all MediaConnect API request traffic between your VPC and MediaConnect in the Amazon network, thus improving the security of your VPC. Interface VPC endpoints don't need an internet gateway, a NAT device, or a virtual private gateway. The VPC endpoints are powered by AWS PrivateLink, a technology that you can use to privately access MediaConnect APIs with private IP addresses.

For more information about AWS PrivateLink and VPC endpoints, see [VPC endpoints](#) in the *Amazon VPC User Guide*.

Considerations for MediaConnect VPC endpoints

Before you set up an interface endpoint for MediaConnect, be sure to review [Interface endpoint properties and limitations](#) in the *Amazon VPC User Guide*, and be aware of the following considerations:

- VPC endpoints currently don't support cross-Region requests. Ensure that you create your endpoint in the same Region where you plan to interact with MediaConnect.
- VPC endpoints only support Amazon-provided DNS through Amazon Route 53. If you want to use your own DNS, you can use conditional DNS forwarding. For more information, see [DHCP Options Sets](#) in the *Amazon VPC User Guide*.
- The security group attached to the VPC endpoint must allow incoming connections on port 443 from the private subnet of the VPC.

Creating the VPC Endpoints for MediaConnect

You can create an interface endpoint for MediaConnect using either the Amazon VPC console or the AWS Command Line Interface (AWS CLI). Follow the procedure outlined in [Creating an interface endpoint](#) in the *Amazon VPC User Guide*.

Controlling Access to VPC Endpoints for MediaConnect

You can control access to MediaConnect by attaching an endpoint policy to your VPC endpoint. The policy specifies the following information:

- The principal that can perform actions.
- The actions that can be performed.
- The resources on which actions can be performed.

For more information, see [Controlling access to services with VPC endpoints](#) in the *Amazon VPC User Guide*.

Example: VPC endpoint policy for actions

The following is an example of an endpoint policy for MediaConnect. When attached to an endpoint, this policy grants access to the listed MediaConnect actions for all principals on all resources.

```
{
  "Statement": [
    {
      "Principal": "*",
      "Effect": "Allow",
      "Action": [
        "mediaconnect:action-1",
        "mediaconnect:action-2",
        "mediaconnect:action-3"
      ],
      "Resource": "*"
    }
  ]
}
```

Monitoring and tagging in AWS Elemental MediaConnect

Monitoring is an important part of maintaining the reliability, availability, and performance of AWS Elemental MediaConnect and your other AWS solutions. AWS provides the following monitoring tools to watch MediaConnect, report when something is wrong, and take automatic actions when appropriate:

- *MediaConnect flow source monitoring* displays detailed information about a source stream and its program media. You can view status messages about the stream as well as details about the program video, audio, and other data. For more information, see the [Monitoring using source metadata](#) section of this guide.
- *AWS CloudTrail* captures API calls and related events made by or on behalf of your AWS account and delivers the log files to an Amazon S3 bucket that you specify. You can identify which users and accounts called AWS, the source IP address from which the calls were made, and when the calls occurred. For more information, see the [AWS CloudTrail User Guide](#).
- *Amazon EventBridge* delivers a near real-time stream of system events that describe changes in AWS resources. EventBridge enables automated event-driven computing, as you can write rules that watch for certain events and trigger automated actions in other AWS services when these events happen. For more information, see the [Amazon EventBridge User Guide](#).
- *Amazon CloudWatch* monitors your AWS resources and the applications that you run on AWS in real time. You can collect and track metrics, create customized dashboards, and set alarms that notify you or take actions when a specified metric reaches a threshold that you specify. For example, you can have CloudWatch track the number of dropped and unrecovered packets on your AWS Elemental MediaConnect flows and automatically notify you when those values exceed a certain number. For more information, see the [Amazon CloudWatch User Guide](#).

Monitoring with the AWS Elemental MediaConnect console

AWS Elemental MediaConnect offers several ways to monitor your resources directly within the MediaConnect console. This allows you to quickly view the status and health of your flows, sources, and content without having to switch to other AWS services.

In the MediaConnect console, you can use the following monitoring capabilities:

- **Content quality analysis** - Monitor your source streams for issues like black frames, frozen frames, and audio silence.

- **Thumbnails** - View visual thumbnail previews of your video content to verify streams.
- **Source metadata** - View detailed information about transport streams, programs, and media tracks.
- **Flow and source health** - Monitor the overall health and status of your flows and sources.

By using these built-in monitoring tools, you can proactively identify and troubleshoot issues with your MediaConnect resources.

The following sections provide details on how to use each monitoring feature in the MediaConnect console.

Contents

- [Monitoring with content quality analysis in AWS Elemental MediaConnect](#)
- [Viewing thumbnails of the source video](#)
- [Monitoring using source metadata](#)
- [Monitoring flow and source health](#)

Monitoring with content quality analysis in AWS Elemental MediaConnect

You can use MediaConnect content quality analysis to monitor your source streams and router inputs more effectively. Use this feature to track specific audio and video metrics and ensure that your content meets required quality standards. By monitoring these metrics, you can quickly identify anomalies in your streams and promptly resolve issues to maintain content quality.

Content quality analysis is available for both MediaConnect flows and router inputs. When used alongside other MediaConnect monitoring tools, content quality analysis provides you with a comprehensive view of your stream's quality. With this integrated monitoring approach, you can implement proactive measures and ensure a smooth and reliable media delivery workflow.

Key points

How content quality analysis works

You can monitor for the following content quality issues:

- **Silent audio periods** - Use this metric to detect periods of audio silence in the stream. This is useful for catching muted microphones in live broadcasts, unintended silence in recordings, or audio encoding issues.
- **Black frames** - Use this metric to detect periods of black video frames in the stream. This is helpful for identifying issues in live broadcasts, pre-recorded content, or your video encoding process.
- **Frozen frames** - Use this metric to detect periods of unchanging video frames in the stream. This is valuable for live events, identifying equipment issues, or detecting problems in your content delivery.

For each metric, you can set custom duration thresholds to fine-tune when alerts are triggered based on your specific needs. MediaConnect then monitors the status of the content within your source stream or router input, posting warnings and alerts when issues occur in the areas you've chosen to monitor.

You can enable content quality analysis for MediaConnect flows and router inputs.

Considerations

Note the following when using content quality analysis.

- MediaConnect monitors only the first video track and the first audio track within the stream.
- MediaConnect monitors only the first program within a multi-program transport stream (MPTS).

Flows

The following considerations apply to flows.

- Content quality analysis is limited to flows with 10 outputs or fewer. If a flow exceeds 10 outputs, MediaConnect automatically disables content quality analysis for that flow.
- Content quality analysis is not currently supported for CDI flows and MediaConnect Gateway bridges.

Router inputs

The following considerations apply to router inputs.

- Content quality analysis is automatically disabled when the aggregate bitrate on a router input exceeds 400 Mbps. It is also disabled when more than 10 router outputs are connected to the router.

Next steps

To get started with this feature, see [Enabling content quality analysis](#).

Enabling content quality analysis

You enable content quality analysis for each flow or router input in MediaConnect individually. You can customize the monitoring experience by configuring thresholds for individual metrics or disabling specific metrics as needed.

Topics

- [Enabling for flows](#)
- [Enabling for router inputs](#)

Enabling content quality analysis for a flow

You can enable content quality analysis when you create a new flow or update an existing one.

Procedure

You can enable content quality analysis through the AWS Management Console, the AWS CLI, and the MediaConnect API.

Console

To enable content quality analysis when you create a flow

1. Follow the instructions for [Creating a flow](#).
2. In the **Source monitoring configuration** step, turn on **Content quality analysis state**.
3. For each metric you want to enable, change the state to **Enabled** and specify a threshold value between 10 and 60 seconds.

To enable content quality analysis in an existing flow

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediacnect/>.
2. From the **Flows** screen, select the flow for which you want to enable content quality analysis.
3. On the flow details page, choose the **Sources** tab.
4. In the **Source monitoring configuration** section, choose **Edit**.
5. Turn on **Content quality analysis state**.
6. For each metric you want to enable, change the state to **Enabled** and specify a threshold value between 10 and 60 seconds.
7. Choose **Update** to save your changes.

AWS CLI

To enable with default settings

Run the [update-flow](#) command with the `--source-monitoring-config` parameter as shown in the following example:

```
aws mediacnect update-flow \  
  --flow-arn "FlowARN" \  
  --source-monitoring-config ContentQualityAnalysisState=ENABLED
```

MediaConnect automatically enables all individual metrics with a default threshold of 30 seconds:

```
{  
  "Flow": {  
    "FlowArn": "<arn>",  
    ...  
    "SourceMonitoringConfig": {  
      "ContentQualityAnalysisState": "ENABLED",  
      "AudioMonitoringSettings": [  
        {  
          "SilentAudio": {  
            "State": "ENABLED",  
            "ThresholdSeconds": 30  
          }  
        }  
      ]  
    }  
  }  
}
```



```

    }
  ],
  "VideoMonitoringSettings": [
    {
      "BlackFrames": {
        "State": "ENABLED",
        "ThresholdSeconds": 30
      },
      "FrozenFrames": {
        "State": "ENABLED",
        "ThresholdSeconds": 30
      }
    }
  ]
}
}
}
}

```

To enable with custom thresholds

Run the [update-flow](#) command with the `--source-monitoring-config` parameter configured as shown in the following example:

```

aws mediaconnect update-flow \
  --flow-arn "flowARN" \
  --source-monitoring-config '{"ContentQualityAnalysisState": "ENABLED",
    "VideoMonitoringSettings": [{
      "FrozenFrames": {"State": "ENABLED", "ThresholdSeconds": <int>},
      "BlackFrames": {"State": "ENABLED", "ThresholdSeconds": <int>}}],
    "AudioMonitoringSettings": [{
      "SilentAudio": {"State": "ENABLED", "ThresholdSeconds": <int>}}]}'

```

Note the following:

- For each threshold, replace *<int>* with a value between 10 and 60 seconds.
- If you don't specify a threshold, the default value of 30 seconds is used. If you're updating a previously enabled metric without specifying a threshold, the previously set value is retained.

Note

You can also enable content quality analysis when you create a new flow by including the `--source-monitoring-config` parameter in the [create-flow](#) command.

Enabling content quality analysis for a router input

You can enable content quality analysis when you create a new router input or update an existing one.

Procedure

You can enable content quality analysis through the AWS Management Console, the AWS CLI, and the MediaConnect API.

Console

To enable content quality analysis when you create a router input

1. Open the AWS Elemental MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Choose **Create router input**.
4. In the **Content quality analysis** section, turn on each metric you want to enable and specify a threshold value between 10 and 60 seconds.
5. Complete the remaining fields and choose **Create router input**.

To enable content quality analysis for an existing router input

1. Open the AWS Elemental MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to update and choose **Edit**.
4. In the **Content quality analysis** section, turn on each metric you want to enable and specify a threshold value between 10 and 60 seconds.
5. Choose **Save changes**.

AWS CLI

To enable content quality analysis for a router input

Run the [update-router-input](#) command with the `--content-quality-analysis-configuration` parameter:

```
aws mediaconnect update-router-input \
  --arn "routerInputARN" \
  --content-quality-analysis-configuration '{
    "ContentLevel": {
      "BlackFrames": {"State": "ENABLED", "ThresholdSeconds": <int>},
      "FrozenFrames": {"State": "ENABLED", "ThresholdSeconds": <int>},
      "SilentAudio": {"State": "ENABLED", "ThresholdSeconds": <int>}
    }
  }'
```

Note the following:

- For each threshold, replace *<int>* with a value between 10 and 60 seconds.
- If you don't specify a threshold, the default value of 30 seconds is used.
- Only include the metrics you want to enable.

Note

You can also enable content quality analysis when you create a new router input by including the `--content-quality-analysis-configuration` parameter in the [create-router-input](#) command.

Viewing content quality analysis settings and alerts

When you enable content quality analysis, MediaConnect starts posting warnings and alerts for the enabled metrics in your AWS account. You can confirm your content quality analysis settings, and view any warnings and alerts for the flows and router inputs in your account.

Topics

- [Viewing for flows](#)

- [Viewing for router inputs](#)

Viewing content quality analysis for a flow

Prerequisites

You must have already enabled content quality analysis for the flow.

Procedure

You can view content quality warnings and alerts through the AWS Management Console, the AWS CLI, and the MediaConnect API.

Console

To check if content quality analysis is enabled

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the **Flows** screen, select the flow you want to inspect.
3. On the flow details page, choose the **Configuration** tab.
4. Under **Source monitoring configuration**, you can find the content quality analysis state.

To check if quality alerts are present

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the **Flows** screen, select the flow you want to inspect.
3. On the **Alerts** tab, alerts appear when content quality problems are detected in the flow source.

AWS CLI

To confirm if quality analysis metrics are enabled for a given flow, run the [describe-flow](#) command:

```
aws mediaconnect describe-flow --flow-arn FlowARN
```

The response shows which content quality analysis metrics are enabled:

```
{
  "Flow": {
    "FlowArn": "flowARN",
    ...
    "SourceMonitoringConfig": {
      "ContentQualityAnalysisState": "ENABLED",
      "AudioMonitoringSettings": [
        {
          "SilentAudio": {
            "State": "DISABLED",
            "ThresholdSeconds": 15
          }
        }
      ],
      "VideoMonitoringSettings": [
        {
          "BlackFrames": {
            "State": "DISABLED",
            "ThresholdSeconds": 10
          },
          "FrozenFrames": {
            "State": "ENABLED",
            "ThresholdSeconds": 5
          }
        }
      ]
    },
    ...
  }
}
```

The response also shows messages about any warnings or alerts that need your attention:

```
{
  ...
  "Messages": {
    "Errors": [
      "Monitoring Stream Alert: Audio Stream Missing. Please investigate the  
flow source.",
      "Monitoring Stream Alert: Video Stream Missing. Please investigate the  
flow source."
    ]
  }
}
```

```
}
```

Alternatively, if both audio and video streams are present but experiencing issues, you might see something like this:

```
{
  ...
  "Messages": {
    "Errors": [
      "Monitoring Stream Alert: Black frames detected for more than 30
seconds. Please investigate the flow source.",
      "Monitoring Stream Alert: Frozen frames detected for more than 30
seconds. Please investigate the flow source.",
      "Monitoring Stream Alert: Silent audio detected for more than 30
seconds. Please investigate the flow source."
    ]
  }
}
```

Note

These error messages are context-dependent. If an audio or video stream is missing, related quality alerts for that stream (such as silent audio or black/frozen frames) won't be triggered.

Viewing content quality analysis for a router input

Prerequisites

You must have already enabled content quality analysis for the router input.

Procedure

You can view content quality analysis status for router inputs through the AWS Management Console, the AWS CLI, and the MediaConnect API.

Console

To check content quality analysis status for a router input

1. Open the AWS Elemental MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.

2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to inspect.
4. Choose the **Monitoring** tab. The **Input content health** section displays the real-time status of each content quality analysis metric.

The **Monitoring** tab shows the following indicators:

- A dash (-) indicates that the metric is disabled.
- **Currently detected** indicates that a quality issue is actively being detected.
- **Recently detected** indicates that a quality issue was detected within the configured lookback period.
- **None detected** indicates that a quality issue was not detected within the configured lookback period.

You can configure the lookback period using the dropdown list next to the refresh button.

The **Router input messages** section displays any active content quality analysis alerts.

AWS CLI

To view content quality analysis settings and alerts for a router input, run the [get-router-input](#) command:

```
aws mediaconnect get-router-input --arn "routerInputARN"
```

The response shows the content quality analysis configuration and any active alerts:

```
{
  "RouterInput": {
    "Arn": "routerInputARN",
    ...
    "ContentQualityAnalysisConfiguration": {
      "ContentLevel": {
        "BlackFrames": {
          "State": "ENABLED",
          "ThresholdSeconds": 30
        },
        "FrozenFrames": {
```

```

        "State": "ENABLED",
        "ThresholdSeconds": 30
    },
    "SilentAudio": {
        "State": "ENABLED",
        "ThresholdSeconds": 30
    }
},
...
"Messages": [
    {
        "Code": "MONITORING_STREAM_ALERT",
        "Message": "Black frames detected for more than 30 seconds."
    }
]
}
}

```

Disabling content quality analysis

You can disable the content quality analysis feature without losing your previously configured settings for individual metrics. If you re-enable content quality analysis in the future, your custom thresholds are preserved.

Topics

- [Disabling for flows](#)
- [Disabling for router inputs](#)

Disabling content quality analysis for a flow

Prerequisites

You must have already enabled content quality analysis for the flow.

Procedure

You can disable content quality analysis through the AWS Management Console, the AWS CLI, and the MediaConnect API.

Console

To disable content quality analysis

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the **Flows** screen, select the flow for which you want to disable content quality analysis.
3. On the flow details page, choose the **Sources** tab.
4. In the **Source monitoring configuration** section, choose **Edit**.
5. In the **Content quality analysis** section, turn off the metrics you want to disable, or turn off all metrics by turning off **Content quality analysis state**.
6. Choose **Update** to save your changes.

AWS CLI

To disable all metrics

Run the [update-flow](#) command as shown in the following example:

```
aws mediaconnect update-flow \  
  --flow-arn "FlowARN" \  
  --source-monitoring-config ContentQualityAnalysisState=DISABLED
```

In the following example response, ContentQualityAnalysisState is disabled, but individual metric settings remain unchanged:

```
{  
  "Flow": {  
    "FlowArn": "<arn>",  
    ...  
    "SourceMonitoringConfig": {  
      "ContentQualityAnalysisState": "DISABLED",  
      "AudioMonitoringSettings": [  
        {  
          "SilentAudio": {  
            "State": "ENABLED",  
            "ThresholdSeconds": 30  
          }  
        }  
      ]  
    }  
  }  
}
```

```

    ],
    "VideoMonitoringSettings": [
      {
        "BlackFrames": {
          "State": "ENABLED",
          "ThresholdSeconds": 30
        },
        "FrozenFrames": {
          "State": "ENABLED",
          "ThresholdSeconds": 10
        }
      }
    ]
  }
}

```

To disable specific metrics

Run the [update-flow](#) command with the `--source-monitoring-config` parameter configured as shown in the following example. This example disables the two video metrics while preserving custom thresholds for future use:

```

aws mediaconnect update-flow \
  --flow-arn "fLowARN" \
  --source-monitoring-config '{"ContentQualityAnalysisState": "ENABLED",
    "VideoMonitoringSettings": [{
      "FrozenFrames": {"State": "DISABLED", "ThresholdSeconds": 10},
      "BlackFrames": {"State": "DISABLED", "ThresholdSeconds": 15}}],
    "AudioMonitoringSettings": [{
      "SilentAudio": {"State": "ENABLED", "ThresholdSeconds": 25}}]}'

```

Note the following:

- When `ContentQualityAnalysisState` is set to `DISABLED`, it takes precedence over individual metric settings. Individual metrics might show as `ENABLED`, but they are not active until you set `ContentQualityAnalysisState` back to `ENABLED`.
- Your previously configured thresholds are preserved when you disable metrics.

Disabling content quality analysis for a router input

Prerequisites

You must have already enabled content quality analysis for the router input.

Procedure

You can disable content quality analysis for a router input through the AWS Management Console, the AWS CLI, and the MediaConnect API.

Console

To disable content quality analysis for a router input

1. Open the AWS Elemental MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Router inputs**.
3. Select the router input that you want to update and choose **Edit**.
4. In the **Content quality analysis** section, turn off the metrics you want to disable, or turn off all metrics.
5. Choose **Save changes**.

AWS CLI

To disable all metrics for a router input

Run the [update-router-input](#) command with all metrics set to DISABLED:

```
aws mediaconnect update-router-input \
  --arn "routerInputARN" \
  --content-quality-analysis-configuration '{
    "ContentLevel": {
      "BlackFrames": {"State": "DISABLED", "ThresholdSeconds": 30},
      "FrozenFrames": {"State": "DISABLED", "ThresholdSeconds": 30},
      "SilentAudio": {"State": "DISABLED", "ThresholdSeconds": 30}
    }
  }'
```

To disable specific metrics for a router input

Run the [update-router-input](#) command and include all metrics. Set the metrics you want to disable to DISABLED and the metrics you want to keep to ENABLED. The following example disables video metrics while keeping audio monitoring active:

```
aws mediaconnect update-router-input \  
--arn "routerInputARN" \  
--content-quality-analysis-configuration '{  
  "ContentLevel": {  
    "BlackFrames": {"State": "DISABLED", "ThresholdSeconds": 30},  
    "FrozenFrames": {"State": "DISABLED", "ThresholdSeconds": 30},  
    "SilentAudio": {"State": "ENABLED", "ThresholdSeconds": 30}  
  }  
'
```

Viewing thumbnails of the source video

AWS Elemental MediaConnect can generate JPEG-format thumbnails of the video that is in the source in any type of flow except for CDI flows. The thumbnail provides a visual verification that the content contains video. You can view the thumbnails on the console or retrieve them programmatically.

How thumbnails are generated

When you have enabled thumbnails in a flow and when the flow is active, MediaConnect generates a JPEG thumbnail with a 480 x 270 resolution.

The rate for generating the thumbnail is as follows:

- The fastest possible rate is one image every second.
- The rate might be slower, depending on the characteristics of the source video. For example, one image every 6 seconds.

How thumbnails are displayed

As soon as the thumbnail is generated, MediaConnect displays it in the flow **Details** page, in the **Preview** section.

It also makes the thumbnail available as base 64 binary data. You can use an AWS API to work with the binary data programmatically. MediaConnect encrypts thumbnails during retrieval to the console Preview window or in transit for API responses.

The retrieval rate for thumbnails is as follows:

- The refresh rate for the MediaConnect console is every 2 seconds. If the rate is faster than the generation rate, the same thumbnail is displayed more than once on the console.
- The API retrieve rate is constrained by the [maximum TPS](#). This constraint only matters if you are trying to retrieve thumbnails for multiple flows.

If you are retrieving thumbnails for only one flow, there is no point retrieving the thumbnail more often than every second (the fastest possible generation rate).

Topic

- [Requirements for thumbnails](#)
- [Limit on thumbnails in MediaConnect](#)
- [Enabling and viewing thumbnails in the console](#)
- [Enabling and retrieving thumbnails programmatically](#)

Requirements for thumbnails

Requirements for the video source

For MediaConnect to successfully generate thumbnails, make sure that the video source meets the following requirements.

Resolution, frame size and frame rate	Video codec	Scan type	Profile and format	Level	Chroma sampling	Bit depth
Maximum 4K UHD at 60 FPS (2160p60)	AVC (H.264)	Progressive or interlaced	Baseline, Main, High, High 10, High 422,	1.0-5.2	4:2:0, 4:2:2	8 bit/10 bit

Resolution, frame size and frame rate	Video codec	Scan type	Profile and format	Level	Chroma sampling	Bit depth
			High 10 Intra, High 422 Intra			
	HEVC (H.265)	Progressive only	Main, Main 10, Main 422 10	1.0-5.2	4:2:0, 4:2:2	8 bit/10 bit
	MPEG-2 (H.262)	Progressive or interlaced	Simple, Main, 422	Low, Main, High1440, High	4:2:0, 4:2:2	8 bit/10 bit

Requirements for the flow

To successfully generate thumbnails, make sure that your flow meets the following requirements.

Characteristic of the flow	Requirement
Type of flows that support thumbnails	Any type of flow except CDI flows.
Maximum number of outputs that can be attached to the flow	10 If the flow exceeds this limit, then MediaConnect won't generate any thumbnails for this flow.
Maximum bitrate for all the outputs that are attached to the flow	400 Mbps If the flow exceeds this limit, then MediaConnect won't generate any thumbnails for this flow.

Limit on thumbnails in MediaConnect

There is a limit to the number of thumbnails that you can view or retrieve. This limit is the TPS (transactions per second). The thumbnails feature shares the global limits for MediaConnect. For more details, see [the section called “Limits for API requests”](#).

Enabling and viewing thumbnails in the console

You enable thumbnails separately in each flow. You can enable thumbnails when you are creating the flow, or you can enable them in an existing flow.

After you have enabled thumbnails, MediaConnect automatically starts to generate them whenever the flow is active.

Enabling when you create a flow

In the flow that you are creating, go to the **Source monitor configuration** section, and move the **Thumbnails state** slider to **Enabled**.

When you start the new flow, MediaConnect will start to generate thumbnails.

Enabling in an existing flow

1. On the left navigation bar, choose **Flows**. Select the flow by its name.
2. On the flow **Details** page, choose the **Sources** tab. In the **Source monitoring configuration** section, choose **Edit**.
3. Move the **Thumbnails state** slider to **Enabled**, then choose **Update**.

If the flow is currently active, MediaConnect starts to generate thumbnails. You can enable and disable the thumbnails as often as you want, when the flow is active or inactive.

Viewing thumbnails

When thumbnails are enabled in an active flow, MediaConnect automatically generates thumbnails and displays them in the flow **Details** page, in the **Preview** section.

If the flow becomes inactive, the thumbnail preview stops refreshing. After a few seconds, the preview is replaced by a message.

Viewing thumbnails on several flows

You might open several instances of the MediaConnect console, one instance for each active flow. You can do this, but if you enable thumbnails in all the instances, there might be issues with displaying thumbnails in one or more of the instances.

We recommend that you enable thumbnails on only one active flow at a time, and disable it on other active flows.

Disabling thumbnails

You can disable thumbnails on an active or inactive flow. If the flow is active, you don't have to stop it first.

Go to the flow **Details** page, choose the **Sources** tab, and move the **Thumbnails state** slider to **Disabled**. Then choose **Update**.

Enabling and retrieving thumbnails programmatically

You can use the AWS CLI to work with thumbnails programmatically. The following information assumes that you are familiar with the basics of using the AWS CLI. For information about the basics, see the [AWS CLI Command Reference](#).

You enable thumbnails separately in each flow. You can enable thumbnails when you first create a flow or you can enable them in an existing flow.

After thumbnails are active, MediaConnect automatically starts to generate them whenever the flow is active. It generates one thumbnail at most once every second. (For more information about the generation rate, see [the section called “How thumbnails are generated”](#).) You can retrieve the most recently generated thumbnail.

Enabling thumbnails

Use the `CreateFlow` or `UpdateFlow` command. This command is represented differently in different interfaces:

- In the AWS CLI, the commands are `create-flow` or `update-flow`.
- In the API, the command is an HTTP `POST` on `CreateFlow` or by an HTTP `PUT` on `UpdateFlow`.
- In the AWS SDKs, the command is represented by constructs that are suitable to that SDK language.

To enable thumbnails using the AWS CLI

Enter the `create-flow` or `update-flow` command. This example illustrates the `update-flow` command. Replace the ARN with your ARN.

```
aws mediaconnect update-flow
--flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow
--source-monitoring-config ThumbnailState=ENABLED
```

Retrieving thumbnails

To retrieve thumbnails with the AWS CLI, use the `DescribeFlowSourceThumbnail` command. This command is represented differently in different interfaces:

- In the AWS CLI, the command is `describe-flow-source-thumbnail`.
- In the API, the command is an HTTP `GET` on `Source-thumbnail`.
- In the AWS SDKs, the command is represented by constructs that are suitable to that SDK language.

To retrieve thumbnails using the AWS CLI

Enter the `describe-flow-source-thumbnail` command. Replace the ARN with your ARN.

```
aws mediaconnect describe-flow-source-thumbnail
--flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow
```

The response

The request results in a status code and a response.

- **Status code 200:** The request was processed successfully. This typically means that the response includes the flow source thumbnail in base64 encoding.

However, in some cases, MediaConnect might return a 200 status code even when a thumbnail couldn't be retrieved. In these situations, the response includes an error message explaining why the thumbnail couldn't be generated:

- `ThumbnailDecodeError`: The video source doesn't meet [the requirements](#), or there is no ingress traffic on the flow. Therefore, MediaConnect can't generate a thumbnail.

- **ThumbnailGenerationInProgress:** The thumbnail is still being generated. Wait a few seconds and try again.
- **ThumbnailSuppressed:** Typically this error occurs because the CPU and memory required to process the flow is currently high. If MediaConnect generated thumbnails now, the flow handling would slow down. Try again after a few seconds. If the problem persists, see the information in [the section called “Requirements for the flow”](#).
- **Status code 202:** The request is valid, but MediaConnect is still preparing the flow. As a result, a thumbnail can't be generated yet. Wait a few seconds and try again.
- **Status code 4xx:** The request isn't valid.
- **Status code 5xx:** The request is valid but MediaConnect couldn't fulfill the request.

Monitoring using source metadata

MediaConnect source metadata monitoring displays general information about the structure of the incoming media stream. Source metadata monitoring can be used with the MediaConnect console, API, AWS CLI, or SDK. For more information about the API, see [DescribeFlowSourceMetadata](#) and [GetRouterInputSourceMetadata](#) in the *MediaConnect API Reference*.

Note

If you are using more than one source for your flow or router input, source metadata is only displayed for the source currently used by the flow or router input.

Source metadata availability

Source metadata support depends on the source protocol and whether the source is attached to a flow or a router input.

Source metadata support by protocol

Source protocol	Flows	Router inputs
Transport stream	Supported	Supported
NDI®	Supported	Not supported

Viewing source metadata for a flow

View source metadata for a flow in the MediaConnect console, or by calling [DescribeFlowSourceMetadata](#). For the fields returned for each source protocol, see [the section called "Field reference"](#).

To view source metadata for a flow (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the **Flows** screen, select the flow you want to inspect.
3. Select the **Source metadata** tab.

You can also retrieve source metadata for a flow by using the AWS CLI. The following example shows the AWS CLI command and return value for a typical scenario.

To view source metadata for a flow (AWS CLI)

1. In the AWS CLI, use the `describe-flow-source-metadata` command with the `--flow-arn` option of the flow you want to inspect.

```
aws mediaconnect describe-flow-source-metadata --flow-arn arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow
```

2. The return value will contain the media information for the selected flow's source. The following is a generic example of the format of the return value. In this example, there are no messages to display.

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow",
  "Messages": [],
  "Timestamp": "2023-12-06T19:57:54Z",
  "TransportMediaInfo": {
    "Programs": [
      {
        "PcrPid": 1000,
        "ProgramNumber": 1,
        "ProgramPid": 2000,
        "ProgramName": "AwardsShow HD",
        "Streams": [
```

```

        {
            "Codec": "H264",
            "Color": {
                "Colorimetry": "BT709",
                "MatrixCoefficients": "BT709",
                "TransferCharacteristics": "BT709"
            },
            "FrameRate": "59.94",
            "FrameResolution": {
                "FrameHeight": 1080,
                "FrameWidth": 1920
            },
            "Pid": 256,
            "StreamType": "Video"
        },
        {
            "Channels": 1,
            "Codec": "AAC",
            "Pid": 257,
            "SampleRate": 50,
            "SampleSize": 16,
            "StreamType": "Audio"
        },
        {
            "StreamType": "Data",
            "Codec": "SCTE35",
            "Pid": 258
        }
    ]
},
"TsId": 100
}
}

```

Active alerts

The **Active alerts** section of the flow's **Source metadata** tab displays status messages about the flow's source. These messages correspond to the Messages field of the DescribeFlowSourceMetadata API/CLI response. If MediaConnect detects an issue or cannot retrieve the source stream metadata, an associated status message is displayed.

Example: source metadata alerts

When MediaConnect detects an issue while retrieving source metadata, it returns a status code and message in the Messages field of the response. For example, if a transport stream contains more programs than source metadata monitoring can display, the response includes an alert and returns only the first 50 programs. The following example shows the Messages field for this scenario.

```
{
  "FlowArn": "arn:aws:mediaconnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:AwardsShow",
  "Messages": [
    {
      "Code": "MediaInfoMonitoringTruncated",
      "Message": "Program limit (50) exceeded. Monitoring only the first 50 programs of 60 in the transport stream."
    }
  ],
  "Timestamp": "2023-12-06T19:57:54Z",
  "TransportMediaInfo": {
    "Programs": [
      {
        "PcrPid": 1000,
        "ProgramNumber": 1,
        "ProgramPid": 2000,
        "ProgramName": "AwardsShow HD",
        "Streams": [
          {
            "Codec": "H264",
            "FrameRate": "59.94",
            "FrameResolution": {
              "FrameHeight": 1080,
              "FrameWidth": 1920
            },
            "Pid": 256,
            "StreamType": "Video"
          }
        ]
      }
    ]
  }
}
```

Viewing source metadata for a router input

View source metadata for a router input in the MediaConnect console, or by calling [GetRouterInputSourceMetadata](#). For the fields returned, see [the section called "Field reference"](#).

To view source metadata for a router input (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. From the **Router inputs** screen, select the router input you want to inspect.
3. Select the **Monitoring** tab.
4. Expand the **Source metadata** section.

You can also retrieve source metadata for a router input by using the AWS CLI. The following example shows the AWS CLI command and return value for a typical scenario.

To view source metadata for a router input (AWS CLI)

1. In the AWS CLI, use the `get-router-input-source-metadata` command with the `--arn` option of the router input you want to inspect.

```
aws mediaconnect get-router-input-source-metadata --arn arn:aws:mediaconnect:us-east-1:111122223333:routerInput:a1b2c3d4e5f6
```

2. The return value contains the media information for the router input's source. The following is a generic example of the format of the return value. In this example, there are no messages to display.

```
{
  "Arn": "arn:aws:mediaconnect:us-east-1:111122223333:routerInput:a1b2c3d4e5f6",
  "Name": "StadiumFeed",
  "SourceMetadataDetails": {
    "SourceMetadataMessages": [],
    "Timestamp": "2023-12-06T19:57:54Z",
    "RouterInputMetadata": {
      "TransportStreamMediaInfo": {
        "Programs": [
          {
            "PcrPid": 1000,
            "ProgramNumber": 1,
            "ProgramPid": 2000,
```

```
"ProgramName": "StadiumFeed HD",
"Streams": [
    {
        "Codec": "H264",
        "Color": {
            "Colorimetry": "BT709",
            "MatrixCoefficients": "BT709",
            "TransferCharacteristics": "BT709"
        },
        "FrameRate": "59.94",
        "FrameResolution": {
            "FrameHeight": 1080,
            "FrameWidth": 1920
        },
        "Pid": 256,
        "StreamType": "Video"
    },
    {
        "Channels": 1,
        "Codec": "AAC",
        "Pid": 257,
        "SampleRate": 50,
        "SampleSize": 16,
        "StreamType": "Audio"
    },
    {
        "StreamType": "Data",
        "Codec": "SCTE35",
        "Pid": 258
    }
]
}
},
"TsId": 100
}
```

Example: source metadata alerts

When MediaConnect detects an issue while retrieving source metadata, it returns a status code and message in the `SourceMetadataMessages` field of the response. For example, if a transport stream contains more programs than source metadata monitoring can display, the response includes an alert and returns only the first 50 programs. The following example shows the `SourceMetadataMessages` field for this scenario.

```
{
  "Arn": "arn:aws:mediacconnect:us-east-1:111122223333:routerInput:a1b2c3d4e5f6",
  "Name": "StadiumFeed",
  "SourceMetadataDetails": {
    "SourceMetadataMessages": [
      {
        "Code": "MediaInfoMonitoringTruncated",
        "Message": "Program limit (50) exceeded. Monitoring only the first 50
programs of 60 in the transport stream."
      }
    ],
    "Timestamp": "2023-12-06T19:57:54Z",
    "RouterInputMetadata": {
      "TransportStreamMediaInfo": {
        "Programs": [
          {
            "PcrPid": 1000,
            "ProgramNumber": 1,
            "ProgramPid": 2000,
            "ProgramName": "StadiumFeed HD",
            "Streams": [
              {
                "Codec": "H264",
                "FrameRate": "59.94",
                "FrameResolution": {
                  "FrameHeight": 1080,
                  "FrameWidth": 1920
                },
                "Pid": 256,
                "StreamType": "Video"
              }
            ]
          }
          ...
        ]
      }
    }
  }
}
```



```
}  
  }  
} }
```

Source metadata field reference

The fields returned by source metadata monitoring depend on the protocol of the incoming source. This section describes the fields for each supported protocol.

Transport stream programs

Transport stream source metadata is available for both flows and router inputs.

The following fields describe the source's transport stream.

Transport stream ID

The transport stream ID of the source, from the Program Association Table (PAT).

The **programs** section contains information about the individual programs contained in the transport stream. This section contains the following fields:

Field	Details
Program number	The program number of the program.
Program PID	The program Packet Identifier (PID).
PCR PID	The Program Clock Reference (PCR) PID of the program.
Program name	The name of the program. The program name is sourced from the service name value in the Service Description Table (SDT).
Streams	The nested sections contain info about the video, audio, and data stream types.

The **streams** section is nested within each individual transport stream program. This section contains the following fields:

Field	Details
Stream type	The type of content that the stream contains. This value can be video, audio, data, or unknown.
Codec	The codec of the stream. This value will vary depending on the type of stream. Example: a video stream type might display a value of H264 while an audio stream type displays AAC.
PID	The Packet Identifier (PID) of the stream.
Frame rate	The frame rate of the video stream, displayed in frames-per-second (fps).
Frame resolution	The resolution of the video stream. In the console, this field will display the frame width followed by the frame height. Example: A frame width of 1920 and a frame height of 1080 is displayed in the console as 1920 x 1080. In the API/CLI response, the frame height and frame width are displayed as separate values.
Color	The color signaling of the video stream: colorimetry, transfer characteristics, and matrix coefficients. For information about the possible values, see the section called "Video color information" .
Channels	The number of channels in the audio stream.

Field	Details
Sample rate	The sample rate of the audio stream. In the API/CLI response, the sample rate is displayed in hertz (Hz). In the console, the sample rate is displayed in Hz, unless it exceeds 1000 Hz, then it is displayed in kilohertz (kHz).
Sample size	The sample size of the audio stream. The sample size is displayed in bits.

NDI® media streams

NDI source metadata is available for flows only. The **streams** section contains information about the individual media streams that make up the Network Device Interface (NDI®) source. This section contains the following fields:

Field	Details
Stream type	The type of content that the stream contains. This value can be video, audio, or data.
Codec	The codec of the stream.
Stream ID	A unique identifier for the media stream.
Scan mode	The method used to display video frames, such as progressive or interlace.
Frame rate	The frame rate of the video stream, in frames per second (fps).
Frame resolution	The resolution of the video stream. In the console, this field displays the frame width followed by the frame height, such as 1920 x 1080. In the API/CLI response, the frame width and frame height are separate values.

Field	Details
Color	The color signaling of the video stream: colorimetry, transfer characteristics, and matrix coefficients. For information about the possible values, see the section called “Video color information” .
Channels	The number of channels in the audio stream.
Sample rate	The sample rate of the audio stream, in hertz (Hz).

Video color information

Each video stream contains a nested color section, for both transport stream and NDI sources. Each value corresponds to a code point defined in [Recommendation ITU-T H.273](#) on the International Telecommunication Union (ITU) website. Each field appears only when the stream signals one of the values listed for that field.

Field	Details
Colorimetry	The color primaries of the video stream. This field can have one of the following values: • BT709 • BT470M • BT470BG • BT601 • SMPTE240M • GENERIC_FILM • BT2020 • SMPTE428 • SMPTE431 • SMPTE432

Field	Details
Transfer characteristics	The transfer function of the video stream. For example, BT2100_PQ and BT2100_HLG indicate high dynamic range (HDR) video. This field can have one of the following values: • BT709 • BT470M • BT470BG • BT601 • SMPTE240M • LINEAR • LOG100 • LOG316 • IEC61966_2_4 • BT1361_ECG • IEC61966_2_1 • BT2020_10 • BT2020_12 • BT2100_PQ • SMPTE428 • BT2100_HLG

Field	Details
Matrix coefficients	The matrix for deriving the luma and chroma signals from the RGB signals. This field can have one of the following values: • IDENTITY • BT709 • FCC • BT470BG • BT601 • SMPTE240M • YCGC0 • BT2020_NCL • BT2020_CL • SMPTE2085 • CHROMATICITY_DERIVED_NCL • CHROMATICITY_DERIVED_CL • BT2100_ICTCP • IPT_C2

Monitoring flow and source health

On the AWS Elemental MediaConnect console, you can monitor the health of your flows and their sources.

Flow health indicates if your flow is not connected due to an issue with an entitlement or encryption.

Source health indicates if your source is connected. If it is, the console shows Amazon CloudWatch metrics that provide the status of the source over a period of time.

Topics

- [Monitoring the health of a MediaConnect flow](#)

- [Monitoring the health of a MediaConnect source](#)

Monitoring the health of a MediaConnect flow

The **Alerts** tab on the MediaConnect console displays a list of alerts that occurred when you started or stopped the current flow. For the full list of alerts for a flow, see Amazon CloudWatch.

MediaConnect displays the following alerts on the **Alerts** tab:

- Contextual error messages about your flow, called [stream errors](#).
- The entitlement that this flow is based on is already in use. This occurs if you create more than one flow based on the same entitlement. If the one of those flows is already running, MediaConnect displays an alert if you try to start the second flow.
- The entitlement that this flow is based on no longer exists. This occurs if the account that granted the entitlement (the content originator) revokes the entitlement.
- The entitlement that this flow is based on does not have an active source. This occurs if the originator's flow is deleted or stopped. When you start your flow based on that entitlement, there is no content coming from the originator's flow.
- The decryption or encryption information for the flow isn't valid. This can happen for a number of reasons. For example, the decryption key doesn't match the type for the specified algorithm. Or, your flow is based on an entitlement that uses SPEKE encryption and MediaConnect can't contact the conditional access (CA) platform key provider.
- Your flow is based on an entitlement, and the content originator's flow already has the maximum number of outputs.

Stream errors

MediaConnect **Alerts** can also contain contextual errors for the flow's sources and outputs. These are called *stream errors* and follow a specific format.

- Source *source name* Stream Error: *error message*. Please investigate the flow source.
- Output *output name* Stream Error: *error message*. Please investigate the flow output.

The error message will provide more context for the issue and you can use it as an indicator of where to begin troubleshooting.

Example

If you received the following alert on a flow named *NationalBroadcast*:

Source *StudioFeed2* Stream Error: *CDI Configuration Error*. Please investigate the flow source.

This would indicate an error with the inbound CDI at the source. Specifically, your next step should be to verify the settings for the *StudioFeed2* source on the flow named *NationalBroadcast*. You would need to pay special attention to the CDI-specific source settings such as the **inbound port**, the **VPC interface** being used, and the **media streams**.

Viewing flow alerts

To view any active alerts (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow.
3. Choose the **Alerts** tab.

The service displays a list of alerts, if there are any, on the flow.

Monitoring the health of a MediaConnect source

In the AWS Elemental MediaConnect console, you can view Amazon CloudWatch metrics that show the health of the source over a period of time. Source health is reported with the following metrics:

- **Source bitrate** – The bitrate of the incoming video.
- **Total packets received** – The total number of packets that MediaConnect received.

To monitor the health of a source (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. On the **Flows** page, choose the name of the flow.
3. Choose the **Source** tab and view the status of your source. This includes:
 - The **Source health** field provides the current status of the source.
 - **Connected** indicates that the flow is connected successfully to its source.

- **Disconnected** indicates that the flow is not connected to its source. To resolve this issue, verify that the source is actually sending content. Also, check the source settings on the flow such as the allowlist CIDR and the protocol configuration.
- **The flow is inactive** indicates that the flow has not been started. To resolve this issue, [start the flow](#).
- **Error** indicates that MediaConnect doesn't have permission to communicate with CloudWatch. To resolve the error, you must sign in to the AWS Management Console as an entity that allows MediaConnect to get metric statistics from CloudWatch. For guidance, see [this example](#).
- The **Source health metrics** section is visible only if your source health is **Connected**. The charts show source bitrate and total packets received over the last hour. You can choose different time periods from the dropdown in the top-right corner of the section.

 Note

MediaConnect refreshes data from CloudWatch automatically every 1 minute, 5 minutes, or 30 minutes, depending on the time period that you chose. When the charts refresh, data is 1 minute behind real time.

Monitoring AWS Elemental MediaConnect with Amazon CloudWatch metrics

You can monitor AWS Elemental MediaConnect using CloudWatch, which collects raw data and processes it into readable, near real-time metrics. These metrics are kept for 15 months, so that you can access historical information and gain a better perspective on how your web application or service is performing. Most MediaConnect metrics can be accessed in periods as short as one second. You can also set alarms that watch for certain thresholds, and send notifications or take actions when those thresholds are met. For more information, see the [Amazon CloudWatch User Guide](#).

You can view CloudWatch metrics for your flows directly on the MediaConnect console. On the console, you can view these metrics in periods as short as one second or as long as 30 minutes.

Note

MediaConnect Gateway metrics are not available in high resolution periods (one second). You must select a period of at least one minute.

Definition of a metric for MediaConnect datapoints

AWS Elemental MediaConnect collects data that is the basis for metrics. It collects these *datapoints* every second and sends them immediately to Amazon CloudWatch. You can use CloudWatch to generate *metrics* for these datapoints.

A metric is a collection of datapoints that has had an aggregation (a *statistic*) applied and that has a *period* and a *time range*. For example, you can request the Dropped packets metric as an average (the statistic) for a 1 minute period over 10 minutes (the time range). This result of this request is 10 metrics (because the range divided by the period is 10).

Period

Most MediaConnect metrics have a *high resolution period*, which means that the minimum period is one second. MediaConnect Gateway metrics are the only metrics not available in a high resolution period.

Time range

Each period has a *maximum time range*. For example, if you specify 1 day as the time range, you won't be able to retrieve metrics with a 10 second period.

Period	Maximum time range
1 second	The last 3 hours
5 seconds	
10 seconds	
30 seconds	
60 seconds	The last 360 hours (15 days)

Period	Maximum time range
300 seconds (5 minutes)	The last 1512 hours (63 days)
900 seconds (15 minutes)	
3600 seconds (1 hour) or longer	The last 455 days (15 months)

Periods don't have a *minimum time range*. But there is a point where the statistic you apply becomes meaningless if you have a low period. For example, assume that you set the period to one second. This means that CloudWatch retrieves one datapoint. You can't obtain an average, a minimum or a maximum on one datapoint. However, this doesn't mean that the metric is meaningless. Instead, the metric is for the raw datapoint, with no statistic.

Maximum storage time

Metrics are available for the last 15 months. Make sure that you specify a period that allows the time range that you want.

Viewing metrics for a MediaConnect flow

You can view some metrics in the MediaConnect console. You can view all metrics in the CloudWatch console. You can also retrieve metrics using the CLI, the REST API, or any AWS SDK.

On the CloudWatch console, the minimum refresh rate for metrics is 30 seconds.

To view metrics on the MediaConnect console

You can view some metrics in the MediaConnect console. You can view the current metrics, going back from 1 hour to 1 week. (To view other metrics or to view historical metrics, you must use the CloudWatch console.)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Flows**. On the **Flows** page, choose the flow you want. The **Details** page appears.
3. Choose the **Health** tab. The metrics that MediaConnect supports on this tab appears.
4. Choose the period and time range. For example, **Past 1 day (5 min period)**.

To view metrics using the CloudWatch console

On the CloudWatch console you can view all MediaConnect metrics for any range of time — the current metrics or historical metrics. There is a charge to view metrics on the CloudWatch console.

1. Open the CloudWatch console at <https://console.aws.amazon.com/cloudwatch/>.
2. In the navigation pane, choose **Metrics**, then choose **All metrics**. In the bottom half of the page, the **Browse** tab shows cards with names.

No cards appear if you are completely new to AWS, and you haven't performed an action that creates metrics in any service.

3. Select the card that is named **AWS/MediaConnect**.

This card appears only if you have started at least one flow in the last 15 months in the AWS Region that is currently selected for CloudWatch. This card won't appear if you have never started a MediaConnect flow. In this case, come back to this procedure after you have created and started a flow.

(A card named **MediaConnect** might appear in the custom namespace section of the page. This card is for the old namespace for MediaConnect metrics. The two namespaces became duplicates of each other in September of 2022, so there is no advantage to choosing this card. Always choose **AWS/MediaConnect**.)

4. The **Browse** tab in the bottom half of the page now shows dimensions. Choose a metric dimension. For example, choose **Flow ARN**.

The **Browse** tab now shows a table with one column that shows the chosen dimension (for example, Flow ARN) and one column that shows all the metrics. You can sort the table.

5. Select one or more rows. As soon as you select a row, it appears in the graph in the top half of the page.
6. In the bottom half of the page, choose the **Graphed metrics** tab.
7. On the choices on the right of the tab, specify the **Statistic** and the **Period**.

When you choose the period, the graph refreshes to show the [maximum time range for that period](#). If the graph is now empty on the left, you can adjust the timeline in the choices at the top right of the graph. Choose a lower number so that the full space is filled up. For example, change **1w** to **1d**.

To view metrics using the AWS CLI

- At a command prompt, use the following command:

```
aws cloudwatch list-metrics --namespace "AWS/MediaConnect"
```

AWS Elemental MediaConnect metrics to monitor flow health

AWS Elemental MediaConnect sends metrics to CloudWatch. You can review specific metrics to evaluate the health of your flow. If the flow is unhealthy, these metrics can help you determine where the issue originates. For details about each metric, see the tables in this section.

For information about source metrics, see [Metrics to monitor flow source health](#).

Note

Metrics tracked by MediaConnect adhere to the standard as defined by the TR 101 290 spec.

Topics

- [Flow metrics](#)
- [TR 101 290 Priority 1 metrics](#)
- [TR 101 290 Priority 2 metrics](#)
- [Content quality metrics](#)
- [Maintenance metrics](#)

Flow metrics

The following table lists network metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
ARQRecovered	The number of dropped packets that were recovered by automatic repeat request (ARQ). This metric doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. For flows that have

Metric	Description
	multiple sources, use the SourceARQRecovered metric to view data for each source. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
ARQRequests	The number of retransmitted packets that were requested through automatic repeat request (ARQ) and received. This metric doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. For flows that have multiple sources, use the SourceARQRequests metric to view data for each source. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
BitRate	The bitrate of the incoming (source) video. Units: bits per second (bps) Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
Connected	The status of the source. A value of 1 indicates that the source is connected and a value of 0 (zero) indicates that the source is disconnected. This metric applies only to sources that use the Zixi, SRT, or RIST protocols. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows
ConsecutiveDrops	The number of data packets that were dropped in a row during transmission of data to or from MediaConnect. This metric applies only to sources that use the Zixi protocol. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
ConsecutiveNotRecovered	The number of data packets that were not recovered in a row. After a data packet is dropped, error correction attempts to recover that packet. This metric helps to identify extended periods of data packets that were dropped and not recovered. This metric applies only to sources that use the Zixi protocol. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
Disconnections	The number of times that the source status changed from connected to disconnected. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
DroppedPackets	The number of packets that were lost during transit. This value is measured before any error correction takes place. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
FailoverSwitches	The total number of times the flow switches back and forth between sources when using the <i>Failover</i> mode for source failover. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
FECPackets	The number of packets that were transmitted using forward error correction (FEC) and received. This metric applies only to flows that have one source that uses the RTP-FEC or Zixi protocols. It doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. For flows that have multiple sources, use the SourceFECPackets metric to view data for each source. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
FECRecovered	The number of packets that were transmitted using forward error correction (FEC), lost during transit, and recovered. This metric applies only to flows that have one source that uses the RTP-FEC or Zixi protocols. It doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. For flows that have multiple sources, use the SourceFEC Recovered metric to view data for each source. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
MergeActive	The merge status of all sources on the flow. A value of 1 indicates that all sources are merged. A value of 0 (zero) indicates that at least one source is not actively merged with 2022-7. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows
MergeLatency	The maximum value for SourceMergeLatency. Units: Milliseconds Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
NotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
OverflowPackets	The number of packets that were lost in transit because the video required more buffer than was available. This metric doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
PacketLossPercent	The percentage of packets that were lost during transit, even if they were recovered. Units: Percent Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
Recovered Packets	The number of packets that were lost during transit, but recovered. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
RoundTrip Time	The amount of time it takes for the source to send a signal and receive an acknowledgment from AWS Elemental MediaConnect. This metric doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. For flows that have multiple sources, use the SourceRoundTripTime metric to view data for each source. Units: Milliseconds Valid dimensions: • Flow ARN • Availability Zone • All flows
TotalPackets	The total number of packets that were received. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

TR 101 290 Priority 1 metrics

The following table lists TR 101 290 Priority 1 metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
ContinuityCounter	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimensions: - Flow ARN - Availability Zone - All flows
PATError	The number of times that a program association table (PAT) error occurred. This error indicates that the PAT is missing. The PAT lists the programs that are available in a transport stream (TS) and points to the program map tables (PMTs). The decoder needs the PAT to do its job. Units: Count Valid dimensions: - Flow ARN - Availability Zone - All flows
PIDError	The number of times that a packet identifier (PID) error occurred. This error indicates that a PID is missing its associated data stream. The PIDs are identifiers that provide the location of the video, audio, and data streams. This error can occur after the transport stream has been multiplexed and then remultiplexed. Units: Count

Metric	Description
	Valid dimensions: • Flow ARN • Availability Zone • All flows
PMTError	The number of times that a program map table (PMT) error occurred. This error happens when the PMT is not received at least every 500 milliseconds (ms). Each PMT contains a list of PIDs, which help decoders reassemble data. The decoder needs the PMTs to do its job. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
TSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
TSSyncLoss	The number of times that a TS sync loss error occurred. This error happens after two or more consecutive TS byte errors. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

TR 101 290 Priority 2 metrics

The following table lists TR 101 290 Priority 2 metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
CATError	The number of times that a conditional access table (CAT) error occurred. This error indicates that the CAT is not present. The CAT tells the integrated receiver decoder (IRD) where to find management messages for the conditional access (CA) systems that are in use. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
CRCErrror	The number of times that a cyclic redundancy check (CRC) error occurred. This error happens when a CRC determines that data is corrupted. Units: Count

Metric	Description
	Valid dimensions: • Flow ARN • Availability Zone • All flows
PCRAccuracyError	The number of times that a program clock register (PCR) accuracy error occurred. This error happens when the value of the transmitted PCR differs from what is expected by more than 500 nanoseconds (ns). When a stream is encoded, the encoder assigns periodic PCR values of the encoder's program clock. The decoder relies on these values to ensure that the stream is kept in sync. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
PCRError	The number of times that a PCR error occurred. This error happens when PCR values are not sent frequently enough. The service relies on consistent, frequent PCRs to reset the local 27 MHz system clock. Although the error occurs when the interval exceeds 100 milliseconds (ms), best practices dictate that PCRs should be received at least every 40 ms. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
PTSError	The number of times that a presentation timestamp (PTS) error occurred. This error happens when a presentation timestamp (PTS) is not received at least every 700 ms. This can occur if the PTS is sent less frequently or not at all. The most common cause of this error is when the transport stream (TS) is scrambled. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows
Transport Error	The number of times that a primary transport error occurred. This error indicates that the TS packet is unusable. When this error occurs, ignore all other TR 101 290 errors for this packet. Units: Count Valid dimensions: • Flow ARN • Availability Zone • All flows

Content quality metrics

The following table lists the content quality metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
AudioStreamMissing	Monitors instances when the expected audio stream is not detected in the content. A value of 1 indicates that the audio stream is missing from the source.

Metric	Description
	Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows
BlackFramesBreaching	Monitors instances when the duration of black frames in the video exceeds the specified threshold. A value of 1 indicates that the duration is breaching the specified threshold and a value of 0 (zero) indicates that the duration is not breaching the specified threshold. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows
FrozenFramesBreaching	Monitors instances when the video remains unchanged for longer than the specified threshold. A value of 1 indicates that the duration is breaching the specified threshold and a value of 0 (zero) indicates that the duration is not breaching the specified threshold. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows

Metric	Description
SilentAudioBreaching	Monitors instances when the duration of silent audio exceeds the specified threshold. A value of 1 indicates that the duration is breaching the specified threshold and a value of 0 (zero) indicates that the duration is not breaching the specified threshold. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows
TimecodePresent	Indicates whether a valid timecode is present in the media stream. A value of 1 indicates that a valid timecode is present in the media stream and a value of 0 (zero) indicates that a valid timecode is not present in the media stream. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows
VideoStreamMissing	Monitors instances when the expected video stream is absent from the content. A value of 1 indicates that the video stream is missing from the source. Units: None Valid dimensions: • Flow ARN • Availability Zone • All flows

Maintenance metrics

The following table lists flow maintenance metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
MaintenanceCanceled	Maintenance for this flow is cancelled by MediaConnect. Units: Count Valid dimensions: - Flow ARN - All flows
MaintenanceFailed	Maintenance did not complete successfully for this flow. Units: Count Valid dimensions: - Flow ARN - All flows
MaintenanceRescheduled	MediaConnect is unable to perform maintenance at the previously scheduled date and time. A new date and time has been automatically assigned by MediaConnect for this flow's maintenance. Units: Count Valid dimensions: - Flow ARN - All flows
MaintenanceScheduled	Maintenance is scheduled for the flow. Units: Count Valid dimensions:

Metric	Description
	- Flow ARN - All flows
MaintenanceStarted	Maintenance has started and is currently in progress for this flow. Units: Count Valid dimensions: - Flow ARN - All flows
MaintenanceSucceeded	Maintenance completed successfully for this flow. Units: Count Valid dimensions: - Flow ARN - All flows

AWS Elemental MediaConnect metrics to monitor flow source health

AWS Elemental MediaConnect sends metrics to CloudWatch. You can review specific metrics to evaluate the health of the source of your flow. If the flow is unhealthy, these metrics can help you determine whether the issue originates with the source. For details about each metric, see the tables in this section.

For information about flow metrics, see [Metrics to monitor flow health](#).

Note

Metrics tracked by MediaConnect adhere to the standard as defined by the TR 101 290 spec.

Topics

- [Source metrics for transport stream protocols](#)
- [Source metrics for NDI®](#)
- [Source metrics for CDI](#)
- [Source metrics for router connections](#)
- [TR 101 290 Priority 1 metrics](#)
- [TR 101 290 Priority 2 metrics](#)

Source metrics for transport stream protocols

The following table lists source metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
SourceARQ Recovered	The number of dropped packets that were recovered by automatic repeat request (ARQ). This metric applies to sources that use the RIST, Zixi, or SRT protocol. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceARQ Requests	The number of retransmitted packets that were requested through automatic repeat request (ARQ) and received. This metric applies to sources that use the RIST, Zixi, or SRT protocol. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimensions: • Source ARN • Flow ARN

Metric	Description
	• Availability Zone • All flows
SourceBitRate	The bitrate of the incoming (source) video. Units: bits per second (bps) Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows Note Both MediaConnect and the Zixi protocol use bandwidth optimization techniques that can affect bitrate measurements: • In flows with Zixi sources, Zixi often optimizes network usage by substituting repetitive content packets with null packets. • For entitlements, MediaConnect performs similar optimization between the content originator's flow and the subscriber's flow. For example, in a 30 Mbps stream with repetitive content (like a black slate), either optimization might reduce the bitrate to 5 Mbps. These bitrate fluctuations are normal and don't affect content quality, but they might be noticeable in your bitrate monitoring. We recommend that you monitor source health as a combination of <code>SourceBitRate</code> and other metrics such as <code>SourceContinuityCounter</code> and <code>SourceNotRecoveredPackets</code>.

Metric	Description
SourceConnected	The status of the source. A value of 1 indicates that the source is connected and a value of 0 (zero) indicates that the source is disconnected. This metric applies only to sources that use the Zixi or SRT protocol. Units: None Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceDisconnections	The number of times that the source status changed from connected to disconnected. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceDroppedPackets	The number of packets that were lost during transit. This value is measured before any error correction takes place. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceFEC Packets	The number of packets that were transmitted using forward error correction (FEC) and received. This metric applies only to sources that use the RTP-FEC or Zixi protocols. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceFEC Recovered	The number of packets that were transmitted using forward error correction (FEC), lost during transit, and recovered. This metric applies only to sources that use the RTP-FEC or Zixi protocols. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceMergeActive	An indication of the status of the source with respect to other sources. This metric is useful when the flow has multiple sources for failover and you are using the Merge failover mode. A value of 1 indicates that the flow has multiple sources and that this source is actively in use, with 2022-7 merge. A value of 0 (zero) indicates that the flow is not using the source to form the stream. Units: None Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceSelected	An indication if a source is being used as the input for flow ingest. This metric applies if your flow uses source failover, and the failover mode is set to <i>Failover</i>. A value of 1 indicates that the source is being used as the input. A value of 0 (zero) indicates that the flow is being used as the backup stream. Units: None Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceMergeLatency	The amount of time that this source trails the primary source. If this source is the primary source, the value is 0 (zero). Units: Milliseconds Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceMergeStatusWarningMismatch	A status metric warning that the flow is receiving mismatched sources. This means that any dropped packets will not be recovered and will result in poor network reliability. This metric only applies to sources using merge mode failover. Merge mode failover requires both sources to be <i>binary identical</i>. To be binary identical, the sources must originate from the same encoder. This will ensure the sources can share missing packets, as the packets are identical . Units: None Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceMergeStatusWarningSolo	A status metric warning that the flow is only receiving one source. This means any dropped packets will not be recovered and will result in poor network reliability. This metric only applies to sources using merge mode failover. Units: None Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceMissingPackets	A packet was missing from both source streams, this means the packet could not be recovered. This metric only applies to sources using merge mode failover. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceOverflowPackets	The number of packets that were lost in transit because the video required more buffer than was available. This metric doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourcePacketLossPercent	The percentage of packets that were lost during transit, even if they were recovered. Units: Percent Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceRecoveredPackets	The number of packets that were lost during transit, but recovered. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceRoundTripTime	The amount of time it takes for the source to send a signal and receive an acknowledgment from AWS Elemental MediaConnect. This metric applies to sources that use the RIST, Zixi, or SRT protocol. It doesn't apply to flows that receive content from an entitlement. Units: Milliseconds Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceTotalPackets	The total number of packets that were received. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceTotalBytes	Total amount of bytes transferred to MediaConnect from the source. Units: Bytes Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceConsecutiveDrops	The number of data packets that were dropped in a row during transmission of data to MediaConnect. This metric applies only to sources that use the Zixi protocol. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceConsecutiveNotRecovered	The number of data packets that were not recovered in a row. After a data packet is dropped, error correction attempts to recover that packet. This metric helps to identify extended periods of data packets that were dropped and not recovered. This metric applies only to sources that use the Zixi protocol. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceJitter	The current network jitter, measured in milliseconds. Network jitter is a measurement of changes in latency. An increase in network jitter indicates inconsistency in the latency and can negatively impact quality. Units: milliseconds (ms) Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceLatency	The stream latency of the source. Latency is the time it takes for data packets to travel from your source to MediaConnect. Units: milliseconds (ms) Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceUptime	The number of seconds that the source has been active. If the source is disconnected or has a connection timeout, this metric resets to zero. Units: Seconds Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Source metrics for NDI®

The following table lists NDI source metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
SourceAudioFrames	The number of audio frames received by the NDI source. This metric applies to NDI sources only. Units: Count

Metric	Description
	Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceConnected	The status of the source. A value of 1 indicates that the source is connected to an NDI sender and a value of 0 (zero) indicates that the source is disconnected. Units: None Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceDiscoveredSources	The total number of available NDI senders discovered by the NDI source. This metric applies to NDI sources only. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceVideoFrames	The number of video frames received by the NDI source. This metric applies to NDI sources only. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Source metrics for CDI

The following table lists CDI source metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
SourceDroppedPayloads	Payloads that were lost during transit to MediaConnect from the source. A payload is a frame of video or an audio sample. Payloads can consist of multiple packets. Payload metrics are only applicable when using CDI. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceLatePayloads	Packets of a payload that arrive outside of the configured Max sync buffer time frame. A payload is a frame of video or an audio sample. Payloads can

Metric	Description
	consist of multiple packets. Payload metrics are only applicable when using CDI. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceTotalPayloads	Total amount of payloads delivered to MediaConnect from the source. A payload is a frame of video or an audio sample. Payloads can consist of multiple packets. Payload metrics are only applicable when using CDI. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Source metrics for router connections

The following table lists source metrics that AWS Elemental MediaConnect sends to CloudWatch when a flow source receives content from a router output.

Metric	Description
SourceBitRate	The bitrate of the incoming (source) video. Units: bits per second (bps)

Metric	Description
	Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceContinuityCounter	The number of continuity counter errors in the transport stream. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceLatency	The stream latency of the source. Latency is the time it takes for data packets to travel from the source to MediaConnect. Units: Milliseconds Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceRecoveredPackets	The number of packets that were recovered through retransmission. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceTotalPackets	The total number of packets that were received. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceUpTime	The number of seconds that the source has been active. If the source is disconnected or has a connection timeout, this metric resets to zero. Units: Seconds Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

In addition to the preceding metrics, all TR 101 290 Priority 1 and Priority 2 metrics are also published for router-connected sources. For details about those metrics, see [TR 101 290 Priority 1 metrics](#) and [TR 101 290 Priority 2 metrics](#).

TR 101 290 Priority 1 metrics

The following table lists TR 101 290 Priority 1 metrics that AWS Elemental MediaConnect sends to CloudWatch.

These metrics apply only to transport stream protocols.

Metric	Description
SourceContinuityCounter	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourcePAT Error	The number of times that a program association table (PAT) error occurred. This error indicates that the PAT is missing. The PAT lists the programs that are available in a transport stream (TS) and points to the program map tables (PMTs). The decoder needs the PAT to do its job. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourcePID Error	The number of times that a packet identifier (PID) error occurred. This error indicates that a PID is missing its associated data stream. The PIDs are identifiers that provide the location of the video, audio, and data streams. This error can occur after the TS has been multiplexed and then remultiplexed. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourcePMT Error	The number of times that a program map table (PMT) error occurred. This error happens when the PMT is not received at least every 500 milliseconds (ms). Each PMT contains a list of PIDs, which help decoders reassemble data. The decoder needs the PMTs to do its job. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourceTSB yteError	The number of times that a TS byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceTSSyncLoss	The number of times that a TS sync loss error occurred. This error happens after two or more consecutive TS byte errors. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

TR 101 290 Priority 2 metrics

The following table lists TR 101 290 Priority 2 metrics that AWS Elemental MediaConnect sends to CloudWatch.

These metrics apply only to transport stream protocols.

Metric	Description
SourceCATError	The number of times that a conditional access table (CAT) error occurred. This error indicates that the CAT is not present. The CAT tells the integrated receiver decoder (IRD) where to find management messages for the conditional access (CA) systems that are in use. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceCRC Error	The number of times that a cyclic redundancy check (CRC) error occurred. This error happens when a CRC determines that data is corrupted. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourcePCR AccuracyE rror	The number of times that a program clock register (PCR) accuracy error occurred. This error happens when the value of the transmitted PCR differs from what is expected by more than 500 nanoseconds (ns). When a stream is encoded, the encoder assigns periodic PCR values from the encoder's program clock. The decoder relies on these values to ensure that the stream is kept in sync. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourcePCR Error	The number of times that a PCR error occurred. This error happens when PCR values are not sent frequently enough. The service relies on consistent, frequent PCRs to reset the local 27 MHz system clock. Although the error occurs when the interval exceeds 100 milliseconds (ms), best practices dictate that PCRs should be received at least every 40 ms. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows
SourcePTS Error	The number of times that a presentation timestamp (PTS) error occurred. This error happens when a presentation timestamp (PTS) is not received at least every 700 ms. This can occur if the PTS is sent less frequently or not at all. The most common cause of this error is when the TS is scrambled. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

Metric	Description
SourceTransportError	The number of times that a primary transport error occurred. This error indicates that the TS packet is unusable. When this error occurs, ignore all other TR 101 290 errors for this packet. Units: Count Valid dimensions: • Source ARN • Flow ARN • Availability Zone • All flows

AWS Elemental MediaConnect metrics to monitor flow output health

AWS Elemental MediaConnect sends metrics to CloudWatch. You can review specific metrics to evaluate the health of the output of your flow.

Topics

- [Output metrics for transport stream protocols](#)
- [Output metrics for NDI®](#)
- [Output metrics for CDI protocols](#)
- [Output metrics for router connections](#)

Output metrics for transport stream protocols

Metric	Description
Connected Outputs	The number of outputs that are currently connected. This metric applies to outputs that use the Zixi or SRT protocol. Units: Count

Metric	Description
	Valid dimensions: • Flow ARN • Availability Zone • All flows
OutputARQ Requests	The number of retransmitted packets that were requested through automatic repeat request (ARQ) and received. This metric applies to outputs that use the SRT protocol or output to MediaLive. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

Metric	Description
OutputBitRate	The bitrate of the outgoing (output) video. This metric applies to outputs that use the SRT protocols or output to MediaLive. Units: bits per second (bps) Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows  Note Both MediaConnect and the Zixi protocol use bandwidth optimization techniques that can affect bitrate measurements: • In flows with Zixi outputs, Zixi often optimizes network usage by substituting repetitive content packets with null packets. • For entitlements, MediaConnect performs similar optimization between the content originator's flow and the subscriber's flow. For example, in a 30 Mbps stream with repetitive content (like a black slate), either optimization might reduce the bitrate to 5 Mbps. These bitrate fluctuations are normal and don't affect content quality, but they might be noticeable in your bitrate monitoring. Additionally, the <code>OutputBitRate</code> value can vary depending on the selected protocol due to non-payload packets, retransmitted packets, packet headers, and other protocol-specific packets. Due to these factors, the bitrate value reported by this metric might vary between outputs.

Metric	Description
OutputConnected	The status of the output. A value of 1 indicates that the output is connected, and a value of 0 (zero) indicates that the output is disconnected. This metric applies to outputs that use the Zixi or SRT protocol. Units: None Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputDisconnections	The number of times that the output status changed from connected to disconnected. This metric applies to outputs that use the Zixi or SRT protocol. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

Metric	Description
OutputNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. This metric applies to outputs to MediaLive. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputResentPackets	The number of packets that were retransmitted to the output destination. This metric applies to outputs that use the SRT protocol or output to MediaLive. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

Metric	Description
OutputRoundTripTime	The amount of time it takes for the output to send a signal and receive an acknowledgment from the output destination. This metric applies to outputs that use the SRT protocol or output to MediaLive. Units: Milliseconds Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputTotalPackets	The total number of packets that were sent to the output. This metric applies to outputs that use the SRT protocols or output to MediaLive. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

Output metrics for NDI®

Metric	Description
OutputConnectedReceivers	The number of NDI receivers that are connected to the flow output. This metric applies to NDI outputs only. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputGeneratedAudioSamples	The number of audio samples that are sent to each individual NDI receiver. This metric applies to NDI outputs only. This metric is published even if no receivers are currently connected. If multiple receivers are connected, keep in mind this value represents the number sent to each receiver, not the total across all receivers. The value is not multiplied based on the number of receivers. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputGeneratedVideoFrames	The number of video frames that are sent to each individual NDI receiver. This metric applies to NDI outputs only.

Metric	Description
	This metric is published even if no receivers are currently connected. If multiple receivers are connected, keep in mind this value represents the number sent to each receiver, not the total across all receivers. The value is not multiplied based on the number of receivers. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

Output metrics for CDI protocols

Metric	Description
OutputDroppedPayloads	Payloads that were lost during transit from MediaConnect to the output. A payload is a frame of video or an audio sample. Payloads can consist of multiple packets. Payload metrics are only applicable when using CDI. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputLatePayloads	Packets of a payload that arrive at the output outside of MediaConnect's internal buffer. A payload is a frame of video or an audio sample. Payloads can consist of multiple packets. Payload metrics are only applicable when using CDI.

Metric	Description
	Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputTotalBytes	Total amount of bytes transferred from MediaConnect to the output. This metric is only applicable when using CDI. Units: Bytes Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputTotalPayloads	Total amount of payloads delivered from MediaConnect to the output. A payload is a frame of video or an audio sample. Payloads can consist of multiple packets. Payload metrics are only applicable when using CDI. Units: Count Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

Output metrics for router connections

The following table lists source metrics that MediaConnect sends to CloudWatch when a flow output sends content to a router input.

Metric	Description
OutputEnabled	The status of the output. A value of 1 indicates that the output is enabled, and a value of 0 (zero) indicates that the output is disabled. Units: None Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows
OutputBitRate	The bitrate of the outgoing (output) video. Units: bits per second (bps) Valid dimensions: • Output ARN • Flow ARN • Availability Zone • All flows

AWS Elemental MediaConnect metrics to monitor router input health

AWS Elemental MediaConnect sends metrics to CloudWatch. You can review specific metrics to evaluate the health of your router inputs. For details about each metric, see the tables in this section.

For information about flow metrics, see [Metrics to monitor flow health](#).

Topics

- [Router input metrics](#)
- [Content quality metrics for router inputs](#)
- [Failover metrics for router inputs](#)
- [Merge metrics for router inputs](#)
- [Router input metrics for MediaConnect flow connections](#)

Router input metrics

The following table lists router input metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
RouterInputARQRequests	The number of retransmitted packets that were requested through automatic repeat request (ARQ). Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: RIST, SRT
RouterInputBitRate	The bitrate of the payload, not including protocol overhead. Units: bits per second (bps) Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone

Metric	Description
	Protocols: All
RouterInputCCErrors	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All
RouterInputConnected	The status of the input. A value of 1 indicates that the input is connected, and a value of 0 (zero) indicates that the input is disconnected. Units: None Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: SRT

Metric	Description
RouterInputDisconnections	The number of times that the input status changed from connected to disconnected. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: SRT
RouterInputFEC packets	The number of forward error correction packets. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: RTP/FEC

Metric	Description
RouterInputJitter	The jitter measurement specific to the protocol being used. Units: Milliseconds Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: RIST, SRT
RouterInputLatency	The recovery latency of the input stream. Units: Milliseconds Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: RIST, SRT, RTP/FEC

Metric	Description
RouterInputNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All
RouterInputRecoveredPackets	The number of packets that were recovered through retransmission. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
RouterInputRejections	The number of times the connection was rejected by the peer. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: SRT
RouterInputRoundTripTime	The amount of time it takes for the input to send a signal and receive an acknowledgment. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
RouterInputTotalPackets	The total number of packets received by the input. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All
RouterInputTR101PCRAccuracyError	The number of PCR accuracy errors in the transport stream. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
RouterInputTR101TSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All
RouterInputTR101TSSyncLoss	The number of transport stream sync loss errors. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All

Metric	Description
RouterInputUptime	The amount of time the input has been receiving data. Units: Seconds Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Content quality metrics for router inputs

The following table lists the content quality metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
RouterInputAudioStreamMissing	Monitors instances when the expected audio stream is not detected in the content. A value of 1 indicates that the audio stream is missing from the router input and a value of 0 (zero) indicates that the audio stream is present. Units: None Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone
RouterInputBlackFrame	Monitors instances when the duration of black frames in the video exceeds the specified threshold. A value of 1 indicates that the duration is breaching

Metric	Description
RouterInputFramesBreaching	the specified threshold and a value of 0 (zero) indicates that the duration is not breaching the specified threshold. Units: None Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone
RouterInputFrozenFramesBreaching	Monitors instances when the video remains unchanged for longer than the specified threshold. A value of 1 indicates that the duration is breaching the specified threshold and a value of 0 (zero) indicates that the duration is not breaching the specified threshold. Units: None Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone
RouterInputSilentAudioBreaching	Monitors instances when the duration of silent audio exceeds the specified threshold. A value of 1 indicates that the duration is breaching the specified threshold and a value of 0 (zero) indicates that the duration is not breaching the specified threshold. Units: None Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone

Metric	Description
RouterInputTimecodePresent	Indicates whether a valid timecode is present in the media stream. A value of 1 indicates that a valid timecode is present in the media stream and a value of 0 (zero) indicates that a valid timecode is not present in the media stream. Units: None Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone
RouterInputVideoStreamMissing	Monitors instances when the expected video stream is absent from the content. A value of 1 indicates that the video stream is missing from the router input and a value of 0 (zero) indicates that the video stream is present. Units: None Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone

Failover metrics for router inputs

When you configure a router input for failover, MediaConnect collects two sets of metrics: aggregate metrics for the overall router input, as well as source-level metrics to track the individual failover sources.

Aggregate failover metrics

These metrics give you a view of the failover router input's performance.

Metric	Description
<code>RouterInputFailoverActiveSource</code>	Index of the currently active source. Units: None Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All
<code>RouterInputFailoverSwitches</code>	The total number of times the router input has switched sources. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: Protocols: All
<code>RouterInputPostFailoverBitRate</code>	The bitrate of the payload after failover, not including protocol overhead. Units: bits per second (bps) Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
<code>RouterInputPostFailoverCCErrors</code>	The number of continuity errors in the transport stream after failover. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All
<code>RouterInputPostFailoverNotRecoveredPackets</code>	The number of unrecovered packets after failover. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All
<code>RouterInputPostFailoverRecoveredPackets</code>	The number of recovered packets after failover. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
<code>RouterInputPostFailoverTR101PCRAccuracyError</code>	The number of PCR accuracy errors in the transport stream after failover. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All
<code>RouterInputPostFailoverTR101TSByteError</code>	The number of times that a transport stream byte error occurred after failover. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All

Metric	Description
<code>RouterInputPostFailoverTR101TSSyncLoss</code>	The number of transport stream sync loss errors after failover. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All

Source-level failover metrics

For router inputs that are configured for failover, the basic router input metrics are also available with an additional `RouterInputFailoverSourceIndex` dimension. This enables you to monitor the performance of the first failover source (`RouterInputFailoverSourceIndex=0`) and the second failover source (`RouterInputFailoverSourceIndex=1`) separately.

Metric	Description
<code>RouterInputARQRequests</code>	The number of retransmitted packets that were requested through automatic repeat request (ARQ). Units: Count Valid dimensions: • RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone • RouterInputARN, RouterInputFailoverSourceIndex • AvailabilityZone Protocols: RIST, SRT

Metric	Description
RouterInputBitRate	The bitrate of the payload, not including protocol overhead. Units: bits per second (bps) Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All
RouterInputCCErrors	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All

Metric	Description
RouterInputConnected	The status of the input. A value of 1 indicates that the input is connected, and a value of 0 (zero) indicates that the input is disconnected. Units: None Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: SRT
RouterInputDisconnections	The number of times that the input status changed from connected to disconnected. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: SRT

Metric	Description
RouterInputFECPackets	The number of forward error correction packets. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: RTP/FEC
RouterInputJitter	The jitter measurement specific to the protocol being used. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: RIST, SRT

Metric	Description
RouterInputLatency	The recovery latency of the input stream. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All
RouterInputNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All

Metric	Description
RouterInputRecoveredPackets	The number of packets that were recovered through retransmission. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All
RouterInputRejections	The number of times the connection was rejected by the peer. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: SRT

Metric	Description
RouterInputRoundTripTime	The amount of time it takes for the input to send a signal and receive an acknowledgment. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All
RouterInputTotalPackets	The total number of packets received by the input. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All

Metric	Description
RouterInputTR101PCRAccuracyError	The number of PCR accuracy errors in the transport stream. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All
RouterInputTR101TSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All

Metric	Description
RouterInputTransportSyncLoss	The number of transport stream sync loss errors. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All
RouterInputUptime	The amount of time the input has been receiving data. Units: Seconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputFailoverSourceIndex, AvailabilityZone - RouterInputARN, RouterInputFailoverSourceIndex - AvailabilityZone Protocols: All

Merge metrics for router inputs

Similar to failover, when you configure a router input for merge, MediaConnect provides both aggregate and source-level metrics.

Aggregate merge metrics

These metrics give you a high-level, overall view of the merge input's performance. They include data that applies to the entire merge configuration, without differentiating between the two merge sources.

Metric	Description
RouterInputMergeActive	The merge status of all router input sources. A value of 1 indicates that all sources are merged. A value of 0 (zero) indicates that at least one source is not actively merged with 2022-7. Units: None Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: RTP, RIST
RouterInputMergeSkew	Maximum time skew between the two router input sources. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: RTP, RIST
RouterInputPostMergeBitRate	The bitrate of the payload after merge, not including protocol overhead. Units: bits per second (bps) Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone

Metric	Description
	Protocols: RTP, RIST
RouterInputPostMergeCCErrors	The number of continuity errors in the transport stream after merge. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: RTP, RIST
RouterInputPostMergeNotRecoveredPackets	The number of unrecovered packets after merge. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: RTP, RIST

Metric	Description
RouterInputPostMergeRecoveredPackets	The number of recovered packets after merge. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: RTP, RIST
RouterInputPostMergeTR101PCRAccuracyError	The number of PCR accuracy errors in the transport stream after merge. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
<code>RouterInputPostMergeTR101TSByteError</code>	The number of times that a transport stream byte error occurred after merge. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All
<code>RouterInputPostMergeTR101TSSyncLoss</code>	The number of transport stream sync loss errors after merge. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone • RouterInputARN • AvailabilityZone Protocols: All

Source-level merge metrics

For router inputs that are configured for merge, the basic router input metrics are also available with an additional `RouterInputMergeSourceIndex` dimension. This enables you to monitor the performance of the first merge source (`RouterInputMergeSourceIndex=0`) and the second merge source (`RouterInputMergeSourceIndex=1`) separately.

Metric	Description
RouterInputARQRequests	The number of retransmitted packets that were requested through automatic repeat request (ARQ). Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputBitRate	The bitrate of the payload, not including protocol overhead. Units: bits per second (bps) Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputCCErrors	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimensions: RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone

Metric	Description
	- RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputConnected	The status of the input. A value of 1 indicates that the input is connected, and a value of 0 (zero) indicates that the input is disconnected. Units: None Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: SRT
RouterInputDisconnections	The number of times that the input status changed from connected to disconnected. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: SRT

Metric	Description
RouterInputFECPackets	The number of forward error correction packets. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: RTP/FEC
RouterInputJitter	The jitter measurement specific to the protocol being used. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: RIST, SRT

Metric	Description
RouterInputLatency	The recovery latency of the input stream. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All

Metric	Description
RouterInputRecoveredPackets	The number of packets that were recovered through retransmission. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputRejections	The number of times the connection was rejected by the peer. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: SRT

Metric	Description
RouterInputRoundTripTime	The amount of time it takes for the input to send a signal and receive an acknowledgment. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputTotalPackets	The total number of packets received by the input. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All

Metric	Description
RouterInputTR101PCRAccuracyError	The number of PCR accuracy errors in the transport stream. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
RouterInputTR101TSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All

Metric	Description
<code>RouterInputTransportSyncLoss</code>	The number of transport stream sync loss errors. Units: Count Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All
<code>RouterInputUptime</code>	The amount of time the input has been receiving data. Units: Seconds Valid dimensions: - RouterInputName, RouterInputID, RouterInputMergeSourceIndex, AvailabilityZone - RouterInputARN, RouterInputMergeSourceIndex - AvailabilityZone Protocols: All

Router input metrics for MediaConnect flow connections

When a router input receives content from a MediaConnect flow, MediaConnect sends the following metrics to CloudWatch.

Metric	Description
<code>RouterInputBitRate</code>	The bitrate of the payload, not including protocol overhead.

Metric	Description
	Units: bits per second (bps) Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN • RouterInputARN • AvailabilityZone Protocols: All
RouterInputCCErrors	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimensions: • RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN • RouterInputARN • AvailabilityZone Protocols: All

Metric	Description
RouterInputLatency	The recovery latency of the input stream. Units: Milliseconds Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: RIST, SRT, RTP/FEC
RouterInputNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
RouterInputRecoveredPackets	The number of packets that were recovered through retransmission. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: All
RouterInputTR101PCRAccuracyError	The number of PCR accuracy errors in the transport stream. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
RouterInputTR101TSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: All
RouterInputTR101TSSyncLoss	The number of transport stream sync loss errors. Units: Count Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutput Name, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: All

Metric	Description
RouterInputUpTime	The amount of time the input has been receiving data. Units: Seconds Valid dimensions: - RouterInputName, RouterInputID, AvailabilityZone, UpstreamFlowOutputName, UpstreamFlowARN - RouterInputARN - AvailabilityZone Protocols: All

Note

When no MediaConnect flow is connected to the router input, the UpstreamFlowOutputName and UpstreamFlowARN dimensions display as <unconnected>.

AWS Elemental MediaConnect metrics to monitor router output health

AWS Elemental MediaConnect sends metrics to CloudWatch. You can review specific metrics to evaluate the health of your router outputs. For details about each metric, see the tables in this section.

For information about flow metrics, see [Metrics to monitor flow health](#).

Topics

- [Standard output metrics](#)
- [Router output metrics for MediaConnect flow connections](#)
- [Router output metrics for MediaLive connections](#)
- [Route metrics](#)

Standard output metrics

The following table lists router standard output metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
RouterOutputARQRequests	The number of retransmitted packets that were requested through automatic repeat request (ARQ). Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: RIST, SRT
RouterOutputAudioFrames	The number of audio frames sent by the output. Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: RTMP
RouterOutputBitRate	The bitrate of the output stream payload, not including protocol overhead. Units: bits per second (bps) Valid dimensions: RouterOutputName, RouterOutputID, AvailabilityZone

Metric	Description
	• RouterOutputARN • AvailabilityZone Protocols: All
RouterOutputConnected	The status of the output. A value of 1 indicates that the output is connected, and a value of 0 (zero) indicates that the output is disconnected. Units: None Valid dimensions: • RouterOutputName, RouterOutputID, AvailabilityZone • RouterOutputARN • AvailabilityZone Protocols: SRT, RTMP
RouterOutputDisconnections	The number of times that the output status changed from connected to disconnected. Units: Count Valid dimensions: • RouterOutputName, RouterOutputID, AvailabilityZone • RouterOutputARN • AvailabilityZone Protocols: SRT, RTMP

Metric	Description
RouterOutputFECPackets	The number of forward error correction packets sent by the output. Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: RTP/FEC
RouterOutputLatency	The latency of the output stream. Units: Milliseconds Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: SRT
RouterOutputRejections	The number of times the connection was rejected by the peer. Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: SRT

Metric	Description
RouterOutputResentPackets	The number of packets that were retransmitted to the output destination. Units: Count Valid dimensions: • RouterOutputName, RouterOutputID, AvailabilityZone • RouterOutputARN • AvailabilityZone Protocols: RIST, SRT
RouterOutputRoundTripTime	The amount of time it takes for the output to send a signal and receive an acknowledgment. Units: Milliseconds Valid dimensions: • RouterOutputName, RouterOutputID, AvailabilityZone • RouterOutputARN • AvailabilityZone Protocols: RIST, SRT

Metric	Description
RouterOutputTotalPackets	The total number of packets sent by the output. Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: All
RouterOutputVideoFrames	The number of video frames sent by the output. Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: RTMP

Router output metrics for MediaConnect flow connections

When a router output sends content to a MediaConnect flow, MediaConnect sends the following metrics to CloudWatch.

Metric	Description
RouterOutputBitRate	The bitrate of the output stream payload, not including protocol overhead. Units: bits per second (bps) Valid dimensions:

Metric	Description
	- RouterOutputName, RouterOutputID, AvailabilityZone, DownstreamFlowSourceName, DownstreamFlowARN - RouterOutputARN - AvailabilityZone Protocols: All

Note

When no AWS Elemental MediaConnect flow is connected to the router output, the DownstreamFlowSourceName and DownstreamFlowARN dimensions display as <unconnected>.

Router output metrics for MediaLive connections

When a router output sends content to a MediaLive input, MediaConnect sends the following metrics to CloudWatch.

Metric	Description
RouterOutputBitRate	The bitrate of the output stream payload, not including protocol overhead. Units: bits per second (bps) Valid dimensions: - RouterOutputName, RouterOutputID, AvailabilityZone, DownstreamMediaLiveInputID - RouterOutputARN - AvailabilityZone Protocols: All

 Note

When no MediaLive input is connected to the router output, the DownstreamMediaLiveInputID dimension displays as <unconnected>.

Route metrics

These metrics track the connection between a router input and a router output. MediaConnect publishes these metrics on the output side of the route.

Metric	Description
RouteBitRate	The bitrate of the content on the route between the router input and the router output. Units: bits per second (bps) Valid dimensions: - RouterOutputName, RouterOutputID, RouterOutputAvailabilityZone, RouterInputName, RouterInputID, RouterInputAvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: All
RouteFabricRecoveryLatency	The recovery latency for the route between the router input and the router output. Units: Milliseconds Valid dimensions: - RouterOutputName, RouterOutputID, RouterOutputAvailabilityZone, RouterInputName, RouterInputID, RouterInputAvailabilityZone - RouterOutputARN - AvailabilityZone

Metric	Description
	Protocols: All
RouteNotRecoveredPackets	The number of packets lost between the router input and the router output. Units: Count Valid dimensions: - RouterOutputName, RouterOutputID, RouterOutputAvailabilityZone, RouterInputName, RouterInputID, RouterInputAvailabilityZone - RouterOutputARN - AvailabilityZone Protocols: All

Note

When the router output is running but not connected to a router input, the RouterInputName, RouterInputID and RouterInputAvailabilityZone dimensions display as <unrouted>.

AWS Elemental MediaConnect metrics to monitor gateway health

AWS Elemental MediaConnect sends metrics to CloudWatch. You can review specific metrics to evaluate the health of your gateways. If the flow in or out of the gateway is unhealthy, these metrics can help you determine where the issue originates from. For details about each metric, see the tables in this section.

Note

MediaConnect Gateway metrics are not available in high resolution periods (one second). You must select a period of at least one minute.

Topics

- [Gateway ingress metrics](#)
- [Gateway ingress source metrics](#)
- [Gateway egress metrics](#)
- [Gateway egress source metrics](#)

Gateway ingress metrics

The following table lists gateway ingress metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
IngressBridgeBitRate	The bitrate of the ingress bridge's source, after the failover merge. This source originates from your local datacenter. Units: bits per second (bps) Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeCATError	The number of times that a conditional access table (CAT) error occurred. This error indicates that the CAT is not present. The CAT tells the integrated receiver decoder (IRD) where to find management messages for the conditional access (CA) systems that are in use. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeCRCError	The number of times that a cyclic redundancy check (CRC) error occurred. This error happens when a CRC determines that data is corrupted. Units: Count

Metric	Description
	Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeContinuityCounter	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeDroppedPackets	The number of packets that were lost during transit. This value is measured before any error correction takes place. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeFailoverSwitches	The total number of times the bridge switches back and forth between sources when using the <i>Failover</i> mode for source failover. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
IngressBridgeMergeActive	The merge status of all sources on the bridge. A value of 1 indicates that all sources are merged. A value of 0 (zero) indicates that at least one source is not actively merged with 2022-7. Units: None Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgePATError	The number of times that a program association table (PAT) error occurred. This error indicates that the PAT is missing. The PAT lists the programs that are available in a transport stream (TS) and points to the program map tables (PMTs). The decoder needs the PAT to do its job. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
IngressBridgePCRAccuracyError	The number of times that a program clock register (PCR) accuracy error occurred. This error happens when the value of the transmitted PCR differs from what is expected by more than 500 nanoseconds (ns). When a stream is encoded, the encoder assigns periodic PCR values of the encoder's program clock. The decoder relies on these values to ensure that the stream is kept in sync. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgePCRError	The number of times that a PCR error occurred. This error happens when PCR values are not sent frequently enough. The service relies on consistent, frequent PCRs to reset the local 27 MHz system clock. Although the error occurs when the interval exceeds 100 milliseconds (ms), best practices dictate that PCRs should be received at least every 40 ms. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
IngressBridgePIDError	The number of times that a packet identifier (PID) error occurred. This error indicates that a PID is missing its associated data stream. The PIDs are identifiers that provide the location of the video, audio, and data streams. This error can occur after the transport stream has been multiplexed and then remultiplexed. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgePMTError	The number of times that a program map table (PMT) error occurred. This error happens when the PMT is not received at least every 500 milliseconds (ms). Each PMT contains a list of PIDs, which help decoders reassemble data. The decoder needs the PMTs to do its job. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgePTSError	The number of times that a presentation timestamp (PTS) error occurred. This error happens when a presentation timestamp (PTS) is not received at least every 700 ms. This can occur if the PTS is sent less frequently or not at all. The most common cause of this error is when the transport stream (TS) is scrambled. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
IngressBridgePacketLossPercent	The percentage of packets that were lost during transit, even if they were recovered. Units: Percent Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeRecoveredPackets	The number of packets that were lost during transit, but recovered. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeTSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
IngressBridgeTSSyncLoss	The number of times that a transport stream sync loss error occurred. This error happens after two or more consecutive transport stream byte errors. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeTotalPackets	The total number of packets that were received. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
IngressBridgeTransportError	The number of times that a primary transport error occurred. This error indicates that the transport stream packet is unusable. When this error occurs, ignore all other TR 101 290 errors for this packet. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Gateway ingress source metrics

The following table lists gateway ingress source metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
IngressBridgeSourceARQRecovered	The number of dropped packets that were recovered by automatic repeat request (ARQ). It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceARQRequests	The number of retransmitted packets that were requested through automatic repeat request (ARQ) and received. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceBitRate	The bitrate of the ingress bridge's source, prior to any failover merge. This source originates from your local datacenter. Units: bits per second (bps) Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceCATError	The number of times that a conditional access table (CAT) error occurred. This error indicates that the CAT is not present. The CAT tells the integrated receiver decoder (IRD) where to find management messages for the conditional access (CA) systems that are in use. Units: Count

Metric	Description
	Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceCRCError	The number of times that a cyclic redundancy check (CRC) error occurred. This error happens when a CRC determines that data is corrupted. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceContinuityCounter	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceDroppedPackets	The number of packets that were lost during transit. This value is measured before any error correction takes place. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourceFECPackets	The number of packets that were transmitted using forward error correction (FEC) and received. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceFECRecovered	The number of packets that were transmitted using forward error correction (FEC), lost during transit, and recovered. It doesn't apply to flows that receive content from an entitlement. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceMergeActive	An indication of the status of the source with respect to other sources. This metric is useful when the bridge has multiple sources for failover and you are using the Merge failover mode. A value of 1 indicates that the bridge has multiple sources and that this source is actively in use, with 2022-7 merge. A value of 0 (zero) indicates that the bridge is not using the source to form the stream. Units: None Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourceMergeLatency	The amount of time that this source trails the primary source. If this source is the primary source, the value is 0 (zero). Units: Milliseconds Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceOverflowPackets	The number of packets that were lost in transit because the video required more buffer than was available. This metric doesn't apply to flows that receive content from an entitlement or to flows that have multiple sources. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourcePATError	The number of times that a program association table (PAT) error occurred. This error indicates that the PAT is missing. The PAT lists the programs that are available in a transport stream (TS) and points to the program map tables (PMTs). The decoder needs the PAT to do its job. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourcePCRAccuracyError	The number of times that a program clock register (PCR) accuracy error occurred. This error happens when the value of the transmitted PCR differs from what is expected by more than 500 nanoseconds (ns). When a stream is encoded, the encoder assigns periodic PCR values from the encoder's program clock. The decoder relies on these values to ensure that the stream is kept in sync. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourcePCRError	The number of times that a PCR error occurred. This error happens when PCR values are not sent frequently enough. The service relies on consistent, frequent PCRs to reset the local 27 MHz system clock. Although the error occurs when the interval exceeds 100 milliseconds (ms), best practices dictate that PCRs should be received at least every 40 ms. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourcePIDError	The number of times that a packet identifier (PID) error occurred. This error indicates that a PID is missing its associated data stream. The PIDs are identifiers that provide the location of the video, audio, and data streams. This error can occur after the transport stream has been multiplexed and then remultiplexed. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourcePMTError	The number of times that a program map table (PMT) error occurred. This error happens when the PMT is not received at least every 500 milliseconds (ms). Each PMT contains a list of PIDs, which help decoders reassemble data. The decoder needs the PMTs to do its job. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourcePTSError	The number of times that a presentation timestamp (PTS) error occurred. This error happens when a presentation timestamp (PTS) is not received at least every 700 ms. This can occur if the PTS is sent less frequently or not at all. The most common cause of this error is when the TS is scrambled. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourcePacketLossPercent	The percentage of packets that were lost during transit, even if they were recovered. Units: Percent Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceRecoveredPackets	The number of packets that were lost during transit, but recovered. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourceRoundTripTime	The amount of time it takes for the source to send a signal and receive an acknowledgment from AWS Elemental MediaConnect. It doesn't apply to flows that receive content from an entitlement. Units: Milliseconds Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceTSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceTSSyncLoss	The number of times that a transport stream sync loss error occurred. This error happens after two or more consecutive transport stream byte errors. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Metric	Description
IngressBridgeSourceTotalPackets	The total number of packets that were received. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name
IngressBridgeSourceTransportError	The number of times that a primary transport error occurred. This error indicates that the transport stream packet is unusable. When this error occurs, ignore all other TR 101 290 errors for this packet. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name • Gateway ARN, Instance ID, Network Name

Gateway egress metrics

The following table lists gateway egress metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
EgressBridgeBitRate	The bitrate of the egress bridge's source, after the failover merge. This source originates from a MediaConnect flow. Units: bits per second (bps) Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgeCATError	The number of times that a conditional access table (CAT) error occurred. This error indicates that the CAT is not present. The CAT tells the integrated receiver decoder (IRD) where to find management messages for the conditional access (CA) systems that are in use. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeCRCError	The number of times that a cyclic redundancy check (CRC) error occurred. This error happens when a CRC determines that data is corrupted. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeContinuityCounter	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgeDroppedPackets	The number of packets that were lost during transit. This value is measured before any error correction takes place. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeFailoverSwitches	The total number of times the bridge switches back and forth between sources when using the <i>Failover</i> mode for source failover. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeMergeActive	The merge status of all sources on the bridge. A value of 1 indicates that all sources are merged. A value of 0 (zero) indicates that at least one source is not actively merged with 2022-7. Units: None Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgeNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgePATError	The number of times that a program association table (PAT) error occurred. This error indicates that the PAT is missing. The PAT lists the programs that are available in a transport stream (TS) and points to the program map tables (PMTs). The decoder needs the PAT to do its job. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgePCRAccuracyError	The number of times that a program clock register (PCR) accuracy error occurred. This error happens when the value of the transmitted PCR differs from what is expected by more than 500 nanoseconds (ns). When a stream is encoded, the encoder assigns periodic PCR values of the encoder's program clock. The decoder relies on these values to ensure that the stream is kept in sync. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgePCRError	The number of times that a PCR error occurred. This error happens when PCR values are not sent frequently enough. The service relies on consistently, frequent PCRs to reset the local 27 MHz system clock. Although the error occurs when the interval exceeds 100 milliseconds (ms), best practices dictate that PCRs should be received at least every 40 ms. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgePIDError	The number of times that a packet identifier (PID) error occurred. This error indicates that a PID is missing its associated data stream. The PIDs are identifiers that provide the location of the video, audio, and data streams. This error can occur after the transport stream has been multiplexed and then remultiplexed. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgePMTError	The number of times that a program map table (PMT) error occurred. This error happens when the PMT is not received at least every 500 milliseconds (ms). Each PMT contains a list of PIDs, which help decoders reassemble data. The decoder needs the PMTs to do its job. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgePTSError	The number of times that a presentation timestamp (PTS) error occurred. This error happens when a presentation timestamp (PTS) is not received at least every 700 ms. This can occur if the PTS is sent less frequently or not at all. The most common cause of this error is when the transport stream (TS) is scrambled. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgePacketLossPercent	The percentage of packets that were lost during transit, even if they were recovered. Units: Percent Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeRecoveredPackets	The number of packets that were lost during transit, but recovered. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgeTSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeTSSyncLoss	The number of times that a transport stream sync loss error occurred. This error happens after two or more consecutive transport stream byte errors. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID
EgressBridgeTotalPackets	The total number of packets that were received. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Metric	Description
EgressBridgeTransportError	The number of times that a primary transport error occurred. This error indicates that the transport stream packet is unusable. When this error occurs, ignore all other TR 101 290 errors for this packet. Units: Count Valid dimension sets: • Bridge ARN • Gateway ARN, Instance ID

Gateway egress source metrics

The following table lists gateway egress source metrics that AWS Elemental MediaConnect sends to CloudWatch.

Metric	Description
EgressBridgeSourceBitRate	The bitrate of the egress bridge's source, prior to any failover merge. This source originates from a MediaConnect flow. Units: bits per second (bps) Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceCATError	The number of times that a conditional access table (CAT) error occurred. This error indicates that the CAT is not present. The CAT tells the integrated receiver decoder (IRD) where to find management messages for the conditional access (CA) systems that are in use. Units: Count Valid dimension sets:

Metric	Description
	• Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceCRCError	The number of times that a cyclic redundancy check (CRC) error occurred. This error happens when a CRC determines that data is corrupted. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceContinuityCounter	The number of times that a continuity error occurred. This error indicates an incorrect packet order or lost packets. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceDroppedPackets	The number of packets that were lost during transit. This value is measured before any error correction takes place. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Metric	Description
EgressBridgeSourceMergeActive	An indication of the status of the source with respect to other sources. This metric is useful when the bridge has multiple sources for failover and you are using the Merge failover mode. A value of 1 indicates that the bridge has multiple sources and that this source is actively in use, with 2022-7 merge. A value of 0 (zero) indicates that the bridge is not using the source to form the stream. Units: None Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceMergeLatency	The amount of time that this source trails the primary source. If this source is the primary source, the value is 0 (zero). Units: Milliseconds Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceNotRecoveredPackets	The number of packets that were lost during transit and were not recovered by error correction. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Metric	Description
EgressBridgeSourcePATError	The number of times that a program association table (PAT) error occurred. This error indicates that the PAT is missing. The PAT lists the programs that are available in a transport stream (TS) and points to the program map tables (PMTs). The decoder needs the PAT to do its job. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourcePCRAccuracyError	The number of times that a program clock register (PCR) accuracy error occurred. This error happens when the value of the transmitted PCR differs from what is expected by more than 500 nanoseconds (ns). When a stream is encoded, the encoder assigns periodic PCR values from the encoder's program clock. The decoder relies on these values to ensure that the stream is kept in sync. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Metric	Description
EgressBridgeSourcePCRError	The number of times that a PCR error occurred. This error happens when PCR values are not sent frequently enough. The service relies on consistent, frequent PCRs to reset the local 27 MHz system clock. Although the error occurs when the interval exceeds 100 milliseconds (ms), best practices dictate that PCRs should be received at least every 40 ms. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourcePIDError	The number of times that a packet identifier (PID) error occurred. This error indicates that a PID is missing its associated data stream. The PIDs are identifiers that provide the location of the video, audio, and data streams. This error can occur after the transport stream has been multiplexed and then remultiplexed. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourcePMTError	The number of times that a program map table (PMT) error occurred. This error happens when the PMT is not received at least every 500 milliseconds (ms). Each PMT contains a list of PIDs, which help decoders reassemble data. The decoder needs the PMTs to do its job. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Metric	Description
EgressBridgeSourcePTSError	The number of times that a presentation timestamp (PTS) error occurred. This error happens when a presentation timestamp (PTS) is not received at least every 700 ms. This can occur if the PTS is sent less frequently or not at all. The most common cause of this error is when the TS is scrambled. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourcePacketLossPercent	The percentage of packets that were lost during transit, even if they were recovered. Units: Percent Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceRecoveredPackets	The number of packets that were lost during transit, but recovered. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Metric	Description
EgressBridgeSourceTSByteError	The number of times that a transport stream byte error occurred. This error indicates that the sync byte did not appear after the prescribed number of bytes. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceTSSyncLoss	The number of times that a transport stream sync loss error occurred. This error happens after two or more consecutive transport stream byte errors. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone
EgressBridgeSourceTotalPackets	The total number of packets that were received. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Metric	Description
EgressBridgeSourceTransportError	The number of times that a primary transport error occurred. This error indicates that the transport stream packet is unusable. When this error occurs, ignore all other TR 101 290 errors for this packet. Units: Count Valid dimension sets: • Bridge ARN, Bridge Source Name, Flow ARN • Gateway ARN, Instance ID, Availability Zone

Using metrics to troubleshoot problems with your MediaConnect flow

You can monitor the health of your stream by reviewing the metrics that AWS Elemental MediaConnect sends to CloudWatch. In particular, if you encounter a problem on your MediaConnect flow, these metrics can help you isolate the problem. The specific metrics to watch depend on the protocol that your source uses. Review the lists below, which are sorted by source protocol.

Topics

- [Metrics to watch if your source uses the RIST protocol](#)
- [Metrics to watch if your source uses the RTP protocol](#)
- [Metrics to watch if your source uses the RTP-FEC protocol](#)
- [Metrics to watch if your source uses the SRT protocol](#)
- [Metrics to watch if your source uses the Zixi push protocol](#)
- [Metrics to watch if your source comes from an entitlement](#)
- [Metrics to watch if you are using gateways](#)

Metrics to watch if your source uses the RIST protocol

If the protocol of your source is RIST, watch the metrics below to evaluate the health of your source.

- ARQRecovered

- ARQRequests
- DroppedPackets
- NotRecoveredPackets
- OverflowPackets
- PacketLossPercent
- RecoveredPackets
- RoundTripTime
- TotalPackets

Metrics to watch if your source uses the RTP protocol

If the protocol of your source is RTP, watch the metrics below to evaluate the health of your source.

- DroppedPackets
- OverflowPackets
- RoundTripTime
- TotalPackets

Metrics to watch if your source uses the RTP-FEC protocol

If the protocol of your source is RTP-FEC, watch the metrics below to evaluate the health of your source.

- DroppedPackets
- FECPackets
- FECRecovered
- NotRecoveredPackets
- OverflowPackets
- RecoveredPackets
- RoundTripTime
- TotalPackets

Metrics to watch if your source uses the SRT protocol

If the protocol of your source is SRT (listener or caller), watch the metrics below to evaluate the health of your source.

- ARQRecovered
- ARQRequests
- DroppedPackets
- NotRecoveredPackets
- OverflowPackets
- RecoveredPackets
- RoundTripTime
- TotalPackets

Metrics to watch if your source uses the Zixi push protocol

If the protocol of your source is Zixi push, watch the metrics below to evaluate the health of your source.

- ARQRecovered
- ARQRequests
- DroppedPackets
- FECPackets
- FECRecovered
- NotRecoveredPackets
- OverflowPackets
- RecoveredPackets
- RoundTripTime
- TotalPackets

Metrics to watch if your source comes from an entitlement

If your source comes from an entitlement that was granted to your account by another AWS account, watch the metrics below to evaluate the health of your source.

- ARQRecovered
- ARQRequests
- DroppedPackets
- FECPackets
- FECRecovered
- NotRecoveredPackets
- OverflowPackets
- RecoveredPackets
- RoundTripTime
- TotalPackets

Metrics to watch if you are using gateways

Watch the metrics below to evaluate the health of your gateway.

Metrics to watch if you are using a gateway with an ingress bridge

Watch the metrics below to evaluate the health of your gateway's ingress bridge. The recommended ingress bridge troubleshooting metrics are separated by protocol.

- RTP
 - IngressBridgeTotalPackets
 - IngressBridgeDroppedPackets
 - IngressBridgeSourceTotalPackets
 - IngressBridgeSourceDroppedPackets
 - IngressBridgeSourceOverflowPackets
 - IngressBridgeSourceRoundTripTime
- RTP-FEC
 - IngressBridgeTotalPackets
 - IngressBridgeDroppedPackets
 - IngressBridgeRecoveredPackets
 - IngressBridgeNotRecoveredPackets

- IngressBridgeSourceTotalPackets
- IngressBridgeSourceDroppedPackets
- IngressBridgeSourceRecoveredPackets
- IngressBridgeSourceNotRecoveredPackets
- IngressBridgeSourceOverflowPackets
- IngressBridgeSourceFECPackets
- IngressBridgeSourceFECRecovered
- IngressBridgeSourceRoundTripTime
- UDP
 - IngressBridgeTotalPackets
 - IngressBridgeSourceTotalPackets
 - IngressBridgeSourceOverflowPackets

Metrics to watch if you are using a gateway with an egress bridge

Watch the metrics below to evaluate the health of your gateway's egress bridge.

- EgressBridgeTotalPackets
- EgressBridgeDroppedPackets
- EgressBridgeRecoveredPackets
- EgressBridgeNotRecoveredPackets
- EgressBridgeSourceTotalPackets
- EgressBridgeSourceDroppedPackets
- EgressBridgeSourceRecoveredPackets
- EgressBridgeSourceNotRecoveredPackets

Monitoring with Amazon EventBridge events

EventBridge enables you to automate your AWS services and respond automatically to system events such as application availability issues or resource changes. Events from AWS services are delivered to EventBridge in near real time. You can write simple rules to indicate which events are of interest to you, and what automated actions to take when an event matches a rule.

The actions that can be automatically triggered using EventBridge include the following:

- Invoking an AWS Lambda function
- Invoking Amazon EC2 Run Command
- Relaying the event to Amazon Kinesis Data Streams
- Activating an AWS Step Functions state machine
- Notifying an Amazon SNS topic or an Amazon SQS queue

For more information, see the [Amazon EventBridge User Guide](#).

EventBridge in MediaConnect

- [MediaConnect flow events](#)
- [MediaConnect router input events](#)
- [MediaConnect router output events](#)

MediaConnect flow events

AWS Elemental MediaConnect publishes the following EventBridge events for flows and their sources and outputs.

Topics

- [MediaConnect flow status change event](#)
- [MediaConnect flow maintenance event](#)
- [MediaConnect flow health event](#)
- [MediaConnect alert event](#)
- [MediaConnect source health event](#)
- [MediaConnect flow source metadata changed event](#)
- [MediaConnect output health event](#)
- [MediaConnect output status change event](#)
- [MediaConnect flow content quality event](#)

MediaConnect flow status change event

AWS Elemental MediaConnect publishes this event when a flow's status has changed from or to any of the following statuses: Standby, Active, Updating, Deleting, Starting, Stopping, or Error.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Flow Status Change",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-
    abcdef123455:ExampleFlow"
  ],
  "detail": {
    "currentStatus": "STARTING",
    "previousStatus": "STANDBY"
  }
}
```

MediaConnect flow maintenance event

AWS Elemental MediaConnect publishes this event when a flow's maintenance status has changed, either to or from any of the following states:

- **SCHEDULED** - Maintenance is scheduled for the flow.
- **RESCHEDULED** - MediaConnect is unable to perform maintenance at the previously scheduled date and time. A new date and time has been automatically assigned by MediaConnect for this flow's maintenance.
- **CANCELED** - Maintenance for this flow is cancelled by MediaConnect.
- **INPROGRESS** - Maintenance has started and is currently in progress for this flow.
- **FINISHED** - Maintenance completed successfully for this flow.

- **FAILED** - Maintenance did not complete successfully for this flow.

For information about subscribing to this event, see [Amazon EventBridge](#).

For information about MediaConnect maintenance, see [MediaConnect flow maintenance](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Flow Maintenance",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-
    abcdef123455:ExampleFlow"
  ],
  "detail": {
    "currentStatus": "FINISHED"
  }
}
```

MediaConnect flow health event

AWS Elemental MediaConnect publishes flow health events after a flow health indicator state changes.

MediaConnect publishes this event any time there is a state change to one or more of the following flow health indicators. This event publishes the current and previous state of the flow.

The following are flow health indicators:

- **Source state**
 - Possible states: connected, receiving, disconnected, idle
- **Failover switch**
 - Possible states: true, false
- **isBitrateZero** is true when the bitrate of the flow is currently zero.

- **TR-101:** TR-101 is an industry standard technical recommendation for the monitoring of transport streams (TS). The following events are only published for TS based protocols.
 - **TS sync loss** is true when source payloads do not look like a valid transport stream.
 - **Continuity count error** is true when the source finds continuity count errors.
 - **Transport error** is true when the TS has the transport indicator set.
 - **PCR error** is true when there is a PCR discontinuity or a long gap in PCR packet reception.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Flow Health",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-
    abcdef123455:ExampleFlow"
  ],
  "detail": {
    "unhealthy": true,
    "current": {
      "failover_switch": false,
      "source_state": "CONNECTED",
      "isBitrateZero": false,
      "tr101": {
        "ts_sync_loss": false,
        "continuity_count_error": true,
        "transport_error": true,
        "pcr_error": true
      }
    }
  },
  "previous": {
    "failover_switch": false,
    "source_state": "CONNECTED",
    "isBitrateZero": false,
    "tr101": {
```

```
        "ts_sync_loss": false,
        "continuity_count_error": false,
        "transport_error": false,
        "pcr_error": false
    }
}
}
```

MediaConnect alert event

AWS Elemental MediaConnect publishes an alert event when a resource encounters an error. The event contains an error code and a message that describes the issue. These alerts are visible on the MediaConnect console, or by using the `describe-flow` AWS Command Line Interface (AWS CLI) command. For more information about the `describe-flow` command, see [AWS CLI Command Reference](#).

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Alert",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleFlow"
  ],
  "detail": {
    "errored": true,
    "error-code": "AccessDeniedException",
    "error-message": "Permission denied accessing encryption key for output Test. Removing output until it is fixed (secret arn:aws:secretsmanager:us-east-1:012345678901:secret:ExampleSecret, role arn:aws:iam::012345678901:role/ExampleKey)"
  }
}
```

MediaConnect source health event

AWS Elemental MediaConnect publishes source health events after a source health indicator state changes.

MediaConnect publishes this event any time there is a state change to one or more of the following source health indicators. This event publishes the current and previous state of the flow. Note that the source health event lists the affected flow and source in the `resources` section.

The following are source health indicators:

- **Source state**
 - Possible states: `connected`, `receiving`, `disconnected`, `idle`
- **TR-101**: TR-101 is an industry standard technical recommendation for the monitoring of transport streams (TS). The following events are only published for TS based protocols.
 - **TS sync loss** - true when source payloads do not look like a valid transport stream.
 - **Continuity count error** - true when the source finds continuity count errors.
 - **Transport error** - true when the TS has the transport indicator set.
 - **PCR error** - true when there is a PCR discontinuity or a long gap in PCR packet reception.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Source Health",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleFlow",
    "arn:aws:mediaconnect:us-east-1:012345678901:source:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleSource"
  ],
  "detail": {
```

```

    "unhealthy": true,
    "current": {
      "state": "CONNECTED",
      "tr101": {
        "ts_sync_loss": false,
        "continuity_count_error": true,
        "transport_error": true,
        "pcr_error": true
      }
    },
    "previous": {
      "state": "CONNECTED",
      "tr101": {
        "ts_sync_loss": false,
        "continuity_count_error": false,
        "transport_error": false,
        "pcr_error": false
      }
    }
  }
}

```

MediaConnect flow source metadata changed event

AWS Elemental MediaConnect publishes this event when the metadata for a flow's source changes. The event detail contains the `metadataChangeTime` field, which is the time of the most recent change to the source metadata.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```

{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Flow Source Metadata Changed",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-
    abcdef123455:ExampleFlow"
  ]
}

```

```
  ],
  "detail": {
    "metadataChangeTime": "2026-05-03T18:37:24Z"
  }
}
```

MediaConnect output health event

AWS Elemental MediaConnect publishes output health events after an output health indicator state changes.

MediaConnect publishes this event any time there is a state change to one or more of the following output health indicators. This event publishes the current and previous state of the flow. Note that the output health event lists the affected flow and output in the resources section.

The following are output health indicators:

- **Output state**
 - Possible states: connected, sending, disconnected, idle

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Output Health",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleFlow",
    "arn:aws:mediaconnect:us-east-1:012345678901:output:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleOutput"
  ],
  "detail": {
    "current": {
      "state": "CONNECTED"
    }
  }
}
```



```
    },
    "previous": {
      "state": "DISCONNECTED"
    }
  }
}
```

MediaConnect output status change event

AWS Elemental MediaConnect publishes this event when an output's status changes. The possible values are ENABLED and DISABLED.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Output Status Change",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleFlow",
    "arn:aws:mediaconnect:us-east-1:012345678901:output:1-AbCdEfGhIjKlMnOp-abcdef123455:ExampleOutput"
  ],
  "detail": {
    "currentStatus": "DISABLED",
    "previousStatus": "ENABLED"
  }
}
```

MediaConnect flow content quality event

AWS Elemental MediaConnect publishes the following event when an issue is detected with content quality: MediaConnect Flow Content Quality

MediaConnect publishes this event in three scenarios:

1. When the duration threshold is breached for one of the following metrics:
 - **Black frames:** Periods of black video frames are detected in the stream.
 - **Frozen frames:** Periods of unchanging video frames are detected in the stream.
 - **Silent audio:** Periods of audio silence are detected in the stream.
2. When audio or video content is missing from the stream. This happens when monitoring is configured for audio or video streams, but MediaConnect can't detect the expected data to monitor.
3. When a previously reported issue has been resolved (clearing state).

MediaConnect publishes these events whenever the state of any monitored condition changes. This includes when issues are first detected, when they clear, or any combination of these changes. For example, a single event might show some issues that are clearing while others are being detected, depending on what changed during that reporting period.

In the event JSON, you'll see the following fields to indicate these issues:

For duration threshold breaches:

- `black_frames_duration_breaching`: true when black frames exceed the threshold
- `frozen_frames_duration_breaching`: true when frozen frames exceed the threshold
- `silent_audio_duration_breaching`: true when silent audio exceeds the threshold

For missing audio/video:

- `audio_missing`: true when audio content is missing
- `video_missing`: true when video content is missing

These alerts are visible on the MediaConnect console, or by using the `describe-flow` AWS Command Line Interface (AWS CLI) command. For more information about the `describe-flow` command, see the [AWS CLI Command Reference](#).

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of the MediaConnect Flow Content Quality event. In this example, the event indicates both missing audio content and a frozen frames duration threshold breach in the stream.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Flow Content Quality",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:flow:1-AbCdEfGhIjKlMnOp-
    abcdef123455:ExampleFlow"
  ],
  "detail": {
    "impacted": true,
    "streams": [
      {
        "audio_missing": true
      },
      {
        "frozen_frames_duration_breaching": true
      }
    ]
  }
}
```

MediaConnect router input events

AWS Elemental MediaConnect publishes the following EventBridge events for router inputs.

Topics

- [MediaConnect router input state event](#)
- [MediaConnect router input route state event](#)
- [MediaConnect router input health event](#)
- [MediaConnect router input failover event](#)
- [MediaConnect router input content quality event](#)
- [MediaConnect router input message event](#)
- [MediaConnect router input source metadata changed event](#)

MediaConnect router input state event

AWS Elemental MediaConnect publishes this event when a router input's state changes. This includes changes to or from the following states:

- Creating
- Standby
- Starting
- Active
- Updating
- Stopping
- Deleting
- Recovering
- Migrating
- Error

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Input State",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
  ],
  "detail": {
    "previousState": "STANDBY",
    "currentState": "ACTIVE"
  }
}
```

MediaConnect router input route state event

AWS Elemental MediaConnect publishes this event when a router output is routed to or unrouted from a router input. This event publishes the router output that changed and the complete list of router outputs that are currently routed to the router input.

For the corresponding event on the router output side, see [Router output route state event](#).

The change field indicates what happened:

- **ROUTER_OUTPUT_ADDED** – A router output was routed to the router input.
- **ROUTER_OUTPUT_REMOVED** – A router output was unrouted from the router input.

The event also contains the following fields:

- **changedRouterOutputArn** – The ARN of the router output that was routed or unrouted.
- **currentRouterOutputArns** – The ARNs of all router outputs that are currently routed to the router input.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Input Route State",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
  ],
  "detail": {
    "change": "ROUTER_OUTPUT_ADDED",
    "changedRouterOutputArn": "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:d4e5f6a1b2c3",
    "currentRouterOutputArns": [
      "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:b2c3d4e5f6a1",
```

```

    "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:d4e5f6a1b2c3"
  ]
}
}

```

MediaConnect router input health event

AWS Elemental MediaConnect publishes router input health events after a router input health indicator state changes.

MediaConnect publishes this event any time there is a state change to one or more of the following router input health indicators. This event publishes the current and previous state of the router input.

The following are router input health indicators:

- **state** – The connection state of the router input source.
 - Possible states: CONNECTED, RECEIVING, DISCONNECTED, IDLE
- **isBitrateZero** – true when the bitrate of the router input is currently zero.
- **TR-101** – TR-101 is an industry standard technical recommendation for the monitoring of transport streams (TS). The following indicators are only published for TS based protocols.
 - **TS sync loss** – true when source payloads do not look like a valid transport stream.
 - **Continuity count error** – true when the source finds continuity count errors.
 - **Transport error** – true when the TS has the transport indicator set.
 - **PCR error** – true when there is a PCR discontinuity or a long gap in PCR packet reception.

The `unhealthy` field is true when one or more of these indicators shows that the health of the router input is impacted.

The event also includes the `inputType` field, which indicates the type of the router input.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```

{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",

```

```

"detail-type": "MediaConnect Router Input Health",
"source": "aws.mediaconnect",
"account": "012345678901",
"time": "2026-05-03T18:37:24Z",
"region": "us-east-1",
"resources": [
  "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
],
"detail": {
  "unhealthy": true,
  "inputType": "MEDIALIVE_CHANNEL",
  "current": {
    "state": "CONNECTED",
    "isBitrateZero": false,
    "tr101": {
      "ts_sync_loss": false,
      "continuity_count_error": true,
      "transport_error": false,
      "pcr_error": false
    }
  },
  "previous": {
    "state": "CONNECTED",
    "isBitrateZero": false,
    "tr101": {
      "ts_sync_loss": false,
      "continuity_count_error": false,
      "transport_error": false,
      "pcr_error": false
    }
  }
}
}
}

```

MediaConnect router input failover event

AWS Elemental MediaConnect publishes this event for a router input that uses the FAILOVER input type when the active source changes.

The event contains the following fields:

- **failoverMode** – The failover mode of the router input, either PRIMARY_SECONDARY or NO_PRIORITY.

- **currentSourceIndex** – The zero-based index of the source that is currently in use, either 0 or 1.
- **previousSourceIndex** – The zero-based index of the source that was previously in use. This field is absent when MediaConnect has not previously reported an active source for this router input, such as after the router input starts.
- **primarySourceIndex** – The zero-based index of the primary source. This field is omitted when failoverMode is NO_PRIORITY.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Input Failover",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
  ],
  "detail": {
    "failoverMode": "PRIMARY_SECONDARY",
    "currentSourceIndex": 0,
    "previousSourceIndex": 1,
    "primarySourceIndex": 0
  }
}
```

MediaConnect router input content quality event

AWS Elemental MediaConnect publishes the following event when the content quality status changes on a router input: MediaConnect Router Input Content Quality

MediaConnect publishes this event in three scenarios:

1. When the duration threshold is breached for one of the following metrics:
 - **Black frames:** Periods of black video frames are detected in the stream.
 - **Frozen frames:** Periods of unchanging video frames are detected in the stream.

- **Silent audio:** Periods of audio silence are detected in the stream.
2. When audio or video content is missing from the stream. This happens when monitoring is configured for audio or video streams, but MediaConnect can't detect the expected data to monitor.
 3. When a previously reported issue has been resolved (clearing state).

The event includes both the current and previous state for each monitored metric. Each metric reports one of the following values:

- DETECTED – The issue is actively being detected (threshold breached or stream missing).
- NOT_DETECTED – The metric is enabled and no issue is detected.
- DISABLED – The metric is not enabled for this router input.

The event detail contains the following fields:

- blackFrames: Status of black frames detection.
- frozenFrames: Status of frozen frames detection.
- silentAudio: Status of silent audio detection.
- audioMissing: Status of audio stream presence.
- videoMissing: Status of video stream presence.

You can view content quality analysis status for a router input on the MediaConnect console, or by using the `get-router-input` AWS Command Line Interface (AWS CLI) command. For more information about the `get-router-input` command, see the [AWS CLI Command Reference](#).

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of the MediaConnect Router Input Content Quality event. In this example, the event indicates that black frames have been detected on the router input, while the previous state showed no issues detected.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Input Content Quality",
  "source": "aws.mediaconnect",
```

```
"account": "012345678901",
"time": "2026-05-03T18:37:24Z",
"region": "us-east-1",
"resources": [
  "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
],
"detail": {
  "current": {
    "blackFrames": "DETECTED",
    "frozenFrames": "NOT_DETECTED",
    "silentAudio": "NOT_DETECTED",
    "audioMissing": "NOT_DETECTED",
    "videoMissing": "NOT_DETECTED"
  },
  "previous": {
    "blackFrames": "NOT_DETECTED",
    "frozenFrames": "NOT_DETECTED",
    "silentAudio": "NOT_DETECTED",
    "audioMissing": "NOT_DETECTED",
    "videoMissing": "NOT_DETECTED"
  }
}
}
```

MediaConnect router input message event

AWS Elemental MediaConnect publishes a router input message event when a router input message is set or cleared. The event indicates whether the message is currently active, and contains an error code and a message that describes the issue. These messages are visible on the MediaConnect console, or by using the `get-router-input` AWS Command Line Interface (AWS CLI) command. For more information about the `get-router-input` command, see the [AWS CLI Command Reference](#).

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Input Message",
  "source": "aws.mediaconnect",
```

```
"account": "012345678901",
"time": "2026-05-03T18:37:24Z",
"region": "us-east-1",
"resources": [
  "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
],
"detail": {
  "active": true,
  "code": "StreamError",
  "message": "Stream Error: Timeout. Please investigate the router input."
}
}
```

MediaConnect router input source metadata changed event

AWS Elemental MediaConnect publishes this event when the metadata for a router input's source changes. The event detail contains the `metadataChangeTime` field, which is the time of the most recent change to the source metadata.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Input Source Metadata Changed",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
  ],
  "detail": {
    "metadataChangeTime": "2026-05-03T18:37:24Z"
  }
}
```

MediaConnect router output events

AWS Elemental MediaConnect publishes the following EventBridge events for router outputs.

Topics

- [MediaConnect router output state event](#)
- [MediaConnect router output route state event](#)
- [MediaConnect router output health event](#)
- [MediaConnect router output message event](#)

MediaConnect router output state event

AWS Elemental MediaConnect publishes this event when a router output's state changes. This includes changes to or from the following states:

- Creating
- Standby
- Starting
- Active
- Updating
- Stopping
- Deleting
- Recovering
- Migrating
- Error

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Output State",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
```

```
"resources": [  
  "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:b2c3d4e5f6a1"  
],  
"detail": {  
  "previousState": "STANDBY",  
  "currentState": "ACTIVE"  
}  
}
```

MediaConnect router output route state event

AWS Elemental MediaConnect publishes this event when the router input that is routed to a router output changes. This includes when a router input is first routed to the output, replaced with a different router input, or unrouted.

For the corresponding event on the router input side, see [Router input route state event](#).

The change field indicates what happened:

- **ROUTED** – A router input is routed to the router output, including when it replaces a previously routed input.
- **UNROUTED** – The router input was disconnected and the router output has no routed input.

The event also contains the following fields:

- **previousRouterInputArn** – The ARN of the router input that was previously routed to the router output, or `null` if there was none.
- **currentRouterInputArn** – The ARN of the router input that is currently routed to the router output, or `null` if the router output has no routed input.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{  
  "version": "0",  
  "id": "01234567-0123-0123-0123-0123456789ab",  
  "detail-type": "MediaConnect Router Output Route State",  
  "source": "aws.mediaconnect",
```

```
"account": "012345678901",
"time": "2026-05-03T18:37:24Z",
"region": "us-east-1",
"resources": [
  "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:b2c3d4e5f6a1"
],
"detail": {
  "change": "ROUTED",
  "previousRouterInputArn": "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:c3d4e5f6a1b2",
  "currentRouterInputArn": "arn:aws:mediaconnect:us-east-1:012345678901:routerInput:a1b2c3d4e5f6"
}
```

MediaConnect router output health event

AWS Elemental MediaConnect publishes router output health events after a router output health indicator state changes.

MediaConnect publishes this event any time there is a state change to one or more of the following router output health indicators. This event publishes the current and previous state of the router output.

The following are router output health indicators:

- **state** – The connection state of the router output destination.
 - Possible states: CONNECTED, SENDING, DISCONNECTED, IDLE

The event also includes the `outputType` field, which indicates the type of the router output.

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Output Health",
  "source": "aws.mediaconnect",
  "account": "012345678901",
```

```
{
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:b2c3d4e5f6a1"
  ],
  "detail": {
    "current": {
      "state": "CONNECTED"
    },
    "previous": {
      "state": "DISCONNECTED"
    },
    "outputType": "STANDARD"
  }
}
```

MediaConnect router output message event

AWS Elemental MediaConnect publishes a router output message event when a router output message is set or cleared. The event indicates whether the message is currently active, and contains an error code and a message that describes the issue. These messages are visible on the MediaConnect console, or by using the `get-router-output` AWS Command Line Interface (AWS CLI) command. For more information about the `get-router-output` command, see the [AWS CLI Command Reference](#).

For information about subscribing to this event, see [Amazon EventBridge](#).

The following message is an example of this event.

```
{
  "version": "0",
  "id": "01234567-0123-0123-0123-0123456789ab",
  "detail-type": "MediaConnect Router Output Message",
  "source": "aws.mediaconnect",
  "account": "012345678901",
  "time": "2026-05-03T18:37:24Z",
  "region": "us-east-1",
  "resources": [
    "arn:aws:mediaconnect:us-east-1:012345678901:routerOutput:b2c3d4e5f6a1"
  ],
  "detail": {
    "active": true,

```

```
"code": "StreamError",  
"message": "Stream Error: Timeout. Please investigate the router output."  
}  
}
```

Logging AWS Elemental MediaConnect API calls with AWS CloudTrail

AWS Elemental MediaConnect is integrated with AWS CloudTrail, a service that provides a record of actions taken by a user, role, or an AWS service in AWS Elemental MediaConnect. CloudTrail captures all API calls for AWS Elemental MediaConnect as events. The calls captured include calls from the AWS Elemental MediaConnect console and code calls to the AWS Elemental MediaConnect API operations. If you create a trail, you can enable continuous delivery of CloudTrail events to an Amazon S3 bucket, including events for AWS Elemental MediaConnect. If you don't configure a trail, you can still view the most recent events in the CloudTrail console in **Event history**. Using the information collected by CloudTrail, you can determine the request that was made to AWS Elemental MediaConnect, the IP address from which the request was made, who made the request, when it was made, and additional details.

To learn more about CloudTrail, see the [AWS CloudTrail User Guide](#).

AWS Elemental MediaConnect information in CloudTrail

CloudTrail is enabled on your AWS account when you create the account. When activity occurs in AWS Elemental MediaConnect, that activity is recorded in a CloudTrail event along with other AWS service events in **Event history**. You can view, search, and download recent events in your AWS account. For more information, see [Viewing Events with CloudTrail Event History](#).

For an ongoing record of events in your AWS account, including events for AWS Elemental MediaConnect, create a trail. A *trail* enables CloudTrail to deliver log files to an Amazon S3 bucket. By default, when you create a trail in the console, the trail applies to all AWS Regions. The trail logs events from all Regions in the AWS partition and delivers the log files to the Amazon S3 bucket that you specify. Additionally, you can configure other AWS services to further analyze and act upon the event data collected in CloudTrail logs. For more information, see the following:

- [Overview for Creating a Trail](#)
- [CloudTrail Supported Services and Integrations](#)

- [Configuring Amazon SNS Notifications for CloudTrail](#)
- [Receiving CloudTrail Log Files from Multiple Regions](#) and [Receiving CloudTrail Log Files from Multiple Accounts](#)

All AWS Elemental MediaConnect actions are logged by CloudTrail and are documented in the [AWS Elemental MediaConnect API Reference](#). For example, calls to the `CreateFlow`, `StartFlow` and `UpdateFlowOutput` operations generate entries in the CloudTrail log files.

Every event or log entry contains information about who generated the request. The identity information helps you determine the following:

- Whether the request was made with root or AWS Identity and Access Management (IAM) user credentials.
- Whether the request was made with temporary security credentials for a role or federated user.
- Whether the request was made by another AWS service.

For more information, see the [CloudTrail userIdentity Element](#).

Understanding AWS Elemental MediaConnect log file entries

A trail is a configuration that enables delivery of events as log files to an Amazon S3 bucket that you specify. CloudTrail log files contain one or more log entries. An event represents a single request from any source and includes information about the requested operation, the date and time of the operation, request parameters, and so on. CloudTrail log files aren't an ordered stack trace of the public API calls, so they don't appear in any specific order.

The following example shows a CloudTrail log entry that demonstrates the `DescribeFlow` operation:

```
{
  "eventVersion": "1.05",
  "userIdentity": {
    "type": "IAMUser",
    "principalId": "ABCDEFGHijkl123456789",
    "arn": "arn:aws:sts::111122223333:user/testUser",
    "accountId": "111122223333",
    "accessKeyId": "ABCDE12345FGHIJKLMN",
    "sessionContext": {
      "attributes": {
```

```

    "mfaAuthenticated": "false",
    "creationDate": "2018-11-16T20:34:51Z",
  },
  "sessionIssuer": {
    "type": "Role",
    "principalId": "ABCDEFGHijkl123456789",
    "arn": "arn:aws:iam::111122223333:role/Administrator",
    "accountId": "111122223333",
    "userName": "Administrator",
  },
},
},
"eventTime": "2018-11-16T20:34:52Z",
"eventSource": "mediaconnect.amazonaws.com",
"eventName": "DescribeFlow",
"awsRegion": "us-west-2",
"sourceIpAddress": "203.0.113.17",
"userAgent": "aws-cli/1.15.40 Python/3.6.5 Darwin/16.7.0 boto3/1.10.40",
"requestParameters": {
  "flowArn": "arn:aws:mediaconnect:us-west-2:111122223333:flow
%3A1-23aBC45dEF67hiJ8-12AbC34DE5fG%3AAwardsShow",
},
"responseElements": {
},
"requestID": "1a2b3c4d-1234-5678-1234-1a2b3c4d5e6f",
"eventID": "987abc65-1a2b-3c4d-5d6e-987abc654def",
"readOnly": true,
"eventType": "AwsApiCall",
"recipientAccountId": "111122223333",
}

```

Tagging AWS Elemental MediaConnect resources

A *tag* is a custom attribute label that you assign or that AWS assigns to an AWS resource. Each tag has two parts:

- A *tag key* (for example, `CostCenter`, `Environment`, or `Project`). Tag keys are case sensitive.
- An optional field known as a *tag value* (for example, `111122223333` or `Production`). Omitting the tag value is the same as using an empty string. Like tag keys, tag values are case sensitive.

Tags help you do the following:

- Identify and organize your AWS resources. Many AWS services support tagging, so you can assign the same tag to resources from different services to indicate that the resources are related. For example, you can assign the same tag to an AWS Elemental MediaConnect flow that you assign to an AWS Elemental MediaLive channel output.
- Track your AWS costs. You activate these tags on the AWS Billing and Cost Management dashboard. AWS uses the tags to categorize your costs and deliver a monthly cost allocation report to you. For more information, see [Use Cost Allocation Tags](#) in the *AWS Billing User Guide*.

The following sections provide more information about tags for AWS Elemental MediaConnect.

Topics

- [AWS Elemental MediaConnect resources that support tagging](#)
- [Tag naming and usage conventions](#)
- [Managing tags](#)

AWS Elemental MediaConnect resources that support tagging

The following resources in AWS Elemental MediaConnect support tagging:

- Flows
- Sources
- Outputs
- Entitlements
- Router inputs
- Router outputs
- Router network interfaces

For information about adding and managing tags, see [Managing tags](#).

AWS Elemental MediaConnect doesn't support the tag-based access control feature of AWS Identity and Access Management (IAM).

Tag naming and usage conventions

The following basic naming and usage conventions apply to using tags with AWS Elemental MediaConnect resources:

- Each resource can have a maximum of 50 tags.
- For each resource, each tag key must be unique, and each tag key can have only one value.
- The maximum tag key length is 128 Unicode characters in UTF-8.
- The maximum tag value length is 256 Unicode characters in UTF-8.
- Allowed characters are letters, numbers, spaces representable in UTF-8, and the following characters: `. : + = @ _ / -` (hyphen). Amazon EC2 resources allow any characters.
- Tag keys and values are case sensitive. As a best practice, decide on a strategy for capitalizing tags, and consistently implement that strategy across all resource types. For example, decide whether to use `Costcenter`, `costcenter`, or `CostCenter`, and use the same convention for all tags. Avoid using similar tags with inconsistent case treatment.
- The `aws :` prefix is prohibited for tags; it's reserved for AWS use. You can't edit or delete tag keys or values with this prefix. Tags with this prefix do not count against your tags per resource quota.

Managing tags

Tags are made up of the `Key` and `Value` properties on a resource. You can use the AWS Elemental MediaConnect console, the AWS CLI, or the AWS Elemental MediaConnect API to add, edit, or delete the values for these properties. For information about working with tags, see the following:


- [the section called “Managing tags on a flow”](#)
- [the section called “Managing tags on a source”](#)
- [the section called “Managing tags on an output”](#)
- [the section called “Managing tags on an entitlement”](#)
- [Creating a router I/O in MediaConnect](#)
- [Creating a router network interface in MediaConnect](#)

Monitoring AWS media services with workflow monitor

Workflow monitor is a tool for the discovery, visualization, and monitoring of AWS media workflows. Workflow monitor is available in the AWS console and API. You can use workflow monitor to discover and create visual mappings of your workflow's resources, called *signal maps*. You can create and manage Amazon CloudWatch alarm and Amazon EventBridge rule templates to monitor the mapped resources. The monitoring templates you create are transformed into deployable AWS CloudFormation templates to allow repeatability. AWS recommended alarm templates provide predefined best-practice monitoring.


Discover

Utilize signal maps to automatically discover interconnected AWS resources associated with your media workflow. Discovery can begin at any supported service resource and creates an end-to-end mapping of the workflow. Signal maps can be used as stand-alone visualization tools or enhanced with monitoring templates.

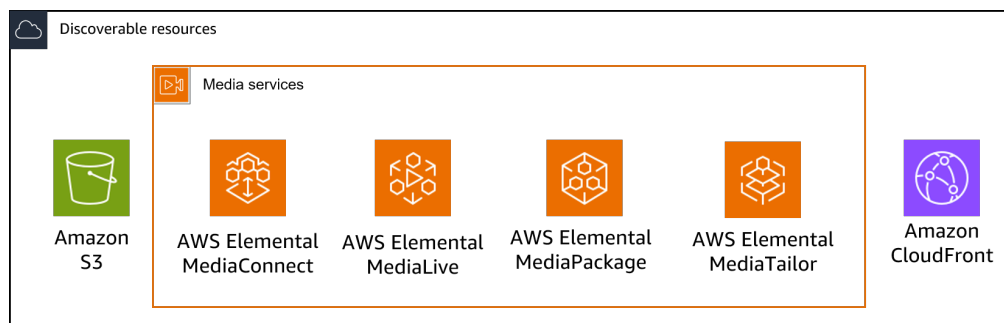

Monitor

You can create custom CloudWatch alarm and EventBridge rule templates to monitor the health and status of your media workflows. Best practice alarm templates are available to import into your workflow monitor environment. You can use the best practice alarm templates as they are, or edit them to better fit your workflow. Any templates you create are transformed into CloudFormation templates for repeatable deployment.

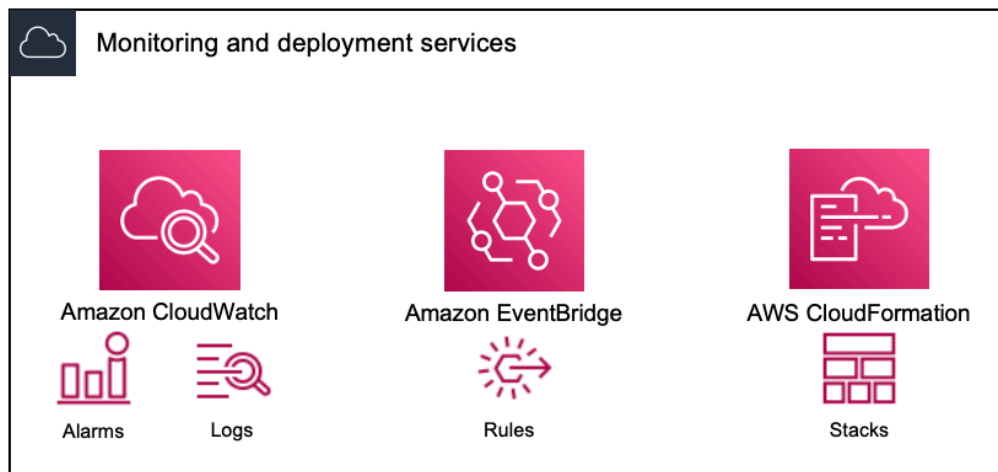

Note

There is no direct cost for using workflow monitor. However, there are costs associated with the resources created and used to monitor your workflow.

When monitoring is deployed, Amazon CloudWatch and Amazon EventBridge resources are created. When using the AWS Management Console, prior to deploying monitoring to a signal map, you will be notified of how many resources will be created. For more information about pricing, see: [CloudWatch pricing](#) and [EventBridge pricing](#).

Workflow monitor uses AWS CloudFormation templates to deploy the CloudWatch and EventBridge resources. These templates are stored in a standard class Amazon Simple Storage Service bucket that is created on your behalf, by workflow monitor, during the deployment process and will incur object storage and recall charges. For more information about pricing, see: [Amazon S3 pricing](#).

Previews generated in the workflow monitor signal map for AWS Elemental MediaPackage channels are delivered from the MediaPackage Origin Endpoint and will incur Data Transfer Out charges. For pricing, see: [MediaPackage pricing](#).

Components of workflow monitor

Workflow monitor has four major components:

- CloudWatch alarm templates - Define the conditions you would like to monitor using CloudWatch. You can create your own alarm templates, or import predefined templates created by AWS. For more information, see: [CloudWatch alarm groups and templates for monitoring your AWS media workflow](#)

- EventBridge rule templates - Define how EventBridge sends notifications when an alarm is triggered. For more information, see: [EventBridge rule groups and templates for monitoring your AWS media workflow](#)
- Signal maps - Use an automated process to create AWS Elemental workflow maps using existing AWS resources. The signal maps can be used to discover resources in your workflow and deploy monitoring to those resources. For more information, see: [Workflow monitor signal maps](#)
- Overview - The overview page allows you to directly monitor the status of multiple signal maps from one location. Review metrics, logs, and alarms for your workflows. For more information, see: [Workflow monitor overview](#)

Supported services

Workflow monitor supports automatic discovery and signal mapping of resources associated with the following services:

- AWS Elemental MediaConnect
- AWS Elemental MediaLive
- AWS Elemental MediaPackage
- AWS Elemental MediaTailor
- Amazon S3
- Amazon CloudFront
- AWS Elemental Inference

Topics

- [Configuring workflow monitor to monitor AWS media services](#)
- [Using workflow monitor](#)

Configuring workflow monitor to monitor AWS media services

To setup workflow monitor for the first time; you create the alarm and event templates, and discover signal maps that are used to monitor your media workflows. The following guide contains the steps necessary to setup both Administrator and Operator level IAM roles, create workflow monitor resources, and deploy monitoring to your workflows.

Topics

- [Getting started with workflow monitor](#)
- [Workflow monitor groups and templates](#)
- [Workflow monitor signal maps](#)
- [Workflow monitor quotas](#)

Getting started with workflow monitor

The following steps provide a basic overview of using workflow monitor for the first time.

1. Setup workflow monitor IAM permissions for administrator and operator level roles: [Workflow monitor IAM policies](#)
2. Build alarm templates or import predefined templates created by AWS: [CloudWatch alarms](#)
3. Build notification events that will be delivered by EventBridge: [EventBridge rules](#)
4. Discover signal maps using your existing AWS Elemental resources: [Signal maps](#)
5. Attach the alarm templates and notification rules to your signal map: [Attaching templates](#)
6. Deploy the templates to begin monitoring the signal map: [Deploying monitoring templates](#)
7. Monitor and review your workflow monitor resources using the overview section of the AWS console: [Overview](#)



Workflow monitor IAM policies

Workflow monitor interacts with multiple AWS services to create signal maps, build CloudWatch and EventBridge resources, and CloudFormation templates. Because workflow monitor interacts with a wide range of services, specific AWS Identity and Access Management (IAM) policies must be assigned for these services. The following examples indicate the necessary IAM policies for both administrator and operator IAM roles.

Administrator IAM policy

The following example policy is for an administrator-level workflow monitor IAM policy. This role allows for the creation and management of workflow monitor resources and the supported service resources that interact with workflow monitor.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "cloudwatch:List*",
        "cloudwatch:Describe*",
        "cloudwatch:Get*",
        "cloudwatch:PutAnomalyDetector",
        "cloudwatch:PutMetricData",
        "cloudwatch:PutMetricAlarm",
        "cloudwatch:PutCompositeAlarm",
        "cloudwatch:PutDashboard",
        "cloudwatch>DeleteAlarms",
        "cloudwatch>DeleteAnomalyDetector",
        "cloudwatch>DeleteDashboards",
        "cloudwatch:TagResource",
        "cloudwatch:UntagResource"
      ],
      "Resource": "*"
    },
    {
      "Effect": "Allow",
      "Action": [
        "cloudformation:List*",
        "cloudformation:Describe*",
        "cloudformation:CreateStack",
        "cloudformation:UpdateStack",
        "cloudformation>DeleteStack",
        "cloudformation:TagResource",
        "cloudformation:UntagResource"
      ],
      "Resource": "*"
    }
  ]
}
```

```

    },
    {
      "Effect": "Allow",
      "Action": [
        "cloudfront:List*",
        "cloudfront:Get*"
      ],
      "Resource": "*"
    },
    {
      "Effect": "Allow",
      "Action": [
        "ec2:DescribeNetworkInterfaces"
      ],
      "Resource": "*"
    },
    {
      "Effect": "Allow",
      "Action": [
        "elemental-inference:List*",
        "elemental-inference:Get*"
      ],
      "Resource": "*"
    },
    {
      "Effect": "Allow",
      "Action": [
        "events:List*",
        "events:Describe*",
        "events:CreateEventBus",
        "events:PutRule",
        "events:PutTargets",
        "events:EnableRule",
        "events:DisableRule",
        "events>DeleteRule",
        "events:RemoveTargets",
        "events:TagResource",
        "events:UntagResource"
      ],
      "Resource": "*"
    },
    {
      "Effect": "Allow",
      "Action": [

```

```

        "logs:Describe*",
        "logs:Get*",
        "logs:TagLogGroup",
        "logs:TagResource",
        "logs:UntagLogGroup",
        "logs:UntagResource"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "mediaconnect:List*",
        "mediaconnect:Describe*"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "medialive:*"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "mediapackage:List*",
        "mediapackage:Describe*"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "mediapackagev2:List*",
        "mediapackagev2:Get*"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "mediapackage-vod:List*",

```

```

        "mediapackage-vod:Describe*"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "mediatailor:List*",
        "mediatailor:Describe*",
        "mediatailor:Get*"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "resource-groups:ListGroup",
        "resource-groups:GetGroup",
        "resource-groups:GetTags",
        "resource-groups:GetGroupQuery",
        "resource-groups:GetGroupConfiguration",
        "resource-groups:CreateGroup",
        "resource-groups:UngroupResources",
        "resource-groups:GroupResources",
        "resource-groups>DeleteGroup",
        "resource-groups:UpdateGroupQuery",
        "resource-groups:UpdateGroup",
        "resource-groups:Tag",
        "resource-groups:Untag"
    ],
    "Resource": "*"
},
{
    "Effect": "Allow",
    "Action": [
        "s3:*"
    ],
    "Resource": "arn:aws:s3:::workflow-monitor-templates*"
},
{
    "Effect": "Allow",
    "Action": [
        "sns:TagResource",
        "sns:UntagResource"
    ]
}

```

```
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "tag:Get*",
      "tag:Describe*",
      "tag:TagResources",
      "tag:UntagResources"
    ],
    "Resource": "*"
  }
]
```

Operator IAM policy

The following example policy is for an operator-level workflow monitor IAM policy. This role allows for limited and read-only access to the workflow monitor resources and the supported service resources that interact with workflow monitor.

JSON

```
{
  "Version": "2012-10-17",
  "Statement": [
    {
      "Effect": "Allow",
      "Action": [
        "cloudwatch:List*",
        "cloudwatch:Describe*",
        "cloudwatch:Get*"
      ],
      "Resource": "*"
    },
    {
      "Effect": "Allow",
      "Action": [
        "cloudformation:List*",
        "cloudformation:Describe*"
      ],
      "Resource": "*"
    }
  ]
}
```

```

    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "cloudfront:List*",
      "cloudfront:Get*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "ec2:DescribeNetworkInterfaces"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "elemental-inference:List*",
      "elemental-inference:Get*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "events:List*",
      "events:Describe*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "logs:Describe*",
      "logs:Get*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",

```

```
    "Action": [
      "mediacconnect:List*",
      "mediacconnect:Describe*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "medialive:List*",
      "medialive:Get*",
      "medialive:Describe*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "mediapackage:List*",
      "mediapackage:Describe*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "mediapackagev2:List*",
      "mediapackagev2:Get*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "mediapackage-vod:List*",
      "mediapackage-vod:Describe*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "mediatailor:List*",
      "mediatailor:Describe*",
```

```

        "mediatailor:Get*"
    ],
    "Resource": "*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "s3:Get*",
      "s3:List*"
    ],
    "Resource": "arn:aws:s3:::workflow-monitor-templates*"
  },
  {
    "Effect": "Allow",
    "Action": [
      "tag:Get*",
      "tag:Describe*"
    ],
    "Resource": "*"
  }
]
}

```

Workflow monitor groups and templates

Before you can deploy workflow monitoring to a signal map, you must create the groups and templates for CloudWatch alarms and EventBridge notifications. The CloudWatch templates define what scenarios and thresholds will be used to trigger the alarms. The EventBridge templates will determine how these alarms are reported to you.

If you only want mappings of your connected resources and do not want to use the monitoring template capabilities of workflow monitor, signal maps can be used without CloudWatch and EventBridge templates. For more information about using signal maps, see: [Signal maps](#)

Topics

- [CloudWatch alarm groups and templates for monitoring your AWS media workflow](#)
- [EventBridge rule groups and templates for monitoring your AWS media workflow](#)

CloudWatch alarm groups and templates for monitoring your AWS media workflow

Workflow monitor alarms allow you to use existing CloudWatch metrics as the foundation of alarms for your signal maps. You can create an alarm template group to sort and classify the types of alarming that is important to your workflow. Within each alarm template group, you create alarm templates with specific CloudWatch metrics and parameters that you want to monitor. You can create your own alarm templates or import recommended alarm templates created by AWS. After creating an alarm template group and alarm templates within that group, you can attach one or more of these alarm template groups to a signal map.

You must create an alarm template group first. After you have created an alarm template group, you can create your own templates or use recommended templates created by AWS. If you want to create your own alarm templates, continue on this page. For more information about importing recommended templates, see: [Recommended templates](#)

This section covers the creation of CloudWatch alarms using workflow monitor. For more information about how the CloudWatch service handles alarms and details of the alarm components, see: [Using CloudWatch alarms](#) in the *Amazon CloudWatch User Guide*

Creating alarm template groups

Alarm template groups allow you to sort and classify the types of alarms that are important to your workflow.

To create an alarm template group

1. From the workflow monitor console's navigation pane, select **CloudWatch alarm templates**.
2. Select **Create alarm template group**.
3. Give the alarm template group a unique **Group name** and optional **Description**.
4. Select **Create**, You will be taken to the newly created alarm template group's details page.

Creating alarm templates

You can create alarm templates with the CloudWatch metrics and parameters that you want to monitor.

To create an alarm template

1. From the alarm template group's details page, select **Create alarm template**.

2. Give the alarm template a unique **Template name** and optional **Description**.
3. In the **Choose metric** section:
 1. Select a **Target Resource Type**. The target resource type is a resource for the respective service, such as a channel for MediaLive and MediaPackage or a flow for MediaConnect.
 2. Select a **Metric Name**. This is the CloudWatch metric that acts as the foundation for the alarm. The list of metrics will change depending on the selected **Target Resource Type**.
4. In the **Alarm settings** section:

 Note

For more information about how the CloudWatch service handles alarms and details of the alarm components, see: [Using CloudWatch alarms](#) in the *Amazon CloudWatch User Guide*

1. Select the **Statistic**. This is a value such as a **Sum** or an **Average** that will be used to monitor the metric.
 2. Select the **Comparison Operator**. This field references the **Threshold** that you set in the next step.
 3. Set a **Threshold**. This is a numeric value that the **Comparison Operator** uses to determine greater than, less than, or equal to status.
 4. Set a **Period**. This is a time value, in seconds. The **Period** is the length of time that the **Statistic**, **Comparison Operator**, and **Threshold** interact to determine if the alarm gets triggered.
 5. Set the **Datapoints**. This value determines how many datapoints are needed to trigger the alarm.
 6. Select how to **Treat Missing Data**. This selection determines how this alarm reacts to missing data.
5. Select **Create** to complete the process.

An example of a completed alarm template could have the following parameters: A MediaConnect flow **Target Resource Type** is monitored for the Disconnections **Metric Name**. The **Statistic** value is set to Sum with a **Comparison Operator** of "greater than or equal to" and a **Threshold** of 10. The

Period is set to 60 seconds, and only requires 1 out of 1 **Datapoints**. **Treat Missing Data** is set to "ignore."

The result of these settings is: workflow monitor will monitor for disconnections on the flow. If 10 or more disconnections occur within 60 seconds, the alarm will be triggered. 10 or more disconnections in 60 seconds only needs to happen one time for the alarm to be triggered.

 Note

For alarm templates that target an AWS Elemental Inference (Elemental Inference) feed, set **Treat Missing Data** to notBreaching. This setting applies to the following metrics:

- GetMetadataRequestCount
- ProcessingFaultCount
- PutMediaRequestCount

These alarms monitor error data, which Elemental Inference publishes only when a failure occurs. A healthy feed has no data points for these alarms.

For each request count template, you get two alarms:

- A 4xx alarm, which indicates a configuration problem, such as a feed with no enabled outputs.
- A 5xx alarm, which indicates an Elemental Inference service fault.

Recommended alarm templates for monitoring your AWS media workflow

Workflow monitor's recommended templates are a curated selection of AWS Elemental service metrics with predefined alarm settings appropriate for the metric. If you do not want to create customized alarm templates, recommended templates provide you with best-practice monitoring templates that are created by AWS.

Workflow monitor contains recommended template groups for each supported service. These groups are designed to apply best-practice monitoring to specific types of workflows. Each template group contains a curated selection of alarms configured from service-specific metrics. For example, a recommended template group for a MediaLive multiplex workflow will have a different set of preconfigured metrics than a MediaConnect CDI workflow.

To use recommended alarm templates

1. Follow the steps to [create an alarm template group](#), or select an existing one.
2. In the **Alarm templates** section, select **Import**. You will need to import the AWS recommended templates into your template group.
3. Use the **CloudWatch alarm template groups** dropdown to select an AWS recommended group. These groups contain curated alarms for specific services.
4. Select the templates to import using the check boxes. Each template will list its metrics, preconfigured monitoring values, and provide a description of the metric. When you are done selecting templates, select the **Add** button.
5. The selected templates will move to the **Alarm template(s) to import** section. Review your choices and select **Import**.
6. After the import is complete, the selected templates will be added to the template group. If you want to add more templates, repeat the import process.
7. Imported templates can be customized after import. Alarm settings can be modified to fit your alarming needs.

EventBridge rule groups and templates for monitoring your AWS media workflow

CloudWatch uses Amazon EventBridge rules to send notifications. You begin by creating an event template group. In that event template group, you create event templates that determine what conditions create a notification and who is notified.

This section covers the creation of EventBridge rules using workflow monitor. For more information about how the EventBridge service uses rules, see: [EventBridge rules](#) in the *Amazon EventBridge User Guide*

Creating event template groups

Event template groups allow you to sort and classify events based on your use case.

To create an event template group

1. From the workflow monitor console's navigation pane, select **EventBridge rule templates**.
2. Select **Create event template group**.
3. Give the alarm template group a unique **Group name** and optional **Description**.

4. Select **Create**. You will be taken to the newly created alarm template group's details page.

Creating event templates

You can send notifications based on event templates you create.

To create an event template

1. From the event template group's details page, select **Create event template**.
2. Give the event template a unique **Template name** and optional **Description**.
3. In the **Rule settings** section:
 1. Select an **Event type**. When selecting an event type, you can choose between several events created by AWS or select **Signal map active alarm** to use an alarm created by an alarm template.
 2. Select a **Target service**. This determines how you would like to be notified of this event. You can select Amazon Simple Notification Service or CloudWatch logs.
 3. After selecting a target service, select a **Target**. This will be a Amazon SNS topic or a CloudWatch log group, depending on your target service selection.
4. Select **Create** to complete the process.

Workflow monitor signal maps

Signal maps are visual mappings of AWS resources in your media workflow. You can use workflow monitor to start the signal map discovery on any of the supported resource types. During the discovery process, workflow monitor will automatically and recursively map all connected AWS resources. After the signal map has been created, you can use the workflow monitor console to do things like deploy monitoring templates, view metrics, and view details of the mapped resources.

Topics

- [Creating signal maps for AWS media workflows](#)
- [Viewing signal maps of AWS media workflows](#)
- [Attaching alarm and event templates to the signal map of your AWS media workflow](#)
- [Deploying templates to the signal map of your AWS media workflow](#)
- [Updating the signal map of your AWS media workflow](#)
- [Deleting the signal map of your AWS media workflow](#)

Creating signal maps for AWS media workflows

You can use workflow monitor signal maps to create a visual mapping of all connected AWS resources in your media workflow.

To create a signal map

1. From the workflow monitor console's navigation pane, select **Signal maps**.
2. Select **Create signal map**.
3. Give the signal map a **Name** and **Description**.
4. In the **Discover new signal map** section, resources in the current account and selected region are displayed. Select a resource to begin signal map discovery. The selected resource will be the starting point for discovery.
5. Select **Create**. Allow a few moments for the discovery process to complete. After the process is complete, you will be presented with the new signal map.

Note

Previews generated in the workflow monitor signal map for AWS Elemental MediaPackage channels are delivered from the MediaPackage Origin Endpoint and will incur Data Transfer Out charges. For pricing, see: [MediaPackage pricing](#).

Viewing signal maps of AWS media workflows

Workflow monitor signal maps allow you to see a visual mapping of all connected AWS resources in your media workflow.

Signal map views

After selecting a signal map, you have two views that can be used to monitor or configure the signal map. **Monitor signal map** and **Configure signal map** is a context-sensitive button found in the upper-right of the signal map console section.

If you select the signal map using the **Signal maps** section of the navigation pane, your signal map will be displayed in the configuration view. The configuration view allows you to make changes to the template groups attached to this signal map, deploy the attached templates, and view the basic details and tags of the signal map.

If you select the signal map using the **Overview** section of the navigation pane, your signal map will be displayed in monitoring view. The monitoring view displays the CloudWatch alarms, EventBridge rules, alerts, logs, and metrics for this signal map.

The view can be changed at any time by selecting the **Monitor/Configure signal map** button in the upper-right. The configuration view requires administrator-level IAM permissions. Required IAM permissions can be viewed here: [Workflow monitor IAM policies](#)

Navigating the signal map

A signal map will contain nodes for every supported AWS resource discovered by workflow monitor. Certain resources, such as MediaLive channels and MediaPackage endpoints can display thumbnail previews of the content, if thumbnail previews are available.

Selecting a resource node, and selecting **View selected resource details** from the **Actions** dropdown menu will take you to the associated service's details page. For example, selecting a MediaLive channel and selecting **View selected resource details** will open the MediaLive console's details page for that channel.

Selecting a resource node will filter the list of active alarms to only that node. If you select the resource's **Target ARN** in the active alarm, you will be taken to the associated service's details page, with the selected resource open.

Attaching alarm and event templates to the signal map of your AWS media workflow

After you have created alarm and event templates, you need to attach these to a signal map. Any of the alarm and event templates you have created can be attached to any discovered signal maps.

To attach alarm and event templates to your signal map

1. From the workflow monitor console's navigation pane, select **Signal maps** and select the signal map you want to work with.
2. In the upper-right of the signal map page, in the **CloudWatch alarm template groups** tab, select **Attach CloudWatch alarm template groups**.
 1. In the new section that opens, choose all of the alarm template groups that you want to apply to this signal map, then select **Add**. This will cause the selected alarm template groups to move to the **Attached CloudWatch alarm template groups** section.
 2. Selecting **Save** will save your changes and return you to the signal map page.

3. At the right of the signal map page, select the **EventBridge rule template groups** tab then select **Attach EventBridge rule template groups**.
 1. In the new section that opens, choose all of the event template groups that you want to apply to this signal map, then select **Add**. This will cause the selected rule template groups to move to the **Attached EventBridge rule template groups** section.
 2. Selecting **Save** will save your changes and return you to the signal map page.
4. You have assigned CloudWatch alarm and EventBridge rule templates to the signal map, but the monitoring is not yet deployed. The next section will cover the deployment of the monitoring resources.

Deploying templates to the signal map of your AWS media workflow

After you have attached the alarm and event templates to your signal map, you must deploy the monitoring. Until the deployment is complete, the monitoring of your signal map will not be active.

Workflow monitor will only deploy alarms that are relevant to the selected signal map. For example, the attached alarm template group might contain alarms for multiple services, such as MediaLive, MediaPackage, and MediaConnect. If the selected signal map only contains MediaLive resources, no MediaPackage or MediaConnect alarms will be deployed.

To deploy the monitoring templates

1. After attaching alarm and event template groups to your signal map and saving your changes, select **Deploy monitor** in the **Actions** dropdown menu.
2. You will be asked to confirm the deployment and presented with the number of CloudWatch and EventBridge resources that will be created. If you would like to proceed, select **Deploy**.

Note

There is no direct cost for using workflow monitor. However, there are costs associated with the resources created and used to monitor your workflow.

When monitoring is deployed, Amazon CloudWatch and Amazon EventBridge resources are created. When using the AWS Management Console, prior to deploying monitoring to a signal map, you will be notified of how many resources will be created. For more information about pricing, see: [CloudWatch pricing](#) and [EventBridge pricing](#).

Workflow monitor uses AWS CloudFormation templates to deploy the CloudWatch and EventBridge resources. These templates are stored in a standard class Amazon Simple Storage Service bucket that is created on your behalf, by workflow monitor, during the deployment process and will incur object storage and recall charges. For more information about pricing, see: [Amazon S3 pricing](#).

3. The status of the deployment is displayed next to the name of the signal map. The deployment status is also visible in the **Stacks** section of the CloudFormation console. After a few moments of resource creation and deployment, your signal map monitoring will begin.

Updating the signal map of your AWS media workflow

If a change is made to your workflow, you might need to rediscover the signal map and redeploy monitoring resources. Workflow monitor is a visualization and monitoring tool that does not have the ability to make any changes to your workflow. Signal maps represent a point-in-time visualization of your workflow. In the event that you add, remove, or significantly modify parts of your media workflow, we recommend that you rediscover the signal map. If you have monitoring resources attached to the signal map, we recommend you redeploy monitoring after the rediscovery process.

To rediscover a signal map

1. From the workflow monitor console's navigation pane, select **Signal maps** and select the signal map you want to work with.
2. Verify that you are in the **Configure signal map** view. For more information about changing views, see: [Viewing signal maps](#)
3. In the upper-right of the signal map page, select the **Actions** dropdown menu. Select **Rediscover**.
4. You will be presented with the rediscovery screen. Select a resource that is a part of the workflow you are rediscovering. Select the **Rediscover** button.
5. The signal map will be rebuilt according to the current workflow. If you need to redeploy monitoring resources, stay on this signal map's page. Any previously attached monitoring templates will remain attached, but will need to be redeployed.

To redeploy monitoring templates after a signal map rediscovery

1. After the rediscovery, you will be directed to the updated signal map. To redeploy the monitoring templates, select **Deploy monitor** from the **Actions** dropdown menu.
2. You will be asked to confirm the deployment and presented with the number of any CloudWatch and EventBridge resources that will be created. If you would like to proceed, select **Deploy**.
3. The status of the deployment is displayed next to the name of the signal map. After a few moments of resource creation and deployment, your signal map monitoring will begin.

Deleting the signal map of your AWS media workflow

If you no longer need a signal map, it can be deleted. If you have monitoring templates deployed on the signal map, the deletion process will ask you to delete any CloudWatch and EventBridge resources that have been deployed to this signal map. Deleting the deployed resources does not affect the templates that created them. This resource deletion is to ensure that you do not have CloudWatch and EventBridge resources that are deployed but not used.

To delete a signal map

1. From the workflow monitor console's navigation pane, select **Signal maps** and select the radio button next to the signal map you want to delete.
2. Select the **Delete** button. You will be asked to confirm the deletion of the monitoring resources. Select **Delete** to begin the monitoring resource deletion process.
3. The **Monitor deployment** column will display the current status. When the status has changed to **DELETE_COMPLETE**, select the **Delete** button again.
4. You will be asked to confirm deletion of the signal map. Select **Delete** to proceed and delete the signal map.

Workflow monitor quotas

The following section contains quotas for workflow monitor resources. Each quota is on a "per account" basis. If you need to increase a quota for your account, you can use the [AWS Service Quotas console](#) to request an increase, unless otherwise noted in the following table.

Quotas

Resource type	Quota
CloudWatch alarm template groups	20
CloudWatch alarm templates	200
EventBridge rule template groups	20
EventBridge rule templates	200
Signal maps	30
Signal maps: CloudWatch alarm template groups attached to a single signal map	5 You cannot increase this quota.
Signal maps: EventBridge rule template groups attached to a single signal map	5 You cannot increase this quota.

Using workflow monitor

Use the **overview** and **signal maps** sections of the workflow monitor console to review the current status of the workflows and any associated alarms, metrics, and logs.

Topics

- [Workflow monitor overview](#)
- [Overview logs and metrics for workflow monitor](#)
- [Using workflow monitor signal maps](#)

Workflow monitor overview

The **Overview** section of the workflow monitor console is a dashboard that provides at-a-glance information about your signal maps. In the overview section, you can see the current state of each signal map's monitoring, as well as CloudWatch metrics and any associated CloudWatch logs. You can select any signal map to be taken to that signal maps console page.

Overview filtering

Using the **Search** bar in the overview section, you can filter the list of signal maps using context sensitive constraints. After selecting the search bar, you will be presented with a list of **Properties** to filter by. Selecting a property will present **Operators** such as Equals, Contains, Does not equal, and Does not contain. Selecting an operator will create a list of resources from the selected property type. Selecting one of these resources will cause the signal map list to only display signal maps that fit the constraint you defined.

Overview logs and metrics for workflow monitor

To view CloudWatch metrics and logs for a signal map, select the radio button next to the name of the signal map. A tabbed interface for both metrics and logs will appear beneath the signal map list.

CloudWatch Metrics

CloudWatch metrics for the selected signal map will be context-sensitive and only display metrics associated with the services used in that signal maps workflow. You can use the on-screen metrics tools to customize the displayed metric periods and time ranges.

CloudWatch Logs

If you associated a CloudWatch log group with the signal map, that group will be displayed here.

Using workflow monitor signal maps

From the **overview** section of the console, you can select a specific signal map to view more information about that signal map and its attached monitoring resources.

After selecting a signal map, you will be presented with the signal map and a number of tabbed section containing more information:

- CloudWatch alarms
- EventBridge rules
- AWS Elemental alerts
- Metrics
- Logs
- Basic details

Navigating the signal map

A signal map will contain nodes for every supported AWS resource discovered by workflow monitor. Certain resources, such as MediaLive channels and MediaPackage endpoints can display thumbnail previews of the content, if thumbnail previews are available.

Selecting a resource node, and selecting **View selected resource details** from the **Actions** dropdown menu will take you to the associated service's details page. For example, selecting a MediaLive channel and selecting **View selected resource details** will open the MediaLive console's details page for that channel.

Selecting a resource node will filter the list of active alarms to only that node. If you select the resource's **Target ARN** in the active alarm, you will be taken to the associated service's details page, with the selected resource open.

Maintenance in MediaConnect

AWS Elemental MediaConnect routinely performs maintenance on underlying systems for security, reliability, and operational performance. These maintenance activities include actions such as patching the operating system, updating drivers, and installing software updates.

Maintenance applies to both router I/Os (inputs and outputs) and flows. For active resources, MediaConnect interrupts the resource to apply updates. For idle resources, updates are applied automatically the next time the resource starts.

To minimize disruption, configure a *maintenance window* for each resource. A maintenance window specifies the preferred day and start hour for maintenance to occur. The window duration is two hours. When you configure a window, MediaConnect automatically applies updates at a time within that window.

Important

The two-hour window duration does not mean your resource is affected for two hours. MediaConnect applies updates at some point within the two-hour window.

If you operate redundant resources for resilience—for example, redundant flows or router I/Os in different AWS Regions—select different maintenance windows for each redundant resource. Choosing different days or times prevents simultaneous patching of redundant resources and helps maintain availability during maintenance events.

Topics

- [How maintenance works](#)
- [Viewing router I/O maintenance status](#)
- [Setting router I/O maintenance windows](#)
- [Viewing flow maintenance status](#)
- [Setting flow maintenance windows](#)
- [Manually restarting resources for maintenance](#)

How maintenance works

For router I/Os, MediaConnect automatically schedules maintenance every 60–66 days after the I/O is started. You configure a preferred day and start hour, and MediaConnect applies updates to the I/O within that two-hour window.

For flows, MediaConnect assigns a "Required by" date when updates are available. You configure a preferred day and start hour, and MediaConnect restarts the flow within that two-hour window.

What happens during maintenance

The impact of maintenance depends on the resource type:

Router outputs

The output enters the **Migrating** state. During this process, there is an interruption to that output's stream only. After the maintenance completes, the output returns to the **Active** state.

Router inputs

The input enters the **Migrating** state. During this process, there is an interruption to all outputs currently routed to receive from that input. After the maintenance completes, the input returns to the **Active** state.

Flows

During maintenance, there is an interruption to all outputs on the flow.

If maintenance does not complete

The rescheduling behavior depends on the resource type:

Flows

If MediaConnect is unable to perform maintenance at the scheduled time, the service reschedules maintenance to the following week's maintenance window.

Router I/Os

If maintenance does not complete within the scheduled window, MediaConnect reschedules it to the next maintenance period.

Viewing router I/O maintenance status

You can view the maintenance status of your router I/Os in the MediaConnect console or by using the AWS CLI.

To view router I/O maintenance status (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediacnect/>.
2. In the navigation pane, under **Global routing**, choose **Router inputs** or **Router outputs**.
3. The **Time until maintenance** column shows the number of days remaining until the next scheduled maintenance, or "No maintenance scheduled" if no maintenance is pending.
4. Choose the number of days remaining to view additional details, including the window start time, window end time, and scheduled maintenance time.

To view router I/O maintenance status (AWS CLI)

Use the `list-router-inputs` or `list-router-outputs` command to see maintenance status across all router I/Os. You can also use the `get-router-input` or `get-router-output` command for a specific router I/O.

The response includes maintenance details in the Maintenance-related fields. Active I/Os with scheduled maintenance include `MaintenanceScheduleType` and `MaintenanceSchedule`:

```
{
  "RouterInputs": [
    {
      "Name": "StudioCam1",
      "Arn": "arn:aws:mediacnect:us-
east-1:111122223333:routerInput:a1b2c3d4e5f6",
      "State": "ACTIVE",
      ...
      "MaintenanceScheduleType": "WINDOW",
      "MaintenanceSchedule": {
        "Window": {
          "Start": "2026-07-20T04:00:00+00:00",
          "End": "2026-07-20T06:00:00+00:00",
          "ScheduledTime": "2026-07-20T04:30:00+00:00"
        }
      }
    }
  ],
}
```



```
{
  "Name": "StudioCam2",
  "Arn": "arn:aws:mediaconnect:us-
east-1:111122223333:routerInput:g7h8i9j0k1l2",
  "State": "STANDBY",
  ...
}
```

Setting router I/O maintenance windows

You can configure a maintenance window for a router I/O when you create it, or update the window later. When creating a router I/O, you can specify a preferred day and time, or choose the default option to let MediaConnect select a schedule automatically.

Note

You cannot change the maintenance schedule for a router I/O while it is active. You must stop the I/O first (placing it in Standby state) before you can update its maintenance configuration. After the I/O starts, the maintenance schedule is locked until the I/O is stopped again.

To set or update a router I/O maintenance window (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, under **Global routing**, choose **Router inputs** or **Router outputs**.
3. Choose the input or output name to open its details page.
4. Choose **Edit**.
5. In the **Maintenance configuration** section, for **Maintenance type**, choose one of the following options:
 - **Default** – Let MediaConnect select maintenance scheduling preferences on your behalf.
 - **Preferred day and time** – Set a preferred day and time for scheduled maintenance.
6. If you chose **Preferred day and time**, specify the **Maintenance day** and **Maintenance time** (UTC).
7. Choose **Save changes**.

To create a router I/O with a preferred maintenance window (AWS CLI)

Use the `create-router-input` or `create-router-output` command with the `--maintenance-configuration` parameter to specify a preferred day and time for maintenance.

The following example creates a router input with a preferred maintenance window of Sunday at 04:00 UTC:

```
aws mediaconnect create-router-input \
  --name StudioCam1 \
  --maximum-bitrate 50000000 \
  --routing-scope REGIONAL \
  --tier INPUT_50 \
  --configuration '{"Standard":{"NetworkInterfaceArn":"arn:aws:mediaconnect:us-east-1:111122223333:routerNetworkInterface:a1b2c3d4e5f6","ProtocolConfiguration":{"SrtListener":{"Port":5000,"MinimumLatencyMilliseconds":100}}}}' \
  --maintenance-configuration '{"PreferredDayTime":{"Day":"SUNDAY","Time":"04:00"}}'
```

The response includes the maintenance configuration:

```
{
  "RouterInput": {
    "Name": "StudioCam1",
    "Arn": "arn:aws:mediaconnect:us-east-1:111122223333:routerInput:a1b2c3d4e5f6",
    "State": "STANDBY",
    ...
    "MaintenanceType": "PREFERRED_DAY_TIME",
    "MaintenanceConfiguration": {
      "PreferredDayTime": {
        "Day": "SUNDAY",
        "Time": "04:00:00Z"
      }
    }
  }
}
```

To create a router I/O with default maintenance (AWS CLI)

Use the `create-router-input` or `create-router-output` command with `--maintenance-configuration '{"Default":{}}'` to let MediaConnect select a maintenance schedule automatically.

The following example creates a router input with the default maintenance configuration:

```
aws mediaconnect create-router-input \
  --name StudioCam2 \
  --maximum-bitrate 50000000 \
  --routing-scope REGIONAL \
  --tier INPUT_50 \
  --configuration '{"Standard":{"NetworkInterfaceArn":"arn:aws:mediaconnect:us-east-1:111122223333:routerNetworkInterface:a1b2c3d4e5f6","ProtocolConfiguration":{"SrtListener":{"Port":5001,"MinimumLatencyMilliseconds":100}}}}' \
  --maintenance-configuration '{"Default":{}}'
```

The response includes the maintenance configuration:

```
{
  "RouterInput": {
    "Name": "StudioCam2",
    "Arn": "arn:aws:mediaconnect:us-east-1:111122223333:routerInput:g7h8i9j0k1l2",
    "State": "STANDBY",
    ...
    "MaintenanceType": "DEFAULT",
    "MaintenanceConfiguration": {
      "Default": {}
    }
  }
}
```

To update a router I/O maintenance window (AWS CLI)

Use the `update-router-input` or `update-router-output` command with the `--maintenance-configuration` parameter to change the maintenance window. The I/O must be in Standby state.

The following example updates the maintenance window for a router input to Wednesday at 02:00 UTC:

```
aws mediaconnect update-router-input \
  --arn arn:aws:mediaconnect:us-east-1:111122223333:routerInput:a1b2c3d4e5f6 \
  --maintenance-configuration '{"PreferredDayTime":{"Day":"WEDNESDAY","Time":"02:00"}}'
```

Viewing flow maintenance status

You can view the maintenance status of your flows in the MediaConnect console or by using the AWS CLI.

To view flow maintenance status (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediacnect/>.
2. In the navigation pane, choose **Flows**.
3. The **Maintenance window** column displays the maintenance status for each flow. If maintenance is required, the column shows the scheduled date.
4. To view detailed maintenance information for a specific flow, choose the flow name to open its details page.

To view flow maintenance status (AWS CLI)

Use the `list-flows` command to see maintenance status across all flows, or the `describe-flow` command for detailed information about a specific flow.

The response includes maintenance details in the Maintenance object:

```
{
  "Flows": [
    {
      "AvailabilityZone": "us-west-2d",
      "Description": "Example flow description",
      "FlowArn": "arn:aws:mediacnect:us-east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",
      "Name": "BasketballGame",
      "SourceType": "OWNED",
      "Status": "STANDBY",
      "Maintenance": {
        "MaintenanceDay": "Monday",
        "MaintenanceStartHour": "08:00"
      }
    },
    {
      "AvailabilityZone": "us-west-2b",
      "Description": "Example flow description",
      "FlowArn": "arn:aws:mediacnect:us-east-1:111122223333:flow:2-3aBC45dEF67hiJ8k-2AbC34DE5fGa6:AwardsShow",
```

```
{
  "Name": "AwardsShow",
  "SourceType": "OWNED",
  "Status": "ACTIVE",
  "Maintenance": {
    "MaintenanceDay": "Saturday",
    "MaintenanceDeadline": "2025-10-25T22:15:56Z",
    "MaintenanceScheduledDate": "2025-10-18",
    "MaintenanceStartHour": "23:00"
  }
}
```

Setting flow maintenance windows

You can set or change the maintenance window for a flow, regardless of whether the flow is active or stopped. You specify a preferred day and start hour, and MediaConnect performs maintenance within the two-hour window starting at that time.

Important

You cannot change the maintenance window for a flow within 4 hours of the scheduled maintenance start time, or while maintenance is in progress.

To set a maintenance window (console)

1. Open the MediaConnect console at <https://console.aws.amazon.com/mediaconnect/>.
2. In the navigation pane, choose **Flows**.
3. Select the check box next to one or more flows that you want to update.
4. Choose **Flow actions**, and then choose **Update maintenance window**.
5. For **Start day**, choose the preferred day of the week.
6. For **Start hour**, choose the preferred start time (UTC).
7. (Optional) If maintenance is required for the flow, the **Maintenance window date** field is available. Select a specific date for the next maintenance event. The selected date must be before the required-by deadline.
8. Choose **Update**.

To set a flow maintenance window (AWS CLI)

Use the `update-flow` command with the `--maintenance` parameter to set the preferred maintenance day and start hour.

The following example sets the maintenance window for a flow to Tuesday at 10:00 UTC:

```
aws mediaconnect update-flow \  
  --flow-arn arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame \  
  --maintenance MaintenanceDay='Tuesday',MaintenanceStartHour='10:00'
```

The following example shows the return value:

```
{  
  "Flow": {  
    "FlowArn": "arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",  
    "Name": "BasketballGame",  
    ...  
    "Status": "STANDBY",  
    "Maintenance": {  
      "MaintenanceDay": "Tuesday",  
      "MaintenanceStartHour": "10:00"  
    }  
  }  
}
```

Setting a specific maintenance date

If maintenance is required for a flow, you can specify a particular date for maintenance to occur by including the `MaintenanceScheduledDate` parameter. The selected date must be before the required-by deadline.

Note

If you change the preferred day or start hour and a maintenance date is already scheduled, you must also update the scheduled date to match your new preferences.

The following example sets the maintenance window to Friday at 01:00 UTC and schedules maintenance for June 5, 2026:

```
aws mediaconnect update-flow \  
  --flow-arn arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame \  
  --maintenance  
  MaintenanceDay='Friday',MaintenanceStartHour='01:00',MaintenanceScheduledDate='2026-06-05'
```

The following example shows the return value:

```
{  
  "Flow": {  
    "FlowArn": "arn:aws:mediaconnect:us-  
east-1:111122223333:flow:1-23aBC45dEF67hiJ8-12AbC34DE5fG:BasketballGame",  
    "Name": "BasketballGame",  
    ...  
    "Status": "ACTIVE",  
    "Maintenance": {  
      "MaintenanceDay": "Friday",  
      "MaintenanceDeadline": "2026-06-07T00:00:00Z",  
      "MaintenanceScheduledDate": "2026-06-05",  
      "MaintenanceStartHour": "01:00"  
    }  
  }  
}
```

Manually restarting resources for maintenance

You can manually restart a router I/O or a flow at any time to apply pending maintenance updates immediately, rather than waiting for the next scheduled maintenance window. This is useful when you want to control exactly when the maintenance occurs.

Router I/O behavior

Manually restarting a router I/O applies any pending updates and resets the maintenance countdown. During the restart, the I/O enters the **Migrating** state, which causes an interruption to the stream. After the restart completes, the I/O returns to the Active state. For the full restart procedure, see [Restarting a router I/O in MediaConnect](#).

Flow behavior

Manually restarting a flow applies any pending updates. The flow's maintenance status changes to **Canceled** because you performed the restart outside the scheduled window. For detailed procedures on stopping and starting flows, see [Managing flows in MediaConnect](#).

Quotas in AWS Elemental MediaConnect

The following table describes quotas, formerly referred to as *limits*, in AWS Elemental MediaConnect. For information about quotas that can be changed, see [AWS Service Quotas](#).

Resource	Default quota	Comments
Bridges	40 per gateway	The maximum number of bridges that a gateway can have. You cannot increase this quota.
Entitlements	50 per flow	The maximum number of entitlements that you can grant on a flow. You cannot increase this quota.
Flows	20 per AWS Region	The maximum number of flows that you can create in each AWS Region. You can request a quota increase.
Outputs	50 per transport stream flow 10 per CDI flow	The maximum number of outputs that a flow can have. You cannot increase this quota.
Sources	2 per transport stream flow 1 per CDI flow	The maximum number of sources that a flow can have. You cannot increase this quota.

Resource	Default quota	Comments
RouterInputs	20 per AWS Region	The maximum number of router inputs that you can create in each AWS Region. You can request a quota increase.
RouterNetworkInterfaces	10 per AWS Region	The maximum number of router network interfaces that you can create in each AWS Region. You can request a quota increase.
RouterOutputs	20 per AWS Region	The maximum number of router outputs that you can create in each AWS Region. You can request a quota increase.
VpcInterfaces	2 ENA interfaces and 1 EFA interface per flow	The maximum number of VPC interfaces that a flow can have. You cannot increase this quota.

Note

To optimize performance, we recommend that you set up your workflow for an aggregate output bandwidth of 400 Mb/s or less. For more information, see [Best practices](#).

Feature-specific output limitations

The following features have additional output limitations:

Feature	Output limitation
Content quality analysis	Maximum of 10 outputs per flow. If exceeded, content quality analysis is automatically disabled.
Thumbnails	Maximum of 10 outputs per flow. If exceeded, thumbnail generation is automatically disabled.

Limits for API requests

The following table describes the limits for API request frequency in MediaConnect. You cannot increase these limits. If you exceed these limits, you receive an HTTP 429 (too many requests) error.

API method	Limit	Comments
Frequency of API requests - steady state	30 requests per second for each account in a Region for the following APIs: - DescribeFlow - DescribeFlowSourceMetadata - DescribeFlowSourceThumbnail - GetRouterInput - GetRouterInputSourceMetadata - GetRouterInputThumbnail - GetRouterOutput	You cannot increase this limit.

API method	Limit	Comments
	TakeRouterInput 5 requests per second for each account in a Region for all other APIs.	
Frequency of API requests - burst mode	For all APIs: 30 requests per second for each account in a Region.	You cannot increase this limit. In burst mode, you can temporarily exceed the steady state limit. If API requests exceed the burst mode limit, your requests are throttled and you receive an HTTP 429 error. The limit refills at a rate of 5 requests per second.

Note

If your application exceeds these limits, implement exponential backoff for retries. For more information, see [Error Retries and Exponential Backoff in AWS](#) in the *Amazon Web Services General Reference*.

Reference: Supported media standards

Important

MediaConnect complies with and implements many media industry standards from different organizations. This reference is not intended to be a comprehensive list, but contains highlighted standards from specific organizations.

Video Services Forum: technical recommendations

AWS Elemental MediaConnect supports *technical recommendations (TR)* from the *Video Services Forum (VSF)* for some features. This reference guide can be used to identify which TRs are supported by MediaConnect. For more information about technical recommendations, visit the VSF website: [VSF technical recommendations](#)

Supported VSF technical recommendations

Technical recommendation	Description
TR-06-01: Reliable Internet Stream Transport (RIST) [Simple Profile]	This technical recommendation is for RIST <i>Simple Profile</i> support only. MediaConnect does not support Main, Enhanced, or Scalable Profiles when using RIST.
TR-07: Transport of JPEG XS Video in MPEG-2 Transport Stream (TS) over IP  Important TR-07 is automatically invoked when you use a supported protocol and the maximum bitrate is greater than 200 Mbps.	MediaConnect supports JPEG XS transport in MPEG-2 TS over IP with the following requirements and limitations: - As a source: - Only a redundant RTP or RTP-FEC protocol is supported. - The maximum source bitrate is 500 Mbps. - TR-07 sources cannot be entitled. - As an output: - The output protocol can be RTP or RTP-FEC.

Technical recommendation	Description
	Up to four total outputs can be used, but aggregate bandwidth must not exceed 1250 Mbps.

Technical recommendation	Description
TR-08: Transport of JPEG XS Video in ST 2110-22  Note For JPEG XS passthrough flows where the video frames are not encoded by MediaConnect, the video frames are not decoded. As a result, no validation of TR-08 compliance is performed.	MediaConnect supports JPEG XS transport over SMPTE ST 2110-22 with the following requirements and limitations: • A High profile is required. Using the Main profile will not cause errors, but will be ignored by MediaConnect. • An interlace mode of 01 (top-field first) is required for interlaced signals. • A sublevel of either 3 bits-per-pixel or 4 bits-per-pixel is required. The sublevel depends on the level of compression and pixel bit depth you are using. • Video Description Boxes placed in the encoded video frames will reflect compliant values for profile, interlace mode, and sublevel. • Networked Media Open Specification (NMOS) registration is not supported. • Real-time Transport Protocol (RTP) sequential packet transmission mode only. • Codestream packetization mode only. Slice mode is not supported. Supported color space, bit depth, and chroma sampling configurations: • YCbCr 10-bit 4:2:2 • RGB 10-bit 4:4:4 • RGB 12-bit 4:4:4

SMPTE-2022

MediaConnect supports many SMPTE (Society of Motion Picture and Television Engineers) standards. The following table is specific to SMPTE-2022 and includes a selection of standards. It is not a comprehensive list of all supported SMPTE standards.

Supported SMPTE-2022 standards

Standard	Description
SMPTE-2022-7: Seamless Protection Switching of RTP	• Sources: MediaConnect supports RTP sources that comply with this standard. For more information about source failover, see Source failover • Outputs: RTP and RTP-FEC outputs are compliant with the SMPTE 2022-7 standard. If your downstream receiver supports 2022-7 source merging, RTP and RTP-FEC outputs will be compatible.

Document history for user guide

The following table describes the documentation for this release of AWS Elemental MediaConnect. For notification about updates to this documentation, you can subscribe to an RSS feed.

Change	Description	Date
High-bitrate router tiers	Router inputs and outputs now support 250 Mbps and 500 Mbps high-bitrate tiers for TR-07 (JPEG XS) workflows.	October 9, 2026
AWS Elemental Inference support	With workflow monitor, you can now discover AWS Elemental Inference (Elemental Inference) feeds and add them to signal maps. You can also create Amazon CloudWatch alarm templates that monitor Elemental Inference feed metrics.	October 8, 2026
Source metadata change EventBridge event	You can now subscribe to an EventBridge event that is published when a flow's source metadata changes.	October 6, 2026
Router input source metadata change EventBridge event	You can now subscribe to an EventBridge event that is published when a router input's source metadata changes.	October 6, 2026
RTMP Push protocol for router outputs	Router outputs can now send content using the RTMP Push	September 25, 2026

protocol, including RTMPS (RTMP over TLS).

[NDI® audio reference level](#)

You can now declare the audio reference level of the NDI® device or application at the other end of an NDI source or NDI output.

September 11, 2026

[Added a getting started tutorial for the router](#)

Added a new tutorial for creating router network interfaces, inputs, outputs, and routes.

September 11, 2026

[Router input and output EventBridge events](#)

Added new EventBridge events for router inputs and router outputs, including state, route state, health, failover, and message events.

September 8, 2026

[Recovery latency mode](#)

You can now choose a recovery latency mode for the router fabric on each router output.

August 10, 2026

[Router input content quality EventBridge event](#)

You can now subscribe to EventBridge events for content quality changes on router inputs.

June 29, 2026

[Content quality analysis for router inputs](#)

You can now use MediaConnect content quality analysis to monitor your router inputs more effectively.

June 29, 2026

[Limits for API requests](#)

Updated the high-frequency API list to include router-related APIs

May 1, 2026

Added router resources to supported tagging list	Added router inputs, router outputs, and router network interfaces to the list of resources that support tagging.	May 1, 2026
NDI® output timecode source	You can now control how MediaConnect generates timecodes for NDI output frames. Choose between preserving embedded timecodes from the source transport stream or using the UTC system time.	April 22, 2026
NDI® sources	You can now receive video and audio from NDI® senders in your network and convert this content into transport streams for broader distribution.	January 26, 2026
Updated AWS managed policy	AWS Elemental MediaConnect has updated the AWSMediaConnectServicePolicy .	November 19, 2025
MediaConnect router	A new feature has been released called MediaConnect router. MediaConnect router enables you to manage video and audio routing both within the AWS Cloud and over the public internet.	November 17, 2025

Unified maintenance chapter	Expanded the maintenance chapter to cover both flows and router I/Os in a single location.	June 25, 2025
Source peer IP address	You can now view the current and historical peer IP addresses for your flow sources.	April 21, 2025
Output peer IP address	You can now view the current and historical peer IP addresses for your flow outputs.	April 21, 2025
NDI® outputs	You can now use NDI® outputs to send content from your MediaConnect flow to your NDI environment.	March 24, 2025
AWS managed policy - New policy	The AWSElementalMediaConnectReadOnlyAccess policy has been created.	February 12, 2025
AWS managed policy - New policy	The AWSElementalMediaConnectFullAccess policy has been created.	February 12, 2025
Content quality EventBridge events	A new content quality monitoring EventBridge event has been added to MediaConnect.	January 27, 2025
Content quality analysis	You can now use MediaConnect content quality analysis to monitor your source streams more effectively.	January 3, 2025

AWS Elemental MediaConnect Gateway	MediaConnect Gateway now supports Source Specific Multicast (SSM) for ingress bridges. This enables you to specify a source IP address in addition to the multicast IP when creating or updating an ingress bridge source.	December 13, 2024
Output disabling	You can now disable a flow's outputs. A disabled output will stop streaming content and will not incur data transfer costs.	July 12, 2024
Source stream monitoring: Additional fields	Additional information about MediaConnect flow source streams can be viewed using source metadata monitoring in the MediaConnect console and API. Source metadata monitoring displays media information about the transport stream and its programs.	June 18, 2024
Workflow monitor	Analyze AWS media services and create signal maps, visualizations of the media workflow, between those services. Use the signal maps to generate monitoring alarms and notifications using CloudWatch, EventBridge, and CloudFormation.	April 11, 2024

[Updated MediaConnect Gateway operating system recommendation](#)

The recommended OS for MediaConnect Gateway has been updated from RHEL 8 to Ubuntu 20.04.

March 11, 2024

[Source stream monitoring: Console](#)

Detailed information about MediaConnect flow source streams can be viewed using source metadata monitoring in the MediaConnect console. Source metadata monitoring displays media information about the transport stream and its programs.

March 8, 2024

[Source stream monitoring: API](#)

Detailed information about MediaConnect flow source streams can be viewed using the source metadata monitoring API. Source metadata monitoring displays media information about the transport stream and its programs.

December 22, 2023

[VSF TR-07 support](#)

The supported media standards reference section has been updated to reflect MediaConnect's implementation of the Video Services Forum's TR-07 (Transport of JPEG XS Video in MPEG-2 Transport Stream over IP).

December 8, 2023

[Limits for API requests](#)

Added limits for API requests per second

November 2, 2023

AWS Elemental Link UHD devices with MediaConnect	You can now use AWS Elemental Link UHD devices and the Zixi push protocol as a source for MediaConnect flows.	September 11, 2023
MediaConnect high resolution metrics	MediaConnect metrics can now be viewed in intervals as short as one second.	June 22, 2023
Supported media standards reference	This guide has been updated to include a reference list of media industry standards that are supported by MediaConnect.	June 9, 2023
SRT failover	You can now enable source failover and add a second source to flows with SRT (listener or caller) sources.	May 1, 2023
Failover support table	A new table has been added that defines which source protocols can support failover.	May 1, 2023
MediaConnect Gateway metrics	The user guide has been updated to include new CloudWatch metrics for the MediaConnect Gateway feature.	April 13, 2023
AWS Elemental MediaConnect Gateway	A new feature has been released called MediaConnect Gateway. MediaConnect Gateway in an on-premises implementation of MediaConnect.	April 13, 2023

AWS service-linked role - New role	The AWSServiceRoleForMediaConnect role has been created.	April 13, 2023
AWS managed policy - New policy	The MediaConnectGatewayInstanceRolePolicy has been created.	April 13, 2023
AWS managed policy - New policy	The AWSMediaConnectServicePolicy has been created.	April 13, 2023
Updated the IAM guidance for MediaConnect	Updated guide to align with the IAM best practices . For more information, see Security best practices in IAM .	February 14, 2023
Health EventBridge events	New flow, source, and output health monitoring EventBridge events have been added to MediaConnect.	February 8, 2023
Color support for CDI protocols	A new table has been added that defines color space, bit depth, and chroma sampling support for CDI protocols.	November 4, 2022
MediaConnect Alerts: stream errors	The user guide has been updated to include information about stream error Alerts.	October 27, 2022
SRT caller sources and outputs	You can now use the SRT caller protocol for sources and outputs.	September 19, 2022
Source and output protocol table	A new table has been added that defines which protocols can be used for sources, outputs, or both.	August 5, 2022

Maintenance EventBridge event	The user guide has been updated to include a new EventBridge event for MediaConnect maintenance.	August 1, 2022
Maintenance CloudWatch metrics	The user guide has been updated to include new CloudWatch metrics for MediaConnect maintenance.	August 1, 2022
SRT password encryption	Documentation for SRT password encryption has been added to the guide.	May 31, 2022
Source failover	When you enable source failover, you can now specify one of two sources as the primary source. You can choose between two failover modes to prevent any disruption to the video stream.	June 11, 2021
CDI workflows	MediaConnect now supports JPEG XS for AWS Cloud Digital Interface (AWS CDI) uncompressed workflows.	May 17, 2021
Listener address	For flows that use listener protocols, you can now easily locate an output's outbound IP address for a private internet.	April 14, 2021
SRT-listener sources and outputs	You can now use the SRT-listener protocol for sources and outputs.	March 16, 2021

Reservations	You can now purchase reservations, which provide a discounted hourly rate in exchange for a commitment to use a specific amount of outbound bandwidth each month over the course of a specified duration.	September 30, 2020
Disabling entitlements	You can now disable an entitlement to temporarily stop streaming content to the subscriber's flow. When you're ready to reinstate access, you can enable the entitlement.	July 24, 2020
Source health metrics	In the MediaConnect console, you can view Amazon CloudWatch metrics that show the health of the source over a period of time.	May 11, 2020
VPC outputs	You can now add an output to send content from your AWS Elemental MediaConnect flow to your VPC without going over the public internet.	April 7, 2020
VPC sources	You can now connect your VPC to your AWS Elemental MediaConnect flow and send content to your flow without going over the public internet.	March 31, 2020

Source failover	You can now enable source failover and add a second (redundant) source to your flow.	March 13, 2020
Service quotas (outputs)	You can now add up to 50 outputs to each transport stream flow.	February 7, 2020
Sharing the entitlement data transfer fee with the subscriber	When you grant an entitlement, you can now specify the percentage of the entitlement data transfer fee that you want the subscriber to be responsible for.	September 16, 2019
RIST sources and outputs	You can now use the RIST protocol for sources and outputs.	September 11, 2019
Zixi pull outputs	You can now add outputs that use the Zixi pull protocol.	July 26, 2019
SPEKE support	You can now encrypt the contents of your entitlements using (SPEKE).	June 25, 2019
Service quotas (flows)	You can now request an increase to the quota of 20 flows per AWS Region.	March 14, 2019
New service and guide	This is the initial release of the media ingest and transport service, AWS Elemental MediaConnect, and the <i>AWS Elemental MediaConnect User Guide</i> .	November 27, 2018

Note

- The AWS Media Services are not designed or intended for use with applications or in situations requiring fail-safe performance, such as life safety operations, navigation or communication systems, air traffic control, or life support machines in which the unavailability, interruption or failure of the services could lead to death, personal injury, property damage or environmental damage.